

FAULT CODES

Normal Operation

0	Standby
c	Y1 on (Legacy Mode Only)
C	Y2 or Any Communicating Cooling Call
dF	Defrost active
F	Continuous fan.
H (Flashing)	Furnace Calibration
H	Furnace Heat
h	Gas heat - No "V" Signal (Legacy Mode Only)
h (Flashing)	Calibration - No "V" Signal (Legacy Mode Only)
cd or Cd	dehumidification active (Legacy Mode Only)

Shared Data Faults

d1	No Shared Data
d3	Airflow Mismatch
d4	Memor Card Invalid
d5	Card-Hardware Conflict
d6	Blower Horsepower Conflict
d7	Blower Manufacturer Conflict
d8	Old Shared Data

Flame Sense Signal

10	One Hour Lockout
11	Failed Ignition
12	Low Flame Sense
13	Flame Lost
14	Unexpected Flame

Notes:

1. Fault code history displayed at power up - most recent fault displayed first.
2. To clear fault code history, toggle dipswitch SW3-6 on/off three times. Two horizontal bars will be displayed for 4 sec.

Limit Control Faults

22	Main Limit Open
23	Heat Assist Limit (HALC) Open
33	Manual Reset Limit (MRLC) Open

Pressure Switch Faults

44	Low Pressure Switch Closed -Inducer OFF
45	Low Pressure Switch Open - Inducer on High
46	Low Pressure Switch Open - Inducer on Low
55	High Pressure Switch Closed - Inducer OFF
57	High Pressure Switch Open

Blower Faults

60	Blower Fault - Blower Remains Running
61	Blower Fault - Blower Not Running
66	Blower Overspeed Fault
68	No Communications with Blower Motor

Gas Valve Faults

77	No Communications with Gas Valve
78	Gas Valve Servo Fault

Misc. Faults

26	Line and Neutral Reversed
82	Supply Air Temp. Sensor Fault
93	Internal Fault