
INSTALLATION INSTRUCTIONS

FOR PACKAGE GAS ELECTRIC UNITS

RGED SERIES 7.5, 8.5, 10.0 & 12.5 TON [26.4, 29.9, 35.2 & 44.0 KW]
60 HZ MODELS

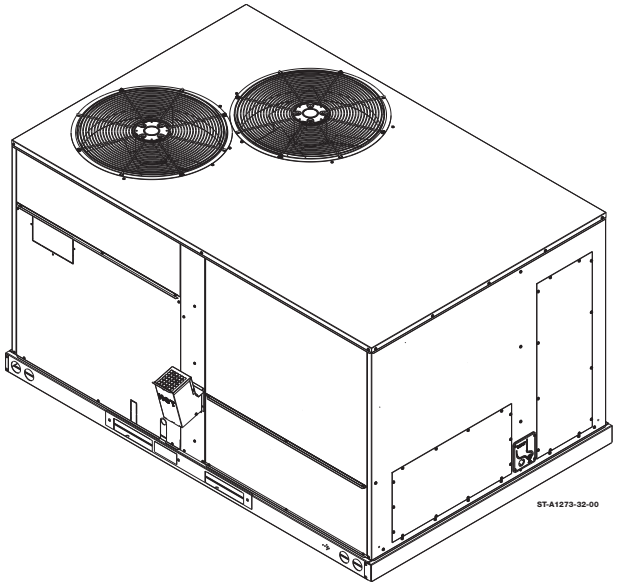

RECOGNIZE THIS SYMBOL AS AN INDICATION OF IMPORTANT SAFETY INFORMATION!

⚠WARNING

IF THE INFORMATION IN THESE INSTRUCTIONS IS NOT FOLLOWED EXACTLY, A FIRE OR EXPLOSION MAY RESULT, CAUSING PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

⚠WARNING

THESE INSTRUCTIONS ARE INTENDED AS AN AID TO QUALIFIED SERVICE PERSONNEL FOR PROPER INSTALLATION, ADJUSTMENT AND OPERATION OF THIS UNIT. READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING INSTALLATION OR OPERATION. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN IMPROPER INSTALLATION, ADJUSTMENT, SERVICE OR MAINTENANCE, POSSIBLY RESULTING IN FIRE, ELECTRICAL SHOCK, CARBON MONOXIDE POISONING, EXPLOSION, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

⚠WARNING

PROPOSITION 65 WARNING: THIS PRODUCT CONTAINS CHEMICALS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM.

⚠WARNING

— Do not store or use gasoline or other flammable vapors and liquids, or other combustible materials in the vicinity of this or any other appliance.

— WHAT TO DO IF YOU SMELL GAS
- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- Do not return to your home until authorized by the gas supplier or fire department.

— DO NOT RELY ON SMELL ALONE TO DETECT LEAKS. DUE TO VARIOUS FACTORS, YOU MAY NOT BE ABLE TO SMELL FUEL GASES.
- U.L. recognized fuel gas and CO detectors are recommended in all applications, and their installation should be in accordance with the manufacturer's recommendations and/or local laws, rules, regulations, or customs.

— Improper installation, adjustment, alteration, service or maintenance can cause injury, property damage or death. Refer to this manual. Installation and service must be performed by a qualified installer, service agency or the gas supplier. In the commonwealth of Massachusetts, installation must be performed by a licensed plumber or gas fitter for appropriate fuel.

BA001-GB

DO NOT DESTROY THIS MANUAL. PLEASE READ CAREFULLY AND KEEP IN A SAFE PLACE FOR FUTURE REFERENCE BY A SERVICEMAN.

Featuring New Industry Standard R-410A

R-410A

AHRI CERTIFIED® www.ahridirectory.org
Unitary Large AC
AHRI Standard 340/360
Certification applies only when the complete system is listed with AHRI.

c UL us LISTED

Accredited by the RvA
ANAB ACCREDITED
ISO 9001:2015
Certificate Number: 30164

92-106166-01-03
SUPERSEDES 92-106166-01-02

⚠ NOTICE

BREAK-IN PERIOD

PRIOR TO AGENCY TESTING, RUN THE COMPRESSOR FOR 16 HOURS AT 115ºF OUTDOOR AMBIENT TEMPERATURE AND 80º DRY BULB/75º WET BULB INDOOR AMBIENT TEMPERATURE.

⚠ NOTICE

EFFICIENCY TESTING NOTICE

FOR PURPOSES OF VERIFYING OR TESTING EFFICIENCY RATINGS, THE TEST PROCEDURE IN TITLE 10 PART 431 APPENDIX A TO SUBPART F (UNIFORM TEST METHOD FOR MEASURING THE ENERGY CONSUMPTION OF SMALL, LARGE, AND VERY LARGE COMMERCIAL PACKAGE AIR CONDITIONING AND HEATING EQUIPMENT), AND THE CLARIFYING PROVISIONS PROVIDED IN THE AHRI OPERATIONS FOR UNITARY LARGE EQUIPMENT 340/360, 365 THAT WERE APPLICABLE AT THE DATE OF MANUFACTURE SHOULD BE USED FOR TEST SET UP AND PERFORMANCE.

INTRODUCTION

⚠ WARNING

THE MANUFACTURER'S WARRANTY DOES NOT COVER ANY DAMAGE OR DEFECT TO THE AIR CONDITIONER CAUSED BY THE ATTACHMENT OR USE OF ANY COMPONENTS, ACCESSORIES OR DEVICES (OTHER THAN THOSE AUTHORIZED BY THE MANUFACTURER) INTO, ONTO OR IN CONJUNCTION WITH THE AIR CONDITIONER. YOU SHOULD BE AWARE THAT THE USE OF UNAUTHORIZED COMPONENTS, ACCESSORIES OR DEVICES MAY ADVERSELY AFFECT THE OPERATION OF THE AIR CONDITIONER AND MAY ALSO ENDANGER LIFE AND PROPERTY. THE MANUFACTURER DISCLAIMS ANY RESPONSIBILITY FOR SUCH LOSS OR INJURY RESULTING FROM THE USE OF SUCH UNAUTHORIZED COMPONENTS, ACCESSORIES OR DEVICES.

This booklet contains the installation and operating instructions for your combination gas heating/electric cooling unit. There are some precautions that should be taken to derive maximum satisfaction from it. Improper installation can result in unsatisfactory operation or dangerous conditions.

Read this booklet and any instructions packaged with separate equipment required to make up the system prior to installation. Give this booklet to the owner and explain its provisions. The owner should retain this booklet for future reference.

CHECKING PRODUCT RECEIVED

Upon receiving the unit, inspect it for any damage from shipment. Claims for damage, either shipping or concealed, should be filed immediately with the shipping company. **IMPORTANT:** Check the unit model number, heating size, electrical characteristics, and accessories to determine if they are correct.

TABLE OF CONTENTS

		Page No.
	INTRODUCTION	2
	Checking Product Received	2
I.	**SPECIFICATIONS**	2
	General	2
	Major Components	2
	R-410A Refrigerant	2
	Safety Information	3
	Unit Dimensions	4-6
	General Data	7-9
	Heating Performance	10
	Electrical Data	11-21
II.	**INSTALLATION**	22
	General	22
	Location Considerations	22
	Outside Installation	22
	Exhaust & Combustion Air Inlet Hoods	23
	Cover Panel Installation	23
	Filter Replacement	23
	Rooftop Installation	24
	Ducting	24
	Return Air	25
III.	**GAS SUPPLY & PIPING**	26
	Gas Connection	26
	LP Conversion	27
	Adjusting or Checking Furnace Input	27
	Condensate Drain	28
IV.	**WIRING**	29
	Power Supply	29
	Hook-up	30
	Internal Wiring	30
	Thermostat	30
V.	**FURNACE CONTROLS**	31
	Operating Sequence	31
	Operating Instructions	31
	Burners	32
	Manual Reset	32
	Pressure Switch	32
	Limit Control	32
VI.	**COOLING SECTION**	32
	Cooling Mode	32
	Continuous Fan Mode	32
	Blower VFD	32
VII.	**OPERATION INFORMATION**	33
	Advise Customer	33
	Furnace Maintenance	33
	Lubrication	33
	Cooling Maintenance	33
	Replacement Parts	34
	Troubleshooting	34
	Wiring Diagrams	34
	Charging	34
VII.	**AIRFLOW PERFORMANCE**	35-42
VIII.	**TROUBLESHOOTING**	43-45
	Alarm Codes	46
IX.	**CHARGE CHARTS**	47-53
X.	**WIRING DIAGRAMS**	54-73

I. SPECIFICATIONS

A. GENERAL

The Combination Gas Heating/Electric Cooling Rooftop is available in 150,000, 205,000 and 225,000 BTUH heating input. Cooling capacity is 7.5, 8.5, 10, 12.5 nominal tons. Units are convertible from bottom supply and return to side supply and return by relocation of supply and return air cover panels. See cover installation detail.

The units are weatherized for mounting outside of the building.

⚠ WARNING

UNITS ARE NOT DESIGN CERTIFIED TO BE INSTALLED INSIDE THE STRUCTURE. DOING SO CAN CAUSE INADEQUATE UNIT PERFORMANCE AS WELL AS PROPERTY DAMAGE AND CARBON MONOXIDE POISONING RESULTING IN PERSONAL INJURY OR DEATH.

The information on the rating plate is in compliance with the FTC and DOE rating for single phase units. The following information is for three phase units which **are not** covered under the DOE certification program.

1. The energy consumption of the ignition system used with this unit is 175 watts.
2. The efficiency rating of this unit is a product thermal efficiency rating determined under continuous operating conditions independent of any installed system.

B. MAJOR COMPONENTS

The unit includes a hermetically-sealed refrigerating system consisting of a scroll compressor, condenser coil, evaporator coil with TXV, a circulation air blower, a condenser fan, a heat exchanger assembly, gas burner and control assembly, combustion air motor and fan, and all necessary internal electrical wiring. The cooling system of these units is factory-evacuated, charged and performance tested. Refrigerant amount and type are indicated on rating plate.

C. R-410A REFRIGERANT

All units are factory charged with R-410A refrigerant.

1. Specifications of R-410A:

Application: <u>R-410A is not a drop-in replacement for R-22</u>; equipment designs must accommodate its higher pressures. It cannot be retrofitted into R-22 units.

<u>Pressure: The pressure of R-410A is approximately 60% (1.6 times) greater than R-22.</u> Recovery and recycle equipment, pumps, hoses, and the like need to have design pressure ratings appropriate for R-410A. *Manifold sets need to range up*

to 800 psig high-side and 250 psig low-side with a 550 psig low-side retard. Hoses need to have a service pressure rating of 800 psig. Recovery cylinders need to have a 400 psig service pressure rating. DOT 4BA400 or DOT BW400.

Combustibility: At pressures above 1 atmosphere, mixture of R-410A and air can become combustible. **R-410A and air should never be mixed in tanks or supply lines, or be allowed to accumulate in storage tanks. Leak checking should never be done with a mixture of R-410A and air.** Leak checking can be performed safely with nitrogen or a mixture of R-410A and nitrogen.

2. Quick Reference Guide For R-410A

- R-410A refrigerant operates at approximately 60% higher pressure (1.6 times) than R-22. Ensure that servicing equipment is designed to operate with R-410A.
- R-410A refrigerant cylinders are pink.
- R-410A, as with other HFC's is only compatible with POE oils.
- Vacuum pumps will not remove moisture from POE oil.
- R-410A systems are to be charged with liquid refrigerants. Prior to March 1999, R-410A refrigerant cylinders had a dip tube. These cylinders should be kept upright for equipment charging. Post March 1999 cylinders do not have a dip tube and should be inverted to ensure liquid charging of the equipment.
- Do not install a suction line filter drier in the liquid line.
- A liquid line filter drier is standard on every unit.
- Desiccant (drying agent) must be compatible for POE oils and R-410A.

3. Evaporator Coil/ TXV

The thermostatic expansion valve is specifically designed to operate with R-410A. **DO NOT use an R-22 TXV. The existing evaporator must be replaced with the factory specified TXV evaporator specifically designed for R-410A.**

4. Tools Required For Installing & Servicing R-410A Models

Manifold Sets:
-Up to 800 PSIG High Side
-Up to 250 PSIG Low Side
-550 PSIG Low Side Retard

Manifold Hoses:
-Service Pressure Rating of 800 PSIG

Recovery Cylinders:
-400 PSIG Pressure Rating
-Dept. of Transportation 4BA400 or BW400

⚠ CAUTION

R-410A SYSTEMS OPERATE AT HIGHER PRESSURE THAN R-22 SYSTEMS. DO NOT USE R-22 SERVICE EQUIPMENT OR COMPONENTS ON R-410A EQUIPMENT.

SAFETY INFORMATION

⚠ WARNING

USE ONLY WITH TYPE OF GAS APPROVED FOR THIS UNIT. REFER TO THE UNIT RATING PLATE.

⚠ WARNING

INSTALL THIS UNIT ONLY IN A LOCATION AND POSITION AS SPECIFIED IN THE LOCATION REQUIREMENTS AND CONSIDERATIONS SECTION OF THESE INSTRUCTIONS. PROVIDE ADEQUATE COMBUSTION AND VENTILATION AIR TO THE UNIT SPACE AS SPECIFIED IN THE VENTING SECTION OF THESE INSTRUCTIONS.

⚠ WARNING

PROVIDE ADEQUATE COMBUSTION AND VENTILATION AIR TO THE UNIT SPACE AS SPECIFIED IN THE COMBUSTION AND VENTILATION AIR SECTION OF THESE INSTRUCTIONS.

⚠ WARNING

COMBUSTION PRODUCTS MUST BE DISCHARGED OUTDOORS. CONNECT THE FACTORY SUPPLIED EXHAUST AND COMBUSTION AIR INLET HOODS ONLY, AS SPECIFIED IN THE EXHAUST AND COMBUSTION AIR INLET HOODS INSTALLATION SECTION OF THESE INSTRUCTIONS.

⚠ WARNING

NEVER TEST FOR GAS LEAKS WITH AN OPEN FLAME. USE A COMMERCIALLY AVAILABLE SOAP SOLUTION MADE SPECIFICALLY FOR THE DETECTION OF LEAKS TO CHECK ALL CONNECTIONS, AS SPECIFIED IN GAS SUPPLY AND PIPING SECTION OF THESE INSTRUCTIONS.

⚠ WARNING

ALWAYS INSTALL UNIT TO OPERATE WITHIN THE UNIT'S INTENDED TEMPERATURE-RISE RANGE WITH A DUCT SYSTEM WHICH HAS AN EXTERNAL STATIC PRESSURE WITHIN THE ALLOWABLE RANGE, AS SPECIFIED IN DUCTING SECTION OF THESE INSTRUCTIONS. SEE ALSO UNIT RATING PLATE.

⚠ WARNING

WHEN A UNIT IS INSTALLED SO THAT SUPPLY DUCTS CARRY AIR CIRCULATED BY THE UNIT TO AREAS OUTSIDE THE SPACE CONTAINING THE UNIT, THE RETURN AIR SHALL ALSO BE HANDLED BY DUCT(S) SEALED TO THE UNIT CASING AND TERMINATING OUTSIDE THE SPACE CONTAINING THE UNIT.

⚠ WARNING

THIS UNIT MAY BE USED TO HEAT THE BUILDING OR STRUCTURE DURING CONSTRUCTION IF THE FOLLOWING INSTALLATION REQUIREMENTS ARE MET. INSTALLATION MUST COMPLY WITH ALL INSTALLATION INSTRUCTIONS INCLUDING:

- **PROPER VENT INSTALLATION;**
- **FURNACE OPERATING UNDER THERMOSTATIC CONTROL;**
- **RETURN AIR DUCT SEALED TO THE FURNACE;**
- **AIR FILTERS IN PLACE;**
- **SET FURNACE INPUT RATE AND TEMPERATURE RISE PER RATING PLATE MARKING;**
- **RETURN AIR TEMPERATURE MAINTAINED BETWEEN 55°F (13°C) AND 80°F (27°C); AND**
- **INSTALLATION OF EXHAUST AND COMBUSTION AIR INLET HOODS COMPLETED;**
- **CLEAN FURNACE, DUCT WORK AND COMPONENTS UPON SUBSTANTIAL COMPLETION OF THE CONSTRUCTION PROCESS, AND VERIFY FURNACE OPERATING CONDITIONS INCLUDING IGNITION INPUT RATE, TEMPERATURE RISE AND VENTING, ACCORDING TO THE INSTRUCTIONS.**

Unit Dimensions

IMPORTANT: THIS UNIT MUST BE MOUNTED LEVEL IN BOTH DIRECTIONS TO ALLOW WATER TO DRAIN FROM THE CONDENSER SECTION AND CONDENSATE PAN.

FIGURE 1
FRONT VIEW

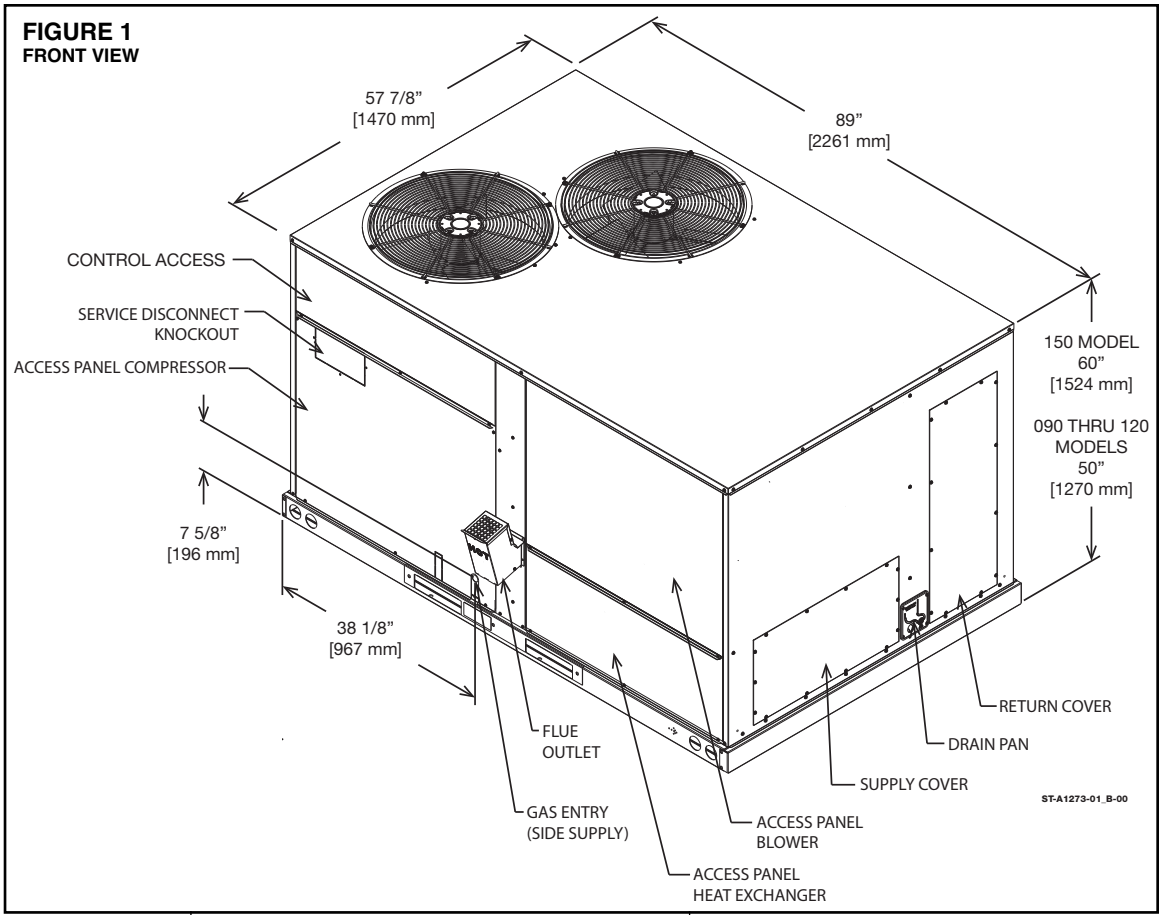


FIGURE 2
REAR VIEW

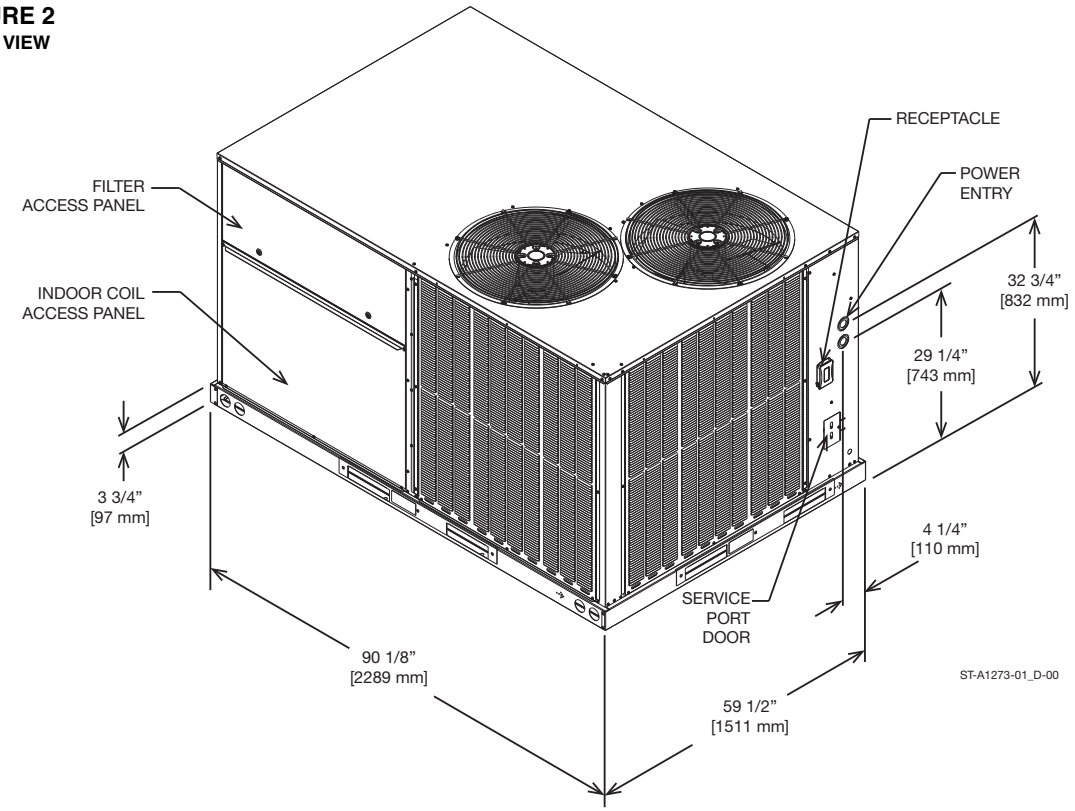


FIGURE 3
SUPPLY AND RETURN DIMENSIONS FOR DOWNFLOW APPLICATIONS

(VIEW FROM BOTTOM LOOKING UP)

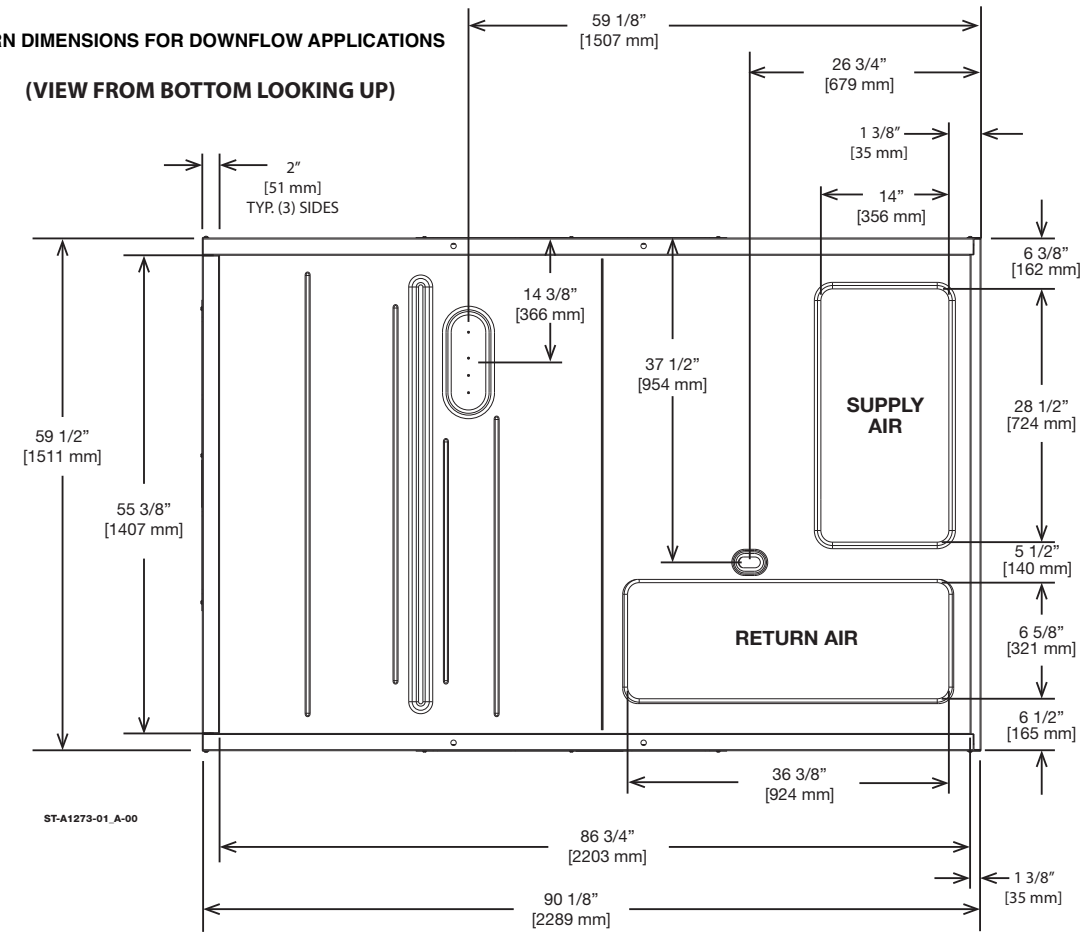


FIGURE 4
SUPPLY AND RETURN DIMENSIONS FOR HORIZONTAL APPLICATIONS


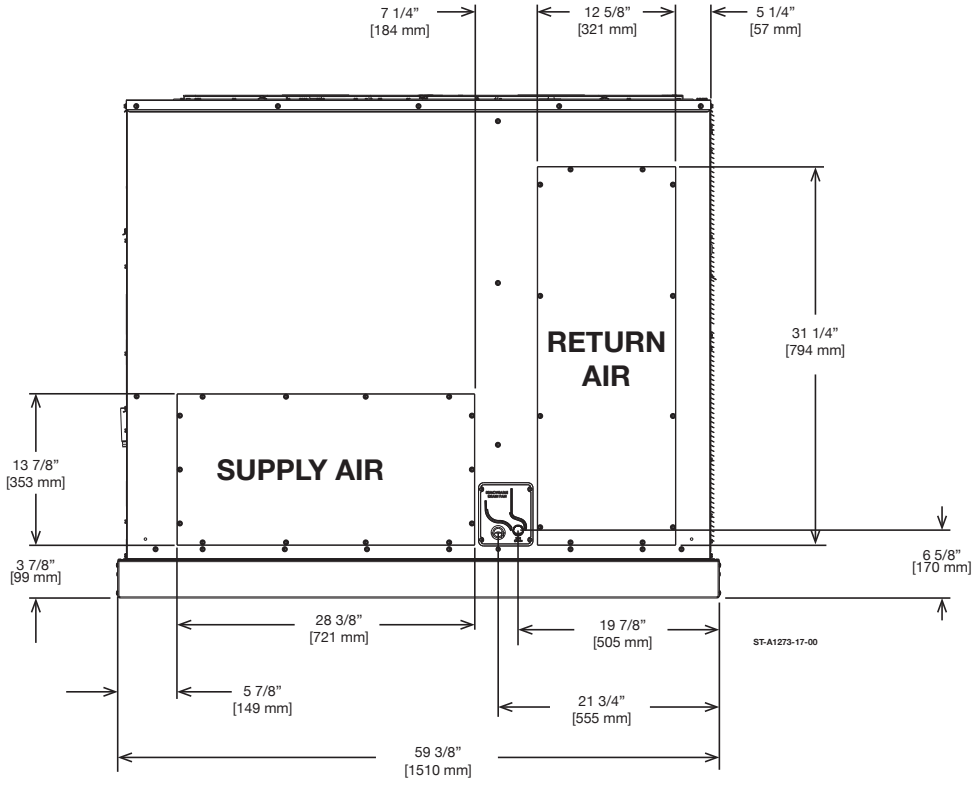


FIGURE 5
ROOFCURB INSTALLATION

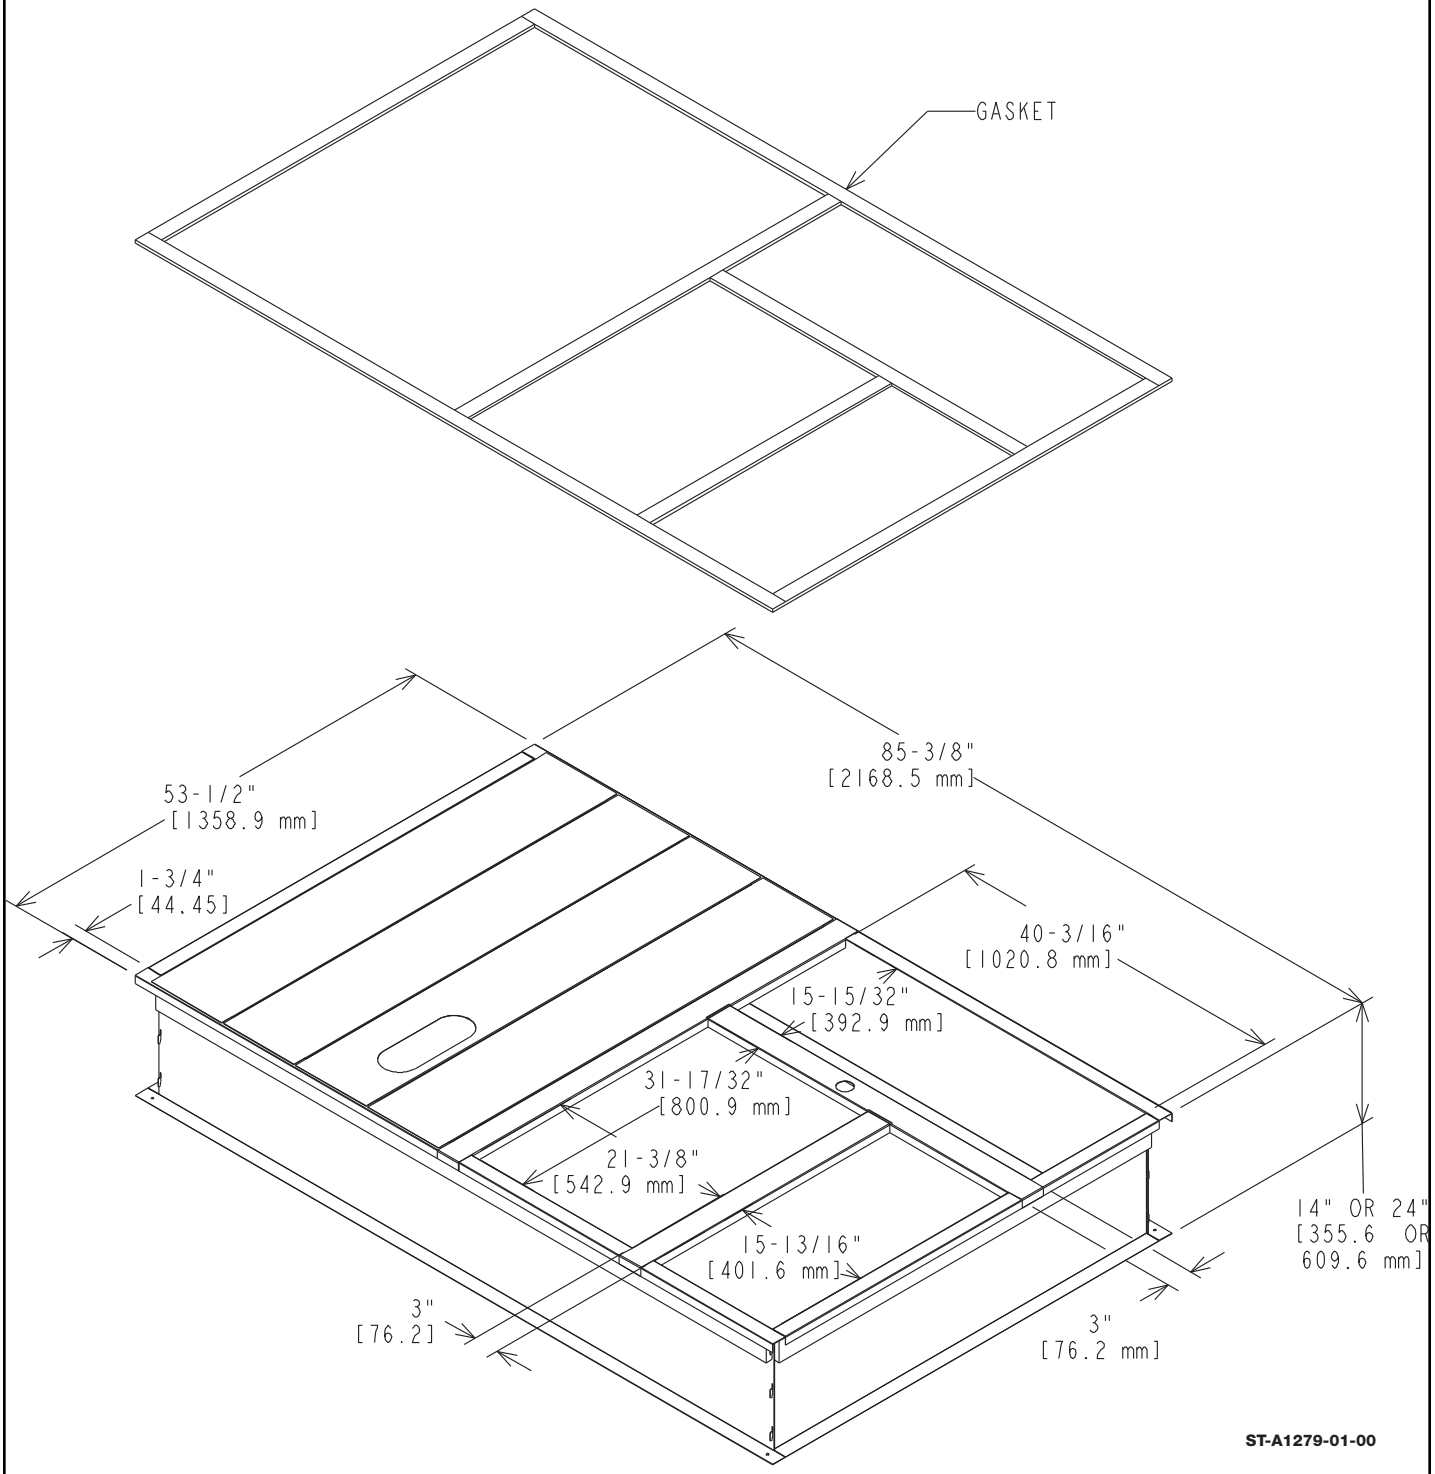

GENERAL DATA - GEDZR MODELS
7.5-12.5 TON [26.4 - 44.0 kW]

Model RGEDZR Series	ZR090A******A	ZR102A******A	ZR120A******A
	ZR series	ZR series	ZR series
Cooling Performance[1]			
Gross Cooling Capacity Btu [kW]	88,000 [25.78]	99,000 [29.01]	118,000 [34.57]
EER/SEER[2]	11/NA	11/NA	11/NA
Nominal CFM/AHRI Rated CFM [L/s]	3000/3175 [1416/1498]	3400/3200 [1604/1510]	4000/3480 [1888/1642]
AHRI Net Cooling Capacity Btu [kW]	85,000 [24.9]	96,000 [28.13]	114,000 [33.4]
Net Sensible Capacity Btu [kW]	62,700 [18.37]	68,300 [20.01]	80,600 [23.62]
Net Latent Capacity Btu [kW]	22,300 [6.53]	27,700 [8.12]	33,400 [9.79]
IEER[3]	12.7	12.7	12.7
Net System Power kW	7.53	8.51	9.86
Compressor			
No./Type	1/Scroll	1/Scroll	1/Scroll
No. Stages	1	1	1
Outdoor Sound Rating (dB)[5]	88	88	88
Outdoor Coil - Fin Type	Louvered	Louvered	Louvered
Tube Type	MicroChannel	MicroChannel	MicroChannel
MicroChannel Depth in. [mm]	0.71 [18]	0.81 [20.6]	1 [25.4]
Face Area sq. ft. [sq. m]	25.4 [2.36]	25.6 [2.38]	25.6 [2.38]
Rows / FPI [FPcm]	1 / 23 [9]	1 / 23 [9]	1 / 23 [9]
Indoor Coil - Fin Type	Louvered	Louvered	Louvered
Tube Type	MicroChannel	MicroChannel	MicroChannel
MicroChannel Depth in. [mm]	1 [25.4]	1.26 [32]	1.26 [32]
Face Area sq. ft. [sq. m]	11 [1.02]	10.9 [1.01]	10.9 [1.01]
Rows / FPI [FPcm]	1 / 20 [8]	1 / 20 [8]	1 / 20 [8]
Refrigerant Control	TX Valves	TX Valves	TX Valves
Drain Connection No./Size in. [mm]	1/0.75 [19.05]	1/0.75 [19.05]	1/0.75 [19.05]
Outdoor Fan - Type	Propeller	Propeller	Propeller
No. Used/Diameter in. [mm]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]
Drive Type/No. Speeds	Direct/1	Direct/1	Direct/1
CFM [L/s]	8000 [3775]	8000 [3775]	8500 [4011]
No. Motors/HP	2 at 1/5 HP	2 at 1/5 HP	2 at 1/3 HP
Motor RPM	820	820	1075
Indoor Fan - Type	FC Centrifugal	FC Centrifugal	FC Centrifugal
No. Used/Diameter in. [mm]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]
Drive Type	Belt (Adjustable)	Belt (Adjustable)	Belt (Adjustable)
No. Speeds	Single	Single	Single
No. Motors	1	1	1
Motor RPM	1725	1725	1725
Motor Frame Size	56	56	56
Filter - Type	Disposable	Disposable	Disposable
Furnished	Yes	Yes	Yes
(NO.) Size Recommended in. [mm x mm x mm]	(4)2x20x20 [51x508x508]	(4)2x20x20 [51x508x508]	(4)2x20x20 [51x508x508]
Refrigerant Charge Oz. [g]	100 [2835]	117 [3317]	136 [3856]
Weights			
Net Weight lbs. [kg]	839 [381]	868 [394]	896 [406]
Ship Weight lbs. [kg]	878 [398]	907 [411]	935 [424]

GENERAL DATA - GEDZS MODELS
7.5-12.5 TON [26.4 - 44.0 kW]

Model RGEDZS Series	ZS090A******A	ZS102A******A	ZS120A******A	ZS150A******A
	ZS series	ZS series	ZS series	ZS series
Cooling Performance[1]				
Gross Cooling Capacity Btu [kW]	88,000 [25.78]	99,000 [29.01]	118,000 [34.57]	148,000 [43.36]
EER/SEER[2]	11/NA	11/NA	11/NA	10.8/NA
Nominal CFM/AHRI Rated CFM [L/s]	3000/3175 [1416/1498]	3400/3225 [1604/1522]	4000/3480 [1888/1642]	5000/3750 [2360/1770]
AHRI Net Cooling Capacity Btu [kW]	85,000 [24.9]	96,000 [28.13]	114,000 [33.4]	142,000 [41.61]
Net Sensible Capacity Btu [kW]	62,700 [18.37]	68,300 [20.01]	79,600 [23.32]	98,600 [28.89]
Net Latent Capacity Btu [kW]	22,300 [6.53]	27,700 [8.12]	34,400 [10.08]	43,400 [12.72]
IEER[3]	12.7	12.7	12.7	12.2
Net System Power kW	7.35	7.35	9.83	13.69
Compressor				
No./Type	1/Scroll	1/Scroll	1/Scroll	2/Tandem Scroll
No. Stages	2	2	2	2
Outdoor Sound Rating (dB)[5]	88	88	88	88
Outdoor Coil - Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	MicroChannel	MicroChannel	MicroChannel	MicroChannel
MicroChannel Depth in. [mm]	0.71 [18]	0.81 [20.6]	1 [25.4]	1 [25.4]
Face Area sq. ft. [sq. m]	25.4 [2.36]	25.6 [2.38]	25.6 [2.38]	31.5 [2.93]
Rows / FPI [FPcm]	1 / 23 [9]	1 / 23 [9]	1 / 23 [9]	1 / 23 [9]
Indoor Coil - Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	MicroChannel	MicroChannel	MicroChannel	MicroChannel
MicroChannel Depth in. [mm]	1 [25.4]	1.26 [32]	1.26 [32]	1 [25.4]
Face Area sq. ft. [sq. m]	11 [1.02]	10.9 [1.01]	10.9 [1.01]	13.8 [1.28]
Rows / FPI [FPcm]	1 / 20 [8]	1 / 20 [8]	1 / 20 [8]	2 / 18 [7]
Refrigerant Control	TX Valves	TX Valves	TX Valves	TX Valves
Drain Connection No./Size in. [mm]	1/0.75 [19.05]	1/0.75 [19.05]	1/0.75 [19.05]	1/0.5 [12.7]
Outdoor Fan - Type	Propeller	Propeller	Propeller	Propeller
No. Used/Diameter in. [mm]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]
Drive Type/No. Speeds	Direct/1	Direct/1	Direct/1	Direct/1
CFM [L/s]	8000 [3775]	8000 [3775]	8500 [4011]	9000 [4247]
No. Motors/HP	2 at 1/5 HP	2 at 1/5 HP	2 at 1/3 HP	2 at 3/4 HP
Motor RPM	820	820	1075	1100
Indoor Fan - Type	FC Centrifugal	FC Centrifugal	FC Centrifugal	FC Centrifugal
No. Used/Diameter in. [mm]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]
Drive Type	Belt (Adjustable)	Belt (Adjustable)	Belt (Adjustable)	Belt (Adjustable)
No. Speeds	Single	Single	Single	Single
No. Motors	1	1	1	1
Motor RPM	1725	1725	1725	1725
Motor Frame Size	56	56	56	56
Filter - Type	Disposable	Disposable	Disposable	Disposable
Furnished	Yes	Yes	Yes	Yes
(NO.) Size Recommended in. [mm x mm x mm]	(4)2x20x20 [51x508x508]	(4)2x20x20 [51x508x508]	(4)2x20x20 [51x508x508]	(4)2x20x25 [51x508x635]
Refrigerant Charge Oz. [g]	100 [2835]	122 [3458]	136 [3856]	186 [5273]
Weights				
Net Weight lbs. [kg]	839 [381]	868 [394]	896 [406]	1094 [496]
Ship Weight lbs. [kg]	878 [398]	907 [411]	935 [424]	1133 [514]

GENERAL DATA - GEDZT MODELS
7.5-12.5 TON [26.4 - 44.0 kW]

Model RGEDZT Series	ZT090A******A	ZT102A******A	ZT120A******A	ZT150A******A
	ZT series	ZT series	ZT series	ZT series
Cooling Performance[1]				
Gross Cooling Capacity Btu [kW]	88,000 [25.78]	99,000 [29.01]	118,000 [34.57]	148,000 [43.36]
EER/SEER[2]	11/NA	11/NA	11/NA	10.8/NA
Nominal CFM/AHRI Rated CFM [L/s]	3000/3175 [1416/1498]	3400/3225 [1604/1522]	4000/3480 [1888/1642]	5000/3750 [2360/1770]
AHRI Net Cooling Capacity Btu [kW]	85,000 [24.9]	96,000 [28.13]	114,000 [33.4]	142,000 [41.61]
Net Sensible Capacity Btu [kW]	62,700 [18.37]	68,300 [20.01]	79,600 [23.32]	98,600 [28.89]
Net Latent Capacity Btu [kW]	22,300 [6.53]	27,700 [8.12]	34,400 [10.08]	43,400 [12.72]
IEER[3]	14.6	14.6	14.6	14
Net System Power kW	7.35	7.35	9.83	13.69
Compressor				
No./Type	1/Scroll	1/Scroll	1/Scroll	2/Tandem Scroll
No. Stages	2	2	2	2
Outdoor Sound Rating (dB)[5]	88	88	88	88
Outdoor Coil - Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	MicroChannel	MicroChannel	MicroChannel	MicroChannel
MicroChannel Depth in. [mm]	0.71 [18]	0.81 [20.6]	1 [25.4]	1 [25.4]
Face Area sq. ft. [sq. m]	25.4 [2.36]	25.6 [2.38]	25.6 [2.38]	31.5 [2.93]
Rows / FPI [FPcm]	1 / 23 [9]	1 / 23 [9]	1 / 23 [9]	1 / 23 [9]
Indoor Coil - Fin Type	Louvered	Louvered	Louvered	Louvered
Tube Type	MicroChannel	MicroChannel	MicroChannel	MicroChannel
MicroChannel Depth in. [mm]	1 [25.4]	1.26 [32]	1.26 [32]	1 [25.4]
Face Area sq. ft. [sq. m]	11 [1.02]	10.9 [1.01]	10.9 [1.01]	13.8 [1.28]
Rows / FPI [FPcm]	1 / 20 [8]	1 / 20 [8]	1 / 20 [8]	2 / 18 [7]
Refrigerant Control	TX Valves	TX Valves	TX Valves	TX Valves
Drain Connection No./Size in. [mm]	1/0.75 [19.05]	1/0.75 [19.05]	1/0.75 [19.05]	1/0.5 [12.7]
Outdoor Fan - Type	Propeller	Propeller	Propeller	Propeller
No. Used/Diameter in. [mm]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]	2/24 [609.6]
Drive Type/No. Speeds	Direct/1	Direct/1	Direct/1	Direct/1
CFM [L/s]	8000 [3775]	8000 [3775]	8500 [4011]	9000 [4247]
No. Motors/HP	2 at 1/5 HP	2 at 1/5 HP	2 at 1/3 HP	2 at 3/4 HP
Motor RPM	820	820	1075	1100
Indoor Fan - Type	FC Centrifugal	FC Centrifugal	FC Centrifugal	FC Centrifugal
No. Used/Diameter in. [mm]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]	1/15x15 [381x381]
Drive Type	Belt (Adjustable)	Belt (Adjustable)	Belt (Adjustable)	Belt (Adjustable)
No. Speeds	Single	Single	Single	Single
No. Motors	1	1	1	1
Motor RPM	1725	1725	1725	1725
Motor Frame Size	56	56	56	184
Filter - Type	Disposable	Disposable	Disposable	Disposable
Furnished	Yes	Yes	Yes	Yes
(NO.) Size Recommended in. [mm x mm x mm]	(4)2x20x20 [51x508x508]	(4)2x20x20 [51x508x508]	(4)2x20x20 [51x508x508]	(4)2x20x25 [51x508x635]
Refrigerant Charge Oz. [g]	100 [2835]	122 [3458]	136 [3856]	186 [5273]
Weights				
Net Weight lbs. [kg]	839 [381]	868 [394]	896 [406]	1094 [496]
Ship Weight lbs. [kg]	878 [398]	907 [411]	935 [424]	1133 [514]

HEATING PERFORMANCE - GED MODELS
7.5-12.5 TON [26.4 - 44.0 kW]

Model RGED**	Heating Input BTU [kW] (1st Stage / 2nd Stage)	Heating Output Btu [kW] (1st Stage / 2nd Stage)	Temperature Rise Range ˚F [˚C] (1st Stage / 2nd Stage)	Steady State Efficiency (%)	No. Burners	No. Stages	Gas Connection Pipe Size in. [mm]
090A15**A**	105,000/150,000 [30.76/43.95]	85,050/121,500 [24.92/35.6]	10-40 [5.6-22.2] / 25-55 [13.9-30.6]	81	6	2	0.75 [19]
090A20**A**	143,500 / 205,000 [42.06/60.08]	116,200 / 166,000 [34.07/48.66]	20-50 [11.1-27.8] / 35-65 [19.4-36.1]	81	9	2	0.75 [19]
102A15**A**	105,000/150,000 [30.76/43.95]	85,050/121,500 [24.92/35.6]	5-35 [2.8-19.4] / 15-45 [8.3-25]	81	6	2	0.75 [19]
102A22**A**	157,500 / 225,000 [46.16/64.94]	127,500 / 182,250 [37.39/53.41]	15-45 [8.3-25] / 35-65 [19.4-36.1]	81	9	2	0.75 [19]
120A15**A**	105,000/150,000 [30.76/43.95]	85,050/121,500 [24.92/35.6]	10-40 [5.6-22.2] / 20-50 [11.1-27.8]	81	6	2	0.75 [19]
120A22**A**	157,500 / 225,000 [46.16/64.94]	127,500 / 182,250 [37.39/53.41]	15-45 [8.3-25] / 35-65 [19.4-36.1]	81	9	2	0.75 [19]
150A15**A**	105,000/150,000 [30.76/43.95]	85,050 / 121,500 [24.92/35.6]	5-35 [2.8-19.4] / 15-45 [8.3-25]	81	6	2	0.75 [19]
150A22**A**	157,500 / 225,000 [46.16/64.94]	127,500 / 182,250 [37.39/53.41]	10-40 [5.6-22.2] / 25-55 [13.9-30.6]	81	9	2	0.75 [19]

ELECTRICAL DATA - GEDZR MODELS

ELECTRICAL DATA - -GEDZR SERIES							
		090ACA15 090ACA20	090ACB15 090ACC15 090ACC20 090ACB20	090ADA15 090ADA20	090ADB15 090ADB20 090ADC15 090ADC20	090AYA15 090AYA20	090AYB15 090AYB20 090AYC15 090AYC20
Unit Information	Unit Operating Voltage Range	187-253	187-253	414-506	414-506	517-633	517-633
	Volts	208/230	208/230	460	460	575	575
	Phase	3	3	3	3	3	3
	Hz	60	60	60	60	60	60
	Minimum Circuit Ampacity	41	43	21	23	16	17
	Minimum Overcurrent Protection Device Size	50	50	25	30	20	20
	Maximum Overcurrent Protection Device Size	60	60	30	35	25	25
Compressor Motor	No.	1	1	1	1	1	1
	Volts	208/230	208/230	460	460	575	575
	Phase	3	3	3	3	3	3
	RPM	3450	3450	3450	3450	3450	3450
	HP, Compressor 1	7	7	7	7	7	7
	Amps (RLA), Comp. 1	25	25	12.8	12.8	9.6	9.6
	Amps (LRA), Comp. 1	164	164	164	164	78	78
	HP, Compressor 2						
	Amps (RLA), Comp. 2						
	Amps (LRA), Comp. 2						
Condenser Motor	No.	2	2	2	2	2	2
	Volts	208/230	208/230	460	460	575	575
	Phase	1	1	1	1	1	1
	HP	1/5	1/5	1/5	1/5	1/5	1/5
	Amps (FLA, each)	1.2	1.2	0.8	0.8	0.6	0.6
	Amps (LRA, each)	2.3	2.3	1.4	1.4	1.1	1.1
Evaporator Fan	No.	1	1	1	1	1	1
	Volts	208/230	208/230	460	460	575	575
	Phase	3	3	3	3	3	3
	HP	2	3	2	3	2	2
	Amps (FLA, each)	6.6	9.1	3.3	4.6	2.5	3.5
	Amps (LRA, each)	47	74.5	22.5	38.1	19	20

ELECTRICAL DATA - GEDZR MODELS

ELECTRICAL DATA - -GEDZR SERIES								
		102ACA15 102ACA22	102ACB15 102ACB22 102ACC15 102ACC22	102ADA15 102ADA22	102ADB15 102ADB22	102ADC15 102ADC22	102AYA15 102AYA22	102AYB15 102AYB22 102AYC15 102AYC22
Unit Information	Unit Operating Voltage Range	187-253	187-253	414-506	414-506	414-506	517-633	517-633
	Volts	208/230	208/230	460	460	460	575	575
	Phase	3	3	3	3	3	3	3
	Hz	60	60	60	60	60	60	60
	Minimum Circuit Ampacity	44	46	22	23	24	16	17
	Minimum Overcurrent Protection Device Size	60	60	25	30	30	20	20
	Maximum Overcurrent Protection Device Size	70	70	30	35	35	25	25
Compressor Motor	No.	1	1	1	1	1	1	1
	Volts	208/230	208/230	460	460	460	575	575
	Phase	3	3	3	3	3	3	3
	RPM	3450	3450	3450	3450	3450	3450	3450
	HP, Compressor 1	7 1/2	7 1/2	7 1/2	7 1/2	7 1/2	7 1/2	7 1/2
	Amps (RLA), Comp. 1	27.6	27.6	12.8	12.8	12.8	9.6	9.6
	Amps (LRA), Comp. 1	191	191	100	100	100	78	78
	HP, Compressor 2							
	Amps (RLA), Comp. 2							
	Amps (LRA), Comp. 2							
Condenser Motor	No.	2	2	2	2	2	2	2
	Volts	208/230	208/230	460	460	460	575	575
	Phase	1	1	1	1	1	1	1
	HP	1/5	1/5	1/5	1/5	1/5	1/5	1/5
	Amps (FLA, each)	1.2	1.2	0.8	0.8	0.8	0.6	0.6
	Amps (LRA, each)	2.3	2.3	1.4	1.4	1.4	1.1	1.1
Evaporator Fan	No.	1	1	1	1	1	1	1
	Volts	208/230	208/230	460	460	460	575	575
	Phase	3	3	3	3	3	3	3
	HP	2	3	2	3	3	2	3
	Amps (FLA, each)	7.1	9.1	3.5	4.6	6	2.5	3.5
	Amps (LRA, each)	45	74.5	22.5	38.1	38.1	19	20

ELECTRICAL DATA - GEDZR MODELS

ELECTRICAL DATA - -GEDZR SERIES									
		120ACA15 120ACA22	120ACB15 120ACB22	120ACC15 120ACC22	120ADA15 120ADA22	120ADB15 120ADB22	120ADC15 120ADC22	120AYA15 120AYA22	120AYB15 120AYB22 120AYC15 120AYC22
Unit Information	Unit Operating Voltage Range	187-253	187-253	187-253	414-506	414-506	414-506	517-633	517-633
	Volts	208/230	208/230	208/230	460	460	460	575	575
	Phase	3	3	3	3	3	3	3	3
	Hz	60	60	60	60	60	60	60	60
	Minimum Circuit Ampacity	48	51	53	26	27	28	19	20
	Minimum Overcurrent Protection Device Size	60	60	60	30	30	35	25	25
	Maximum Overcurrent Protection Device Size	70	70	80	35	40	40	25	30
Compressor Motor	No.	1	1	1	1	1	1	1	1
	Volts	208/230	208/230	208/230	460	460	460	575	575
	Phase	3	3	3	3	3	3	3	3
	RPM	3450	3450	3450	3450	3450	3450	3450	3450
	HP, Compressor 1	10	10	10	10	10	10	10	10
	Amps (RLA), Comp. 1	28.2	28.2	28.2	14.7	14.7	14.7	11.3	11.3
	Amps (LRA), Comp. 1	239	239	239	130	130	130	93.7	93.7
	HP, Compressor 2								
	Amps (RLA), Comp. 2								
	Amps (LRA), Comp. 2								
Condenser Motor	No.	2	2	2	2	2	2	2	2
	Volts	208/230	208/230	208/230	460	460	460	575	575
	Phase	1	1	1	1	1	1	1	1
	HP	1/3	1/3	1/3	1/3	1/3	1/3	1/3	1/3
	Amps (FLA, each)	2.4	2.4	2.4	1.4	1.4	1.4	1	1
	Amps (LRA, each)	4.7	4.7	4.7	2.4	2.4	2.4	1.6	1.6
Evaporator Fan	No.	1	1	1	1	1	1	1	1
	Volts	208/230	208/230	208/230	460	460	460	575	575
	Phase	3	3	3	3	3	3	3	3
	HP	2	2	2	2	3	3	2	3
	Amps (FLA, each)	7.9	10.1	12	3.9	5	6	2.5	3.5
	Amps (LRA, each)	45	74.5	74.5	22.5	38.1	38.1	19	20

ELECTRICAL DATA - GEDZS MODELS

ELECTRICAL DATA - -GEDZS SERIES							
		090ACA15 090ACA20	090ACB15 090ACB20 090ACC15 090ACC20	090ACF15 090ACF20	090ACG15 090ACG20 090ACH15 090ACH20	090ADA15 090ADF15 090ADF20 090ADA20	090ADB15 090ADB20 090ADC15 090ADC20 090ADG15 090ADG20 090ADH15
Unit Information	Unit Operating Voltage Range	187-253	187-253	187-253	187-253	414-506	414-506
	Volts	208/230	208/230	208/230	208/230	460	460
	Phase	3	3	3	3	3	3
	Hz	60	60	60	60	60	60
	Minimum Circuit Ampacity	41	44	41	44	17	19
	Minimum Overcurrent Protection Device Size	50	50	50	50	20	25
	Maximum Overcurrent Protection Device Size	60	60	60	60	25	25
Compressor Motor	No.	1	1	1	1	1	1
	Volts	208/230	208/230	208/230	208/230	460	460
	Phase	3	3	3	3	3	3
	RPM	3450	3450	3450	3450	3450	3450
	HP, Compressor 1	7	7	7	7	7	7
	Amps (RLA), Comp. 1	25.3	25.3	25.3	25.3	9.6	9.6
	Amps (LRA), Comp. 1	184	184	184	184	84	84
	HP, Compressor 2						
	Amps (RLA), Comp. 2						
	Amps (LRA), Comp. 2						
Condenser Motor	No.	2	2	2	2	2	2
	Volts	208/230	208/230	208/230	208/230	460	460
	Phase	1	1	1	1	1	1
	HP	1/5	1/5	1/5	1/5	1/5	1/5
	Amps (FLA, each)	1.2	1.2	1.2	1.2	0.8	0.8
	Amps (LRA, each)	2.3	2.3	2.3	2.3	1.4	1.4
Evaporator Fan	No.	1	1	1	1	1	1
	Volts	208/230	208/230	208/230	208/230	460	460
	Phase	3	3	3	3	3	3
	HP	2	3	2	3	2	3
	Amps (FLA, each)	6.6	9.1	6.6	9.1	3.2	4.6
	Amps (LRA, each)	47	74.5	22.5	74.5	22.5	38.1

ELECTRICAL DATA - GEDZS MODELS

ELECTRICAL DATA - -GEDZS SERIES							
		102ACA15 102ACF15 102ACF22 102ACA22	102ACB15 102ACB22 102ACG15 102ACG22	102ACC15 102ACC22 102ACH15 102ACH22	102ADA15 102ADA22 102ADF15 102ADF22	102ADB15 102ADB22 102ADG15 102ADG22	102ADC15 102ADC22 102ADH15 102ADH22 102ADH22
Unit Information	Unit Operating Voltage Range	187-253	187-253	187-253	414-506	414-506	414-506
	Volts	208/230	208/230	208/230	460	460	460
	Phase	3	3	3	3	3	3
	Hz	60	60	60	60	60	60
	Minimum Circuit Ampacity	46	48	51	21	22	24
	Minimum Overcurrent Protection Device Size	60	60	60	25	25	30
	Maximum Overcurrent Protection Device Size	70	70	70	30	30	35
Compressor Motor	No.	1	1	1	1	1	1
	Volts	208/230	208/230	208/230	460	460	460
	Phase	3	3	3	3	3	3
	RPM	3450	3450	3450	3450	3450	3450
	HP, Compressor 1	7 1/2	7 1/2	7 1/2	7 1/2	7 1/2	7 1/2
	Amps (RLA), Comp. 1	28.8	28.8	28.8	12.5	12.5	12.5
	Amps (LRA), Comp. 1	191	191	191	100	100	100
	HP, Compressor 2						
	Amps (RLA), Comp. 2						
	Amps (LRA), Comp. 2						
Condenser Motor	No.	2	2	2	2	2	2
	Volts	208/230	208/230	208/230	460	460	460
	Phase	1	1	1	1	1	1
	HP	1/5	1/5	1/5	1/5	1/5	1/5
	Amps (FLA, each)	1.2	1.2	1.2	0.8	0.8	0.8
	Amps (LRA, each)	2.3	2.3	2.3	1.4	1.4	1.4
Evaporator Fan	No.	1	1	1	1	1	1
	Volts	208/230	208/230	208/230	460	460	460
	Phase	3	3	3	3	3	3
	HP	2	3	3	2	3	3
	Amps (FLA, each)	7	9.1	12	3.5	4.6	6
	Amps (LRA, each)	45	74.5	74.5	22.5	38.1	38.1

ELECTRICAL DATA - GEDZS MODELS

ELECTRICAL DATA - -GEDZS SERIES							
		120ACA15 120ACA22 120ACF15 120ACF22	120ACB15 120ACB22 120ACG15 120ACG22	120ACC15 120ACC22 120ACH15 120ACH22	120ADA15 120ADA22 120ADF15 120ADF22	120ADB15 120ADB22 120ADG15 120ADG22	120ADC15 120ADC22 120ADH15 120ADH22
Unit Information	Unit Operating Voltage Range	187-253	187-253	187-253	414-506	414-506	414-506
	Volts	208/230	208/230	208/230	460	460	460
	Phase	3	3	3	3	3	3
	Hz	60	60	60	60	60	60
	Minimum Circuit Ampacity	54	56	58	26	32	34
	Minimum Overcurrent Protection Device Size	70	70	70	30	40	40
	Maximum Overcurrent Protection Device Size	80	80	90	40	45	45
Compressor Motor	No.	1	1	1	1	1	1
	Volts	208/230	208/230	208/230	460	460	460
	Phase	3	3	3	3	3	3
	RPM	3450	3450	3450	3450	3450	3450
	HP, Compressor 1	10	10	10	10	10	10
	Amps (RLA), Comp. 1	32.6	32.6	32.6	14.8	14.8	14.8
	Amps (LRA), Comp. 1	240	240	240	130	130	130
	HP, Compressor 2						
	Amps (RLA), Comp. 2						
	Amps (LRA), Comp. 2						
Condenser Motor	No.	2	2	2	2	2	2
	Volts	208/230	208/230	208/230	460	460	460
	Phase	1	1	1	1	1	1
	HP	1/3	1/3	1/3	1/3	1/3	1/3
	Amps (FLA, each)	2.4	2.4	2.4	1.4	1.4	1.4
	Amps (LRA, each)	4.7	4.7	4.7	2.4	2.4	2.4
Evaporator Fan	No.	1	1	1	1	1	1
	Volts	208/230	208/230	208/230	460	460	460
	Phase	3	3	3	3	3	3
	HP	2	2	2	2	3	3
	Amps (FLA, each)	7.9	10.1	12	3.9	5.1	6
	Amps (LRA, each)	45	74.5	74.5	22.5	38.1	38.1

ELECTRICAL DATA - GEDZS MODELS

ELECTRICAL DATA - -GEDZS SERIES							
		150ACA15 150ACA22 150ACF15 150ACF22	150ACB15 150ACB22 150ACG15 150ACG22	150ADA15 150ADA22 150ADF15 150ADF22	150ADB15 150ADB22 150ADG15 150ADG22	150AYA15 150AYA22	150AYB15 150AYB22
Unit Information	Unit Operating Voltage Range	187-253	187-253	414-506	414-506	517-633	517-633
	Volts	208/230	208/230	460	460	575	575
	Phase	3	3	3	3	3	3
	Hz	60	60	60	60	60	60
	Minimum Circuit Ampacity	70	75	34	37	25	27
	Minimum Overcurrent Protection Device Size	80	90	40	40	30	30
	Maximum Overcurrent Protection Device Size	90	90	40	45	30	30
Compressor Motor	No.	2	2	2	2	2	2
	Volts	208/230	208/230	460	460	575	575
	Phase	3	3	3	3	3	3
	RPM	3450	3450	3450	3450	3450	3450
	HP, Compressor 1	6	6	6	6	6	6
	Amps (RLA), Comp. 1	25	25	12.8	12.8	9.6	9.6
	Amps (LRA), Comp. 1	164	164	100	100	78	78
	HP, Compressor 2	6	6	6	6	6	6
	Amps (RLA), Comp. 2	25	25	12.8	12.8	9.6	9.6
	Amps (LRA), Comp. 2	164	164	100	100	78	78
Condenser Motor	No.	2	2	2	2	2	2
	Volts	208/230	208/230	460	460	575	575
	Phase	1	1	1	1	1	1
	HP	3/4	3/4	3/4	3/4	3/4	3/4
	Amps (FLA, each)	4.2	4.2	2.3	2.3	1.2	1.2
	Amps (LRA, each)						
Evaporator Fan	No.	1	1	1	1	1	1
	Volts	208/230	208/230	460	460	575	575
	Phase	3	3	3	3	3	3
	HP	3	5	3	5	3	5
	Amps (FLA, each)	10.4	16	5.2	8	4.4	5.9
	Amps (LRA, each)	74.5	82	38.1	41	20	38

ELECTRICAL DATA - GEDZT MODELS

ELECTRICAL DATA - -GEDZT SERIES					
		090ACF15 090ACF20	090ACG15 090ACG20 090ACH15 090ACH20	090ADF15 090ADF20	090ADG15 090ADG20 090ADH15 090ADH20
Unit Information	Unit Operating Voltage Range	187-253	187-253	414-506	414-506
	Volts	208/230	208/230	460	460
	Phase	3	3	3	3
	Hz	60	60	60	60
	Minimum Circuit Ampacity	41	44	17	19
	Minimum Overcurrent Protection Device Size	50	50	20	25
	Maximum Overcurrent Protection Device Size	60	60	25	25
Compressor Motor	No.	1	1	1	1
	Volts	208/230	208/230	460	460
	Phase	3	3	3	3
	RPM	3450	3450	3450	3450
	HP, Compressor 1	7	7	7	7
	Amps (RLA), Comp. 1	25.3	25.3	9.6	9.6
	Amps (LRA), Comp. 1	184	184	84	84
	HP, Compressor 2				
	Amps (RLA), Comp. 2				
	Amps (LRA), Comp. 2				
Condenser Motor	No.	2	2	2	2
	Volts	208/230	208/230	460	460
	Phase	1	1	1	1
	HP	1/5	1/5	1/5	1/5
	Amps (FLA, each)	1.2	1.2	0.8	0.8
	Amps (LRA, each)	2.3	2.3	1.4	1.4
Evaporator Fan	No.	1	1	1	1
	Volts	208/230	208/230	460	460
	Phase	3	3	3	3
	HP	2	3	2	3
	Amps (FLA, each)	6.6	9.1	3.2	4.6
	Amps (LRA, each)	22.5	74.5	22.5	38.1

ELECTRICAL DATA - GEDZT MODELS

ELECTRICAL DATA - -GEDZT SERIES							
		102ACF15 102ACF22	102ACG15 102ACG22	102ACH15 102ACH22	102ADF15 102ADF22	102ADG15 102ADG22	102ADH15 102ADH22
Unit Information	Unit Operating Voltage Range	187-253	187-253	187-253	414-506	414-506	414-506
	Volts	208/230	208/230	208/230	460	460	460
	Phase	3	3	3	3	3	3
	Hz	60	60	60	60	60	60
	Minimum Circuit Ampacity	46	48	51	21	22	24
	Minimum Overcurrent Protection Device Size	60	60	60	25	25	30
	Maximum Overcurrent Protection Device Size	70	70	70	30	30	35
Compressor Motor	No.	1	1	1	1	1	1
	Volts	208/230	208/230	208/230	460	460	460
	Phase	3	3	3	3	3	3
	RPM	3450	3450	3450	3450	3450	3450
	HP, Compressor 1	7 1/2	7 1/2	7 1/2	7 1/2	7 1/2	7 1/2
	Amps (RLA), Comp. 1	28.8	28.8	28.8	12.5	12.5	12.5
	Amps (LRA), Comp. 1	191	191	191	100	100	100
	HP, Compressor 2						
	Amps (RLA), Comp. 2						
	Amps (LRA), Comp. 2						
Condenser Motor	No.	2	2	2	2	2	2
	Volts	208/230	208/230	208/230	460	460	460
	Phase	1	1	1	1	1	1
	HP	1/5	1/5	1/5	1/5	1/5	1/5
	Amps (FLA, each)	1.2	1.2	1.2	0.8	0.8	0.8
	Amps (LRA, each)	2.3	2.3	2.3	1.4	1.4	1.4
Evaporator Fan	No.	1	1	1	1	1	1
	Volts	208/230	208/230	208/230	460	460	460
	Phase	3	3	3	3	3	3
	HP	2	3	3	2	3	3
	Amps (FLA, each)	7	9.1	12	3.5	4.6	6
	Amps (LRA, each)	45	74.5	74.5	22.5	38.1	38.1

ELECTRICAL DATA - GEDZT MODELS

ELECTRICAL DATA - -GEDZT SERIES							
		120ACF15 120ACF22	120ACG15 120ACG22	120ACH15 120ACH22	120ADF15 120ADF22	120ADG15 120ADG22	120ADH15 120ADH22
Unit Information	Unit Operating Voltage Range	187-253	187-253	187-253	414-506	414-506	414-506
	Volts	208/230	208/230	208/230	460	460	460
	Phase	3	3	3	3	3	3
	Hz	60	60	60	60	60	60
	Minimum Circuit Ampacity	54	56	58	26	32	34
	Minimum Overcurrent Protection Device Size	70	70	70	30	40	40
	Maximum Overcurrent Protection Device Size	80	80	90	40	45	45
Compressor Motor	No.	1	1	1	1	1	1
	Volts	208/230	208/230	208/230	460	460	460
	Phase	3	3	3	3	3	3
	RPM	3450	3450	3450	3450	3450	3450
	HP, Compressor 1	10	10	10	10	10	10
	Amps (RLA), Comp. 1	32.6	32.6	32.6	14.8	14.8	14.8
	Amps (LRA), Comp. 1	240	240	240	130	130	130
	HP, Compressor 2						
	Amps (RLA), Comp. 2						
	Amps (LRA), Comp. 2						
Condenser Motor	No.	2	2	2	2	2	2
	Volts	208/230	208/230	208/230	460	460	460
	Phase	1	1	1	1	1	1
	HP	1/3	1/3	1/3	1/3	1/3	1/3
	Amps (FLA, each)	2.4	2.4	2.4	1.4	1.4	1.4
	Amps (LRA, each)	4.7	4.7	4.7	2.4	2.4	2.4
Evaporator Fan	No.	1	1	1	1	1	1
	Volts	208/230	208/230	208/230	460	460	460
	Phase	3	3	3	3	3	3
	HP	2	2	2	2	3	3
	Amps (FLA, each)	7.9	10.1	12	3.9	5.1	6
	Amps (LRA, each)	45	74.5	74.5	22.5	38.1	38.1

ELECTRICAL DATA - GEDZT MODELS

ELECTRICAL DATA - -GEDZT SERIES					
		150ACF15 150ACF22	150ACG15 150ACG22	150ADF22 150ACG22	150ADG15 150ADG22
Unit Infomation	Unit Operating Voltage Range	187-253	187-253	414-506	414-506
	Volts	208/230	208/230	460	460
	Phase	3	3	3	3
	Hz	60	60	60	60
	Minimum Circuit Ampacity	50	56	26	29
	Minimum Overcurrent Protection Device Size	60	70	35	35
	Maximum Overcurrent Protection Device Size	70	80	35	40
Compressor Motor	No.	2	2	2	2
	Volts	208/230	208/230	460	460
	Phase	3	3	3	3
	RPM	3450	3450	3450	3450
	HP, Compressor 1	6	6	6	6
	Amps (RLA), Comp. 1	25	25	12.8	12.8
	Amps (LRA), Comp. 1	164	164	100	100
	HP, Compressor 2	6	6	6	6
	Amps (RLA), Comp. 2	25	25	12.8	12.8
	Amps (LRA), Comp. 2	164	164	100	100
Condenser Motor	No.	2	2	2	2
	Volts	208/230	208/230	460	460
	Phase	1	1	1	1
	HP	3/4	3/4	3/4	3/4
	Amps (FLA, each)	4.2	4.2	2.3	2.3
	Amps (LRA, each)				
Evaporator Fan	No.	1	1	1	1
	Volts	208/230	208/230	460	460
	Phase	3	3	3	3
	HP	3	5	3	5
	Amps (FLA, each)	10.4	16	5.2	8
	Amps (LRA, each)	74.5	82	38.1	41

II. INSTALLATION

A. GENERAL

1. INSTALLATION — Install this unit in accordance with The American National Standard Z223.1-latest edition booklet entitled “National Fuel Gas Code,” and the requirements or codes of the local utility or other authority having jurisdiction.

   Additional helpful publications available from the “National Fire Protection Association” are: NFPA-90A - Installation of Air Conditioning and Ventilating Systems 1985 or latest edition. NFPA-90B - Warm Air Heating and Air Conditioning Systems 1984.

   These publications are available from:

   National Fire Protection Association, Inc.
   Batterymarch Park
   Quincy, MA 02269

2. PRE-INSTALLATION CHECK-POINTS — Before attempting any installation, carefully consider the following points:

   Structural strength of supporting members
   (Rooftop Installation)
   Clearances and provision for servicing
   Power supply and wiring
   Gas supply and piping
   Air duct connections and sizing
   Drain facilities and connections
   Location for minimum noise and vibration - away from bedroom windows

LOCATION CONSIDERATIONS

The metal parts of this unit may be subject to rust or deterioration in adverse environmental conditions. This oxidation could shorten the equipment’s useful life. Salt spray, fog or mist in seacoast areas, sulphur or chlorine from lawn watering systems, and various chemical contaminants from industries such as paper mills and petroleum refineries are especially corrosive.

If the unit is to be installed in an area where contaminants are likely to be a problem, give special attention to the equipment location and exposure.

1. Avoid having lawn sprinkler heads spray directly on the unit cabinet.
2. In coastal areas locate the unit on the side of the building away from the waterfront.
3. Shielding by a fence or shrubs may give some protection.

⚠ WARNING

DISCONNECT ALL POWER TO UNIT BEFORE STARTING MAINTENANCE. FAILURE TO DO SO CAN CAUSE ELECTRICAL SHOCK RESULTING IN PERSONAL INJURY OR DEATH. REGULAR MAINTENANCE WILL REDUCE THE BUILDUP OF CONTAMINANTS AND HELP TO PROTECT THE UNIT’S FINISH.

1. Frequent washing of the cabinet, fan blade and coil with fresh water will remove most of the salt or other contaminants that build up on the unit.
2. Regular cleaning and waxing of the cabinet with an automobile polish will provide some protection.
3. A liquid cleaner may be used several times a year to remove matter that will not wash off with water.

Several different types of protective coatings are offered in some areas. These coatings may provide some benefit, but the effectiveness of such coating materials cannot be verified by the equipment manufacturer.


The best protection is frequent cleaning, maintenance and minimal exposure to contaminants.

B. OUTSIDE INSTALLATION

⚠ WARNING

THESE UNITS ARE DESIGNED CERTIFIED FOR OUTDOOR INSTALLATION ONLY. INSTALLATION INSIDE ANY PART OF A STRUCTURE CAN RESULT IN INADEQUATE UNIT PERFORMANCE AS WELL AS PROPERTY DAMAGE. INSTALLATION INSIDE CAN ALSO CAUSE RECIRCULATION OF FLUE PRODUCTS INTO THE CONDITIONED SPACE RESULTING IN PERSONAL INJURY OR DEATH.

FIGURE 7
OUTSIDE SLAB INSTALLATION. CLOSET DISTRIBUTION SYSTEM. SLAB FLOOR CONSTRUCTION.

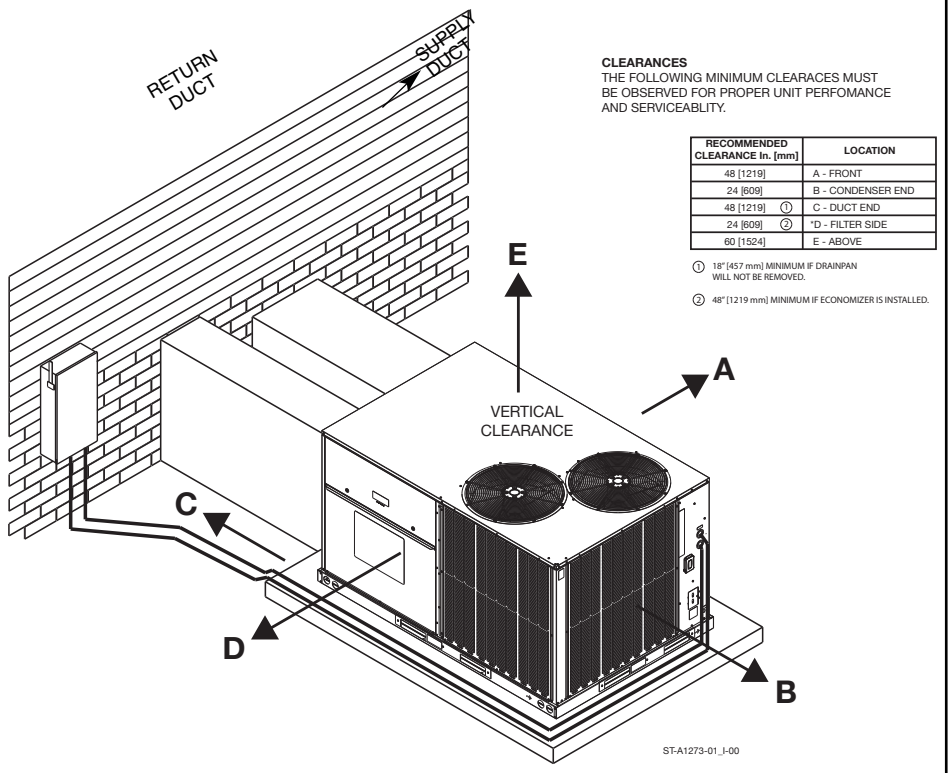

CLEARANCES
THE FOLLOWING MINIMUM CLEARACES MUST BE OBSERVED FOR PROPER UNIT PERFOMANCE AND SERVICEABLITY.

RECOMMENDED CLEARANCE In. [mm]	LOCATION
48 [1219]	A - FRONT
24 [609]	B - CONDENSER END
48 [1219] ①	C - DUCT END
24 [609] ②	*D - FILTER SIDE
60 [1524]	E - ABOVE

① 18" [457 mm] MINIMUM IF DRAINPAN WILL NOT BE REMOVED.

② 48" [1219 mm] MINIMUM IF ECONOMIZER IS INSTALLED.

(Typical outdoor slab installation is shown in Figure 7.)

1. Select a location where external water drainage cannot collect around unit.
2. Provide a level slab sufficiently high enough above grade to prevent surface water from entering the unit
3. Locate the unit to provide proper access for inspection and servicing as shown in Figure 10.
4. Locate unit where operating sounds will not disturb owner or neighbors.
5. Locate unit so roof runoff water does not pour directly on the unit. Provide gutter or other shielding at roof level. Do not locate unit in an area where excessive snow drifting may occur or accumulate.
6. Where snowfall is anticipated, the height of the unit above the ground level must be considered. Mount unit high enough to be above anticipated maximum area snowfall and to allow combustion air to enter the combustion air inlet.
7. Select an area which will keep the areas of the vent, air intake, and A/C condenser fins free and clear of obstructions such as weeds, shrubs, vines, snow, etc. Inform the user accordingly.

C. ATTACHING EXHAUST AND COMBUSTION AIR INLET HOODS

IMPORTANT: Do not operate this unit without the exhaust/combustion air inlet hood properly installed. This hood is shipped in a carton in the blower compartment inside the unit and must be attached when the unit is installed. See Figure 5.

To attach exhaust/combustion air inlet hood:

1. Remove screws securing blower access panel and remove access panel. For location of blower access panel, see Figure 5.
2. Remove exhaust/combustion air inlet hood from the carton, located inside the blower compartment.
3. Attach blower access panel.
4. Attach the combustion air inlet/exhaust hood with screws. Reference Figure 5 for proper location. Screws are in carton with the hood.
5. Vent the unit using the flue exhaust hood, as supplied from the factory, without alteration or addition. Consult your local utility or other authority having jurisdiction for accepted venting techniques.

D.COVER PANEL INSTALLATION/ CONVERSION PROCEDURE

DOWNFLOW TO HORIZONTAL

1. Remove the screws and covers from the outside of the supply and return sections. See Figure 2.
2. Install the covers over the bottom supply and return openings, painted side up, inserting the leading flange under the bracket provided. Place the back flange to top of the front bracket provided. See Figure 8.
3. Secure the return and supply cover to front bracket with one (1) screw.

E. FILTER REPLACEMENT

- Provided with 2” filters (see General Data for size).
- Unit is designed to use 2” or 4” filters. (See Figure 9)

FIGURE 9
FILTER REPLACEMENT

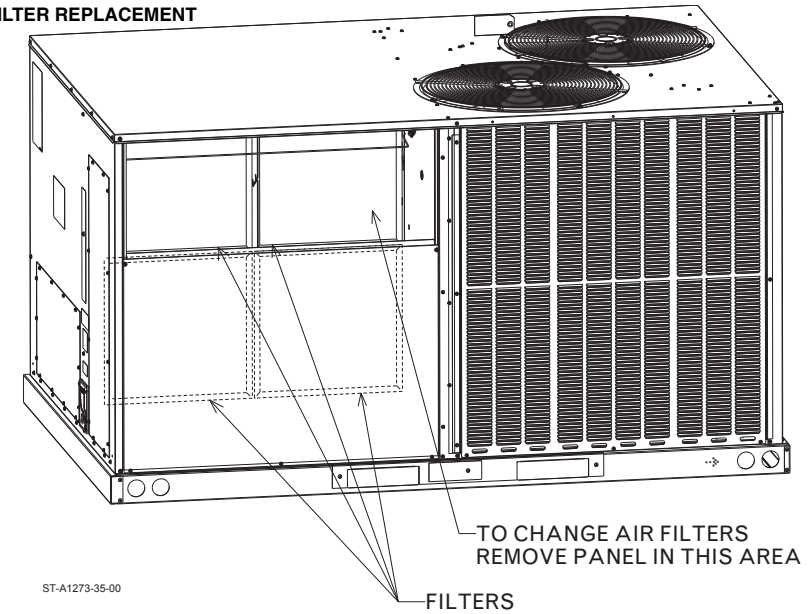


FIGURE 8
COVER GASKET DETAIL FOR UNITS SHIPPED FOR DOWNFLOW APPLICATION BEING CONVERTED TO HORIZONTAL


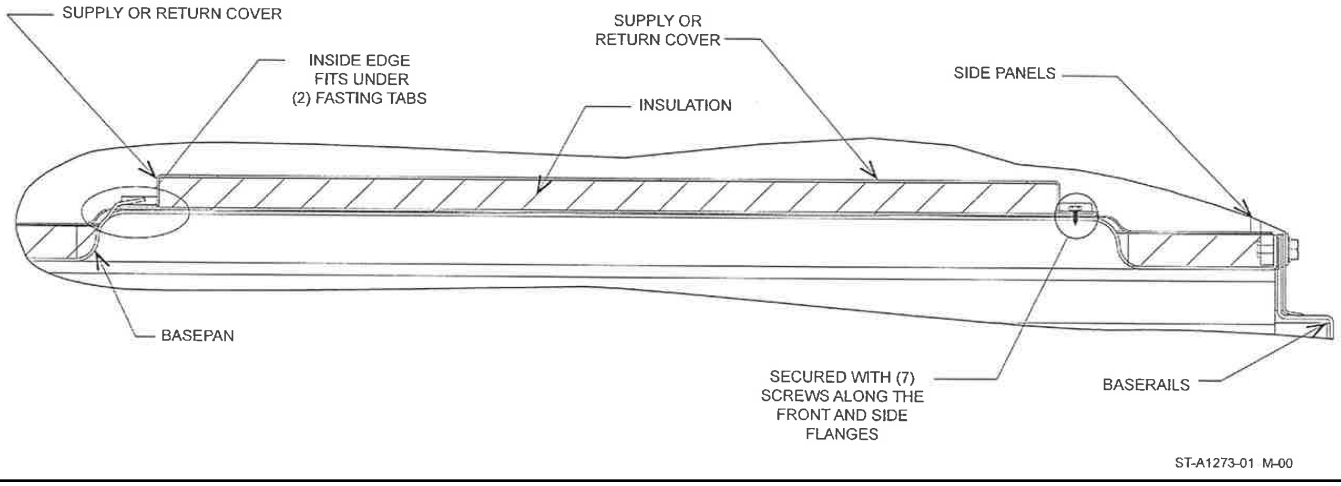


FIGURE 10
FLAT ROOFTOP INSTALLATION, ATTIC OR DROP CEILING DISTRIBUTING SYSTEM. MOUNTED ON ROOFCURB. CURB MUST BE LEVEL.

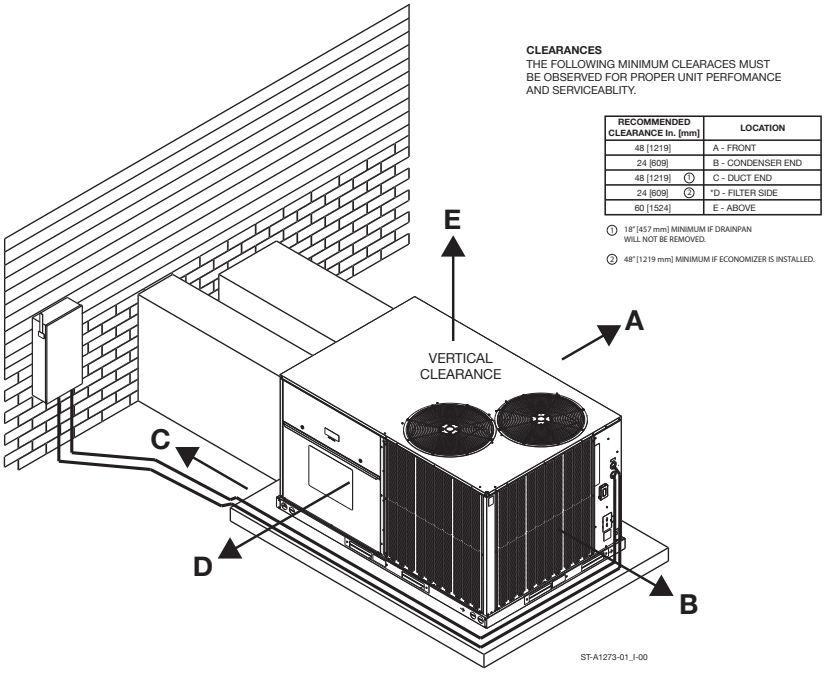

F. ROOFTOP INSTALLATION

1. Before locating the unit on the roof, make sure that the roof structure is adequate to support the weight involved. (See Electrical & Physical Tables in this manual.) **THIS IS VERY IMPORTANT AND THE INSTALLER'S RESPONSIBILITY.**
2. For rigging and roofcurb details, see Figures 12 and 13.
3. The location of the unit on the roof should be such as to provide proper access for inspection and servicing.

IMPORTANT: *If unit will not be put into service immediately, block off supply and return air openings to prevent excessive condensation.*

G.DUCTING

The installing contractor should fabricate ductwork in accordance with local codes. Use industry manuals as a guide when sizing and designing the duct system. Contact Air Conditioning Contractors of America, 1513 16th St. N.W., Washington, D.C. 20036.

⚠ WARNING

DO NOT, UNDER ANY CIRCUMSTANCES, CONNECT RETURN DUCTWORK TO ANY OTHER HEAT PRODUCING DEVICE SUCH AS FIREPLACE INSERT, STOVE, ETC. UNAUTHORIZED USE OF SUCH DEVICES MAY RESULT IN FIRE, CARBON MONOXIDE POISONING, EXPLOSION, PERSONAL INJURY, PROPERTY DAMAGE OR DEATH.

Place the unit as close to the conditioned space as possible allowing clearances as indicated. Run ducts as directly as possible to supply and return outlets. Use of non-flammable weatherproof flexible connectors on both supply and return connections at unit to reduce noise transmission is recommended.

On ductwork exposed to outside temperature and humidity, use a minimum of 2" of insulation and a vapor barrier. Distribution system in attic, furred space or crawl space should be insulated with at least 2" of insulation. Half-inch to 1" thick insulation is usually sufficient for ductwork inside the air conditioned space.

Provide balancing dampers for each branch duct in the supply system. Properly support ductwork from the structure.

IMPORTANT: In the event that the return air ducts must be run through an "unconfined" space containing other fuel burning equipment, it is imperative that the user/homeowner must be informed against future changes in construction which might change this to a "confined space." Also, caution the

user/homeowner against any future installation of additional equipment (such as power ventilators, clothes dryers, etc.), within the existing unconfined and/or confined space which might create a negative pressure within the vicinity of other solid, liquid, or gas fueled appliances.

RETURN AIR


⚠ WARNING

NEVER ALLOW PRODUCTS OF COMBUSTION OR THE FLUE PRODUCTS TO ENTER THE RETURN AIR DUCTWORK, OR THE CIRCULATING AIR SUPPLY. ALL RETURN DUCTWORK MUST BE ADEQUATELY SEALED AND SECURED TO THE FURNACE WITH SHEET METAL SCREWS, AND JOINTS TAPED. ALL OTHER DUCT JOINTS MUST BE SECURED WITH APPROVED CONNECTIONS AND SEALED AIRTIGHT.

FAILURE TO PREVENT PRODUCTS OF COMBUSTION FROM BEING CIRCULATED INTO THE LIVING SPACE CAN CREATE POTENTIALLY HAZARDOUS CONDITIONS, INCLUDING CARBON MONOXIDE POISONING THAT COULD RESULT IN PERSONAL INJURY OR DEATH.


FIGURE 11
LIFTING DETAIL

CAPACITY TONS [kW]	CORNER WEIGHTS BY PERCENTAGE			
	A	B	C	D
7.5-12.5 [21.1-44.0]	26%	34%	17%	23%

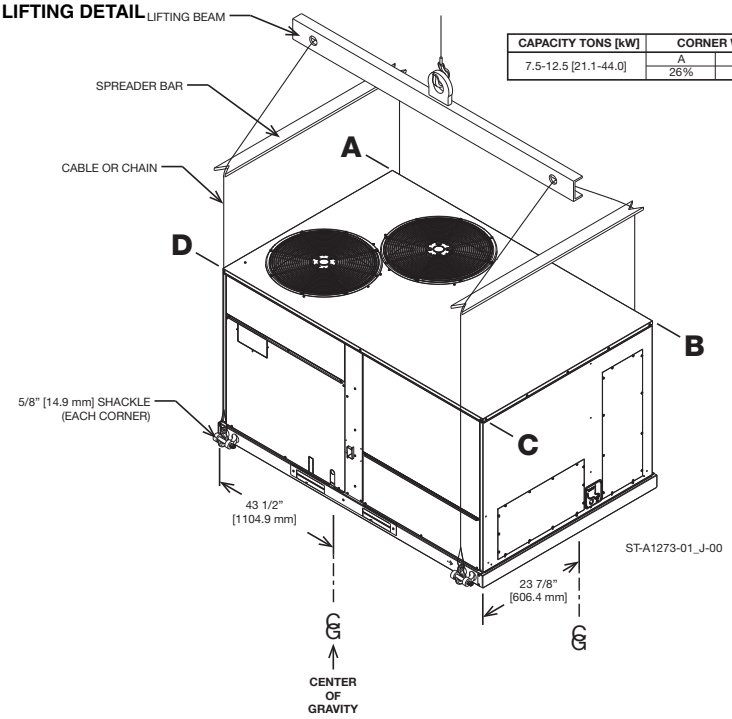


I-744

FIGURE 12
ROOFCURB

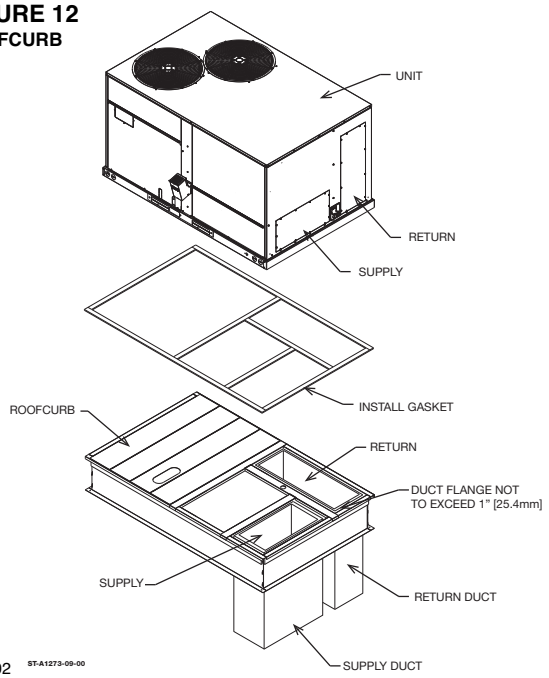

A074302 ST-A1273-09-00

FIGURE 13
ROOFCURB

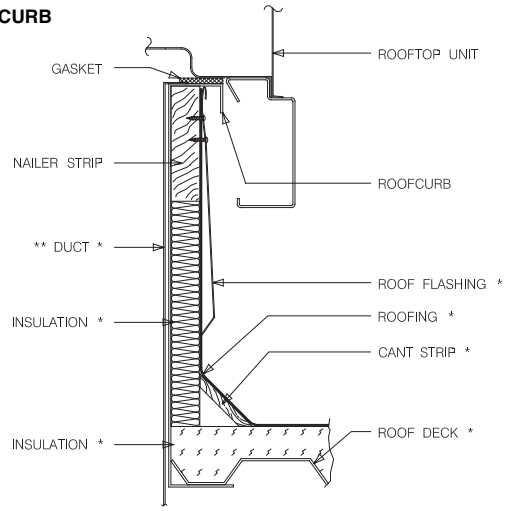

* BY CONTRACTOR

** FOR INSTALLATION OF DUCT AS SHOWN, USE RECOMMENDED DUCT SIZES FROM ROOFCURB INSTALLATION INSTRUCTIONS. FOR DUCT FLANGE ATTACHMENT TO UNIT, SEE UNIT INSTALLATION INSTRUCTIONS FOR RECOMMENDED DUCT SIZES.

A074302

III. GAS SUPPLY, CONDENSATE DRAIN AND PIPING

A. GAS CONNECTION

IMPORTANT: *Connect this unit only to gas supplied by a commercial utility.*

1. Install gas piping in accordance with local codes and regulations of the local utility company. In the absence of local codes, the installation must conform to the specifications of the National Fuel Gas Code, ANSI Z223.1 - latest edition.

   NOTE: The use of flexible gas connectors is not permitted.
2. Place backup wrench on valve, shown in Figures 14A and 14B.
3. Connect the gas line to the gas valve supplied with unit. Routing can be through the gas pipe opening shown in Figure 14C or through the base as shown in Figure 17.
4. Size the gas line to the furnace adequate enough to prevent undue pressure drop and never less than 3/4" pipe.
5. Install a drip leg or sediment trap in the gas supply line as close to the unit as possible.
6. Install an outside ground joint union to connect the gas supply to the control assembly at the burner tray.
7. Gas valves have been factory installed. Install a manual gas valve where local codes specify a shut-off valve outside the unit casing. (See Figure 14.)
8. Make sure piping is tight. **A pipe compound resistant to the action of liquefied petroleum gases must be used at all threaded pipe connections.**
9. IMPORTANT: any additions, changes or conversions required for the furnace to satisfactorily meet the application should be made by a qualified installer, service agency or the gas supplier, using factory-specified or approved parts. In the commonwealth of Massachusetts, installation must be performed by a licensed plumber or gas fitter for appropriate fuel.

IMPORTANT: *Disconnect the furnace and its individual shutoff valve from the gas supply piping during any pressure testing of that system at test pressures in excess of 1/2 pound per square inch gauge or isolate the system from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of this gas supply system at pressures equal to or less than 1/2 PSIG.*

TO CHECK FOR GAS LEAKS, USE A SOAP AND WATER SOLUTION OR OTHER APPROVED METHOD. DO NOT USE AN OPEN FLAME.


⚠ WARNING

DO NOT USE AN OPEN FLAME TO CHECK FOR LEAKS. THE USE OF AN OPEN FLAME CAN RESULT IN FIRE, EXPLOSION, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

IMPORTANT: *Check the rating plate to make certain the appliance is equipped to burn the type of gas supplied. Care should be taken after installation of this equipment that the gas control valve not be subjected to high gas supply line pressure.*

In making gas connections, avoid strains as they may cause noise and damage the controls. A backup wrench is required to be used on the valve to avoid damage.

FIGURE 14A
BACKUP WRENCH LOCATION
HONEYWELL GAS VALVE

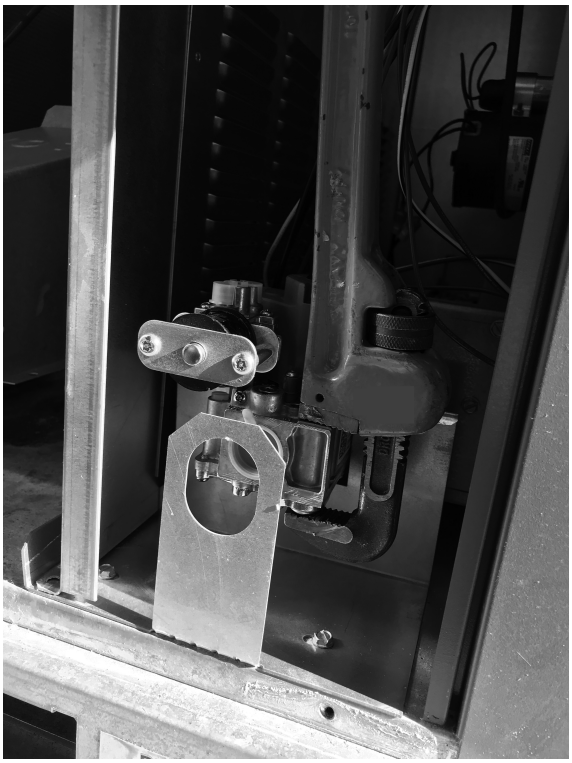

ST-A1273-37-00

FIGURE 14B
BACKUP WRENCH LOCATION
WHITE RODGERS GAS VALVE



ST-A1273-38-00

The capacities of gas pipe of different diameters and lengths in cu. ft. per hr. with pressure drop of 0.3 in. and specific gravity of 0.60 (natural gas) are shown in Table 1.

After determining the pipe length, select the pipe size which will provide the minimum cubic feet per hour required for the gas input rating of the furnace. By formula:

$$\text{Cu. Ft. Per Hr. Required} = \frac{\text{Gas Input of Furnace (BTU/HR)}}{\text{Heating Value of Gas (BTU/FT}^3\text{)}}$$

The gas input of the furnace is marked on the furnace rating plate. The heating value of the gas (BTU/FT^3) may be determined by consulting the local natural gas utility or the L.P. gas supplier.

TABLE 1
GAS PIPE CAPACITY TABLE (CU. FT./HR.)

Nominal Iron Pipe Size, Inches	Equivalent Length of Pipe, Feet							
	10	20	30	40	50	60	70	80
½	132	92	73	63	56	50	46	43
¾	278	190	152	130	115	105	96	90
1	520	350	285	245	215	195	180	170
1¼	1,050	730	590	500	440	400	370	350
1½	1,600	1,100	890	760	670	610	560	530

FIGURE 14C
SUGGESTED GAS PIPING

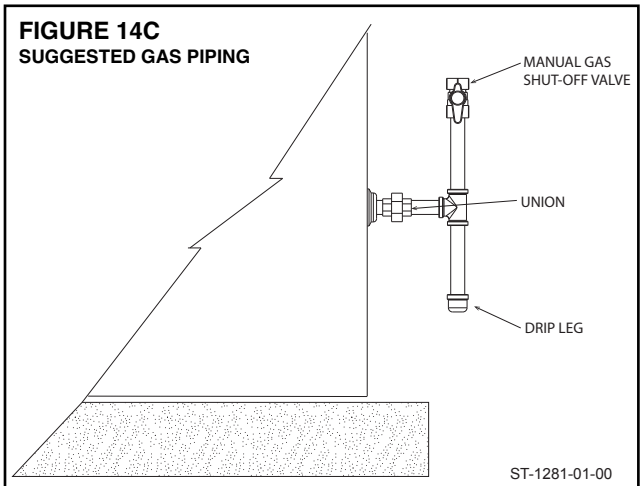


TABLE 2
LP GAS PIPE CAPACITY TABLE (CU. FT./HR.)

Maximum capacity of pipe in thousands of BTU per hour of undiluted liquefied petroleum gases (at 11 inches water column inlet pressure).
(Based on a Pressure Drop of 0.5 Inch Water Column)

Nominal Iron Pipe Size, Inches	Length of Pipe, Feet											
	10	20	30	40	50	60	70	80	90	100	125	150
1/2	275	189	152	129	114	103	96	89	83	78	69	63
3/4	567	393	315	267	237	217	196	182	173	162	146	132
1	1,071	732	590	504	448	409	378	346	322	307	275	252
1-1/4	2,205	1,496	1,212	1,039	913	834	771	724	677	630	567	511
1-1/2	3,307	2,299	1,858	1,559	1,417	1,275	1,181	1,086	1,023	976	866	787
2	6,221	4,331	3,465	2,992	2,646	2,394	2,205	2,047	1,921	1,811	1,606	1,496

Example (LP): Input BTU requirement of unit, 150,000
Equivalent length of pipe, 60 ft. = 3/4" IPS required.

B. LP CONVERSION

⚠ WARNING

THIS UNIT IS EQUIPPED AT THE FACTORY FOR USE ON NATURAL GAS ONLY. CONVERSION TO LP GAS REQUIRES A SPECIAL KIT SUPPLIED BY THE DISTRIBUTOR OR MANUFACTURER. MAILING ADDRESSES ARE LISTED ON THE FURNACE RATING PLATE, PARTS LIST AND WARRANTY. FAILURE TO USE THE PROPER CONVERSION KIT CAN CAUSE FIRE, CARBON MONOXIDE POISONING, EXPLOSION, PERSONAL INJURY, PROPERTY DAMAGE OR DEATH.

NOTE: The valve can be converted to use liquefied petroleum (LP) gas by replacing the pressure regulator spring with the conversion kit spring. This LP kit spring allows the regulator to maintain the proper manifold pressure for LP gas.

NOTE: Order the correct LP conversion kit from the furnace manufacturer. ***See Conversion Kit Index shipped with unit for proper LP kit number. Furnace conversion to LP gas must be performed by a qualified technician.***

C. ADJUSTING OR CHECKING FURNACE INPUT

– Natural Gas Line Pressure 5" - 10.5" W.C.
– LP Gas Line Pressure 11" - 13" W.C.

Manifold pressure (in. W.C.)		
	High Fire	Low fire
Natural Gas	3.5	1.7
LP	10	4.9

Natural gas manifold pressure tolerance ±0.3. LP gas manifold pressure tolerance ±0.5.

Supply and manifold pressure taps are located on the gas valve body 1/8" N.P.T. and on the manifold.

Use a properly calibrated manometer gauge for accurate gas pressure readings.

Only small variations in the gas flow should be made by means of the pressure regulator adjustment. Furnaces functioning on LP gas must be set by means of the tank or branch supply regulators. The furnace manifold pressure should be set at 10" W.C. at the gas control valve.

To adjust the pressure regulator, remove the regulator cap and turn the adjustment screw clockwise to increase pressure or counterclockwise to decrease pressure. **Then replace the regulator cap securely.**

Any necessary major changes in the gas flow rate should be made by changing the size of the burner orifices. To change orifice spuds, shut off the manual main gas valve and remove the gas manifold.

For elevations up to 2,000 feet, rating plate input ratings apply. For high altitudes (elevations over 2,000 ft.), see conversion kit index 92-21519-72 for derating and orifice spud sizes.

Check of input is important to prevent over-firing of the furnace beyond its design-rated input. NEVER SET INPUT ABOVE THAT SHOWN ON THE RATING PLATE. Use the following table or formula to determine input rate.

TABLE 3

Meter Time in Minutes and Seconds for Normal Input Rating of Furnaces Equipped with Natural or LP Gas											
		Natural Gas (cu. Ft.)								LP (cu. Ft.)	
	Meter Size	900		1000		1050		1100		2500	
Input BTU/HR	Cu. Ft.	MIN.	SEC.	MIN.	SEC.	MIN.	SEC.	MIN.	SEC.	MIN.	SEC.
150,000	ONE	0	21.6	0	24	0	25.2	0	26.4	1	0
	TEN	3	36	4	0	1	15.6	4	24	10	0
205,000	ONE	0	15.8	0	17.6	0	18.4	0	19.3	0	43.9
	TEN	2	38.0	2	55.6	0	55.3	3	13.2	7	19
225,000	ONE	0	14.4	0	16	0	16.8	0	17.6	0	40
	TEN	2	24	2	40	0	50.4	2	56	6	40


$$\text{Cu. Ft. Per Hr. Required} = \frac{\text{Heating Value of Gas (BTU/Cu. Ft.) x 3600}}{\text{Time in Seconds (for 1 Cu. Ft.) of Gas}}$$

Start the furnace and measure the time required to burn one cubic foot of gas. Prior to checking the furnace input, make certain that all other gas appliances are shut off, with the exception of pilot burners. Time the meter with only the furnace in operation.

IMPORTANT NOTE FOR ALTITUDES ABOVE 2,000 FEET (610 METERS): The main burner orifices in your furnace and in these kits are sized for the nameplate input and intended for installations at elevations up to 2,000 feet in the USA or Canada, or for elevations of 2,000 - 4,500 feet (610 - 1,373 meters) in Canada if the unit has been derated at the factory. For elevations above 2,000 feet (610 meters) **IN THE USA ONLY** (see ANSI-Z223.1), the burner orifices must be sized to reduce the input 4% for each 1,000 feet (305 meters) above sea level.

NOTICE: DERATING OF THE HEATING INPUT FOR HIGH ALTITUDE IN THE FIELD IS UNLAWFUL IN CANADA (REFER TO CAN/CGA 2.17). UNITS INSTALLED IN ALTITUDES GREATER THAN 2,000 FEET (610 METERS) MUST BE SHIPPED FROM THE FACTORY OR FROM A FACTORY AUTHORIZED CONVERSION STATION WITH THE HEATING INPUT DERATED BY 10% SO AS TO OPERATE PROPERLY IN ALTITUDES FROM 2,000 - 4,500 FEET (610 - 1,373 METERS).

FIGURE 15
CONDENSATE DRAIN

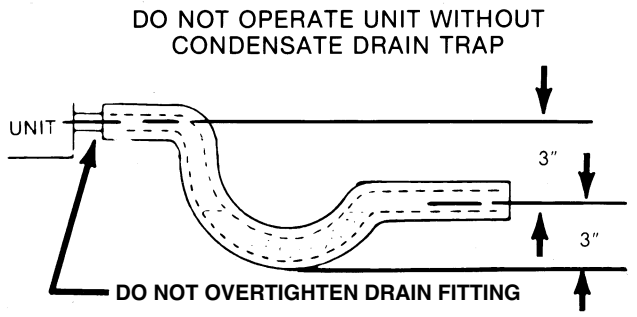

D.CONDENSATE DRAIN

IMPORTANT: Install a condensate trap to ensure proper condensate drainage. See Figure 15.

The condensate drain pan has a threaded female 3/4 inch NPT connection. Consult local codes or ordinances for specific requirements of condensate drain piping and disposal.

- To use the removable drain pan feature of this unit, some of the condensate line joints should assembled for easy removal and cleaning.
- Use a thin layer of Teflon tape or paste on drain pan connections and install only hand tight.
- Do not over tighten drain pan connections as damage to the drain pan may occur.
- Drain line MUST NOT block service access panels.
- Drain line must be no smaller than drain pan outlet and adequately sized to accommodate the condensate discharge from the unit.
- Drain line should slope away from unit a minimum of 1/8” per foot to ensure proper drainage.
- Drain line must be routed to an acceptable drain or outdoors in accordance with local codes.
- Do not connect condensate drain line to a closed sewer pipe.
- Drain line may need insulation or freeze protection in certain applications.

IV. WIRING

A.POWER SUPPLY

⚠ WARNING

TURN OFF THE MAIN ELECTRICAL POWER AT THE BRANCH CIRCUIT DISCONNECT CLOSEST TO THE UNIT BEFORE ATTEMPTING ANY WIRING. FAILURE TO DO SO CAN CAUSE ELECTRICAL SHOCK RESULTING IN PERSONAL INJURY OR DEATH.

1. **All wiring should be made in accordance with the National Electrical Code.** Consult the local power company to determine the availability of sufficient power to operate the unit. Check the voltage at power supply to make sure it corresponds to the unit's RATED VOLTAGE REQUIREMENT. Install a branch circuit disconnect near the rooftop, in accordance with the N.E.C., C.E.C. or local codes.
2. It is important that proper electrical power is available at the unit. Voltage should not vary more than 10% from that stamped on the unit nameplate. On three phase units, phases must be balanced within 3%.
3. For branch circuit wiring (main power supply to unit disconnect), the minimum wire size for the length of run can be determined from Table 1 using the circuit ampacity found on the unit rating plate. Use the smallest wire size allowable in Table 4 from the unit disconnect to unit.
4. For through the base wiring entry reference **Figure 18.** All fittings and conduit are field supplied for this application. Reference the chart with **Figure 18** for proper hole and conduit size.

NOTES:

1. For branch circuit wiring (main power supply to unit disconnect), the minimum wire size for the length of run can be determined from this table using the circuit ampacity found on the unit rating plate. From the unit disconnect to unit, the smallest wire size allowable in Table 1 may be used, as the disconnect must be in sight of the unit.
2. Wire size based on 75°C rated wire insulation for 1% voltage drop.
3. For more than 3 conductors in a raceway or cable, see the N.E.C. (C.E.C. in Canada) for derating the ampacity of each conductor.

IMPORTANT: THIS UNIT IS APPROVED FOR USE WITH COPPER CONDUCTORS ONLY CONNECTED TO UNIT CONTACTOR.

WARRANTY MAY BE JEOPARDIZED IF ALUMINUM WIRE IS CONNECTED TO UNIT CONTACTOR.

Special instructions apply for power wiring with aluminum conductors: Warranty is void if connections are not made per instructions.

Attach a length (6" or more) of recommended size copper wire to the unit contactor terminals L1, L2 and L3 for three phase.

Select the equivalent aluminum wire size from the tabulation below:

Splice copper wire pigtails to aluminum wire with U.L. recognized connectors for copper-aluminum splices. Please exercise the following instructions very carefully to obtain a positive and lasting connection:

1. Strip insulation from aluminum conductor.
2. Coat the stripped end of the aluminum wire with the recommended inhibitor, and wire brush the aluminum surface through inhibitor. INHIBITORS: Brundy-Pentex "A"; Alcoa-No. 2EJC; T & B-KPOR Shield.
3. Clean and recoat aluminum conductor with inhibitor.
4. Make the splice using the above listed wire nuts or split bolt connectors.
5. Coat the entire connection with inhibitor and wrap with electrical insulating tape.

FIGURE 16
RECOMMENDED BRANCH CIRCUIT DISCONNECT LOCATION

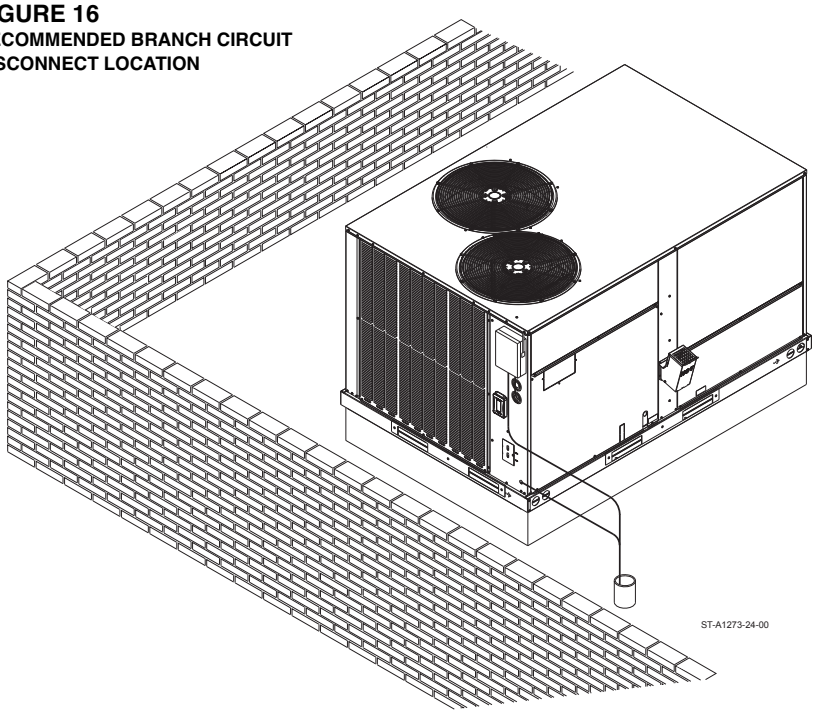


FIGURE 17


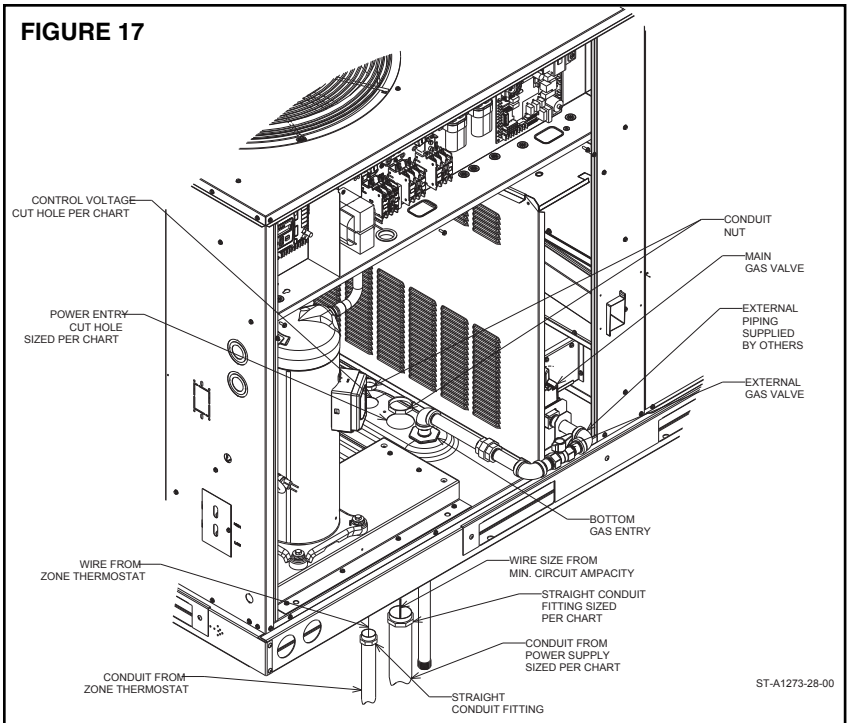


FIGURE 18
TYPICAL THERMOSTAT WIRING

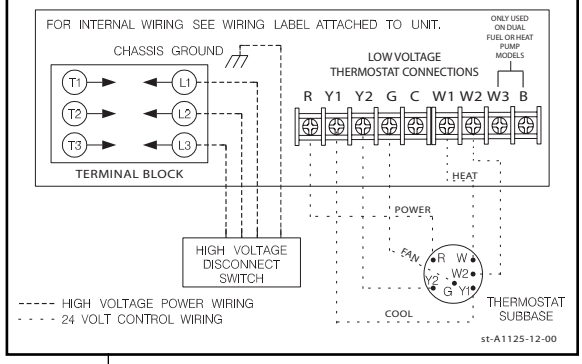

	WIRE SIZE, AWG											
	14	**12**	**10**	**8**	**6**	**4**	**3**	**2**	**1**	**0**	**00**	**000**
CONDUIT SIZE	1/2”	1/2”	1/2”	3/4”	1”	1”	1-1/4”	1-1/4”	1-1/2”	1-1/2”	2”	2”
HOLE SIZE	7/8”	7/8”	7/8”	1-31/32”	1-23/64”	1-23/64”	1-23/32”	1-23/32”	1-31/32”	1-31/32”	2-15/32”	2-15/32”

NOTES: 1. DETERMINE REQUIRED WIRE SIZE FROM MINIMUM CIRCUIT AMPACITY SHOWN IN INSTALLATION & OPERATING INSTRUCTION.
2. BOTTOM POWER ENTRY WILL NOT ACCOMMODATE WIRE LARGER THAN #2 AWG (SHADED AREA).

B. HOOK-UP

To wire unit, refer to the following hook-up diagram.

Refer to Figures 2 and 17 for location of wiring entrances.

Wiring to be done in the field between the unit and devices not attached to the unit, or between separate devices which are field installed and located, shall conform with the temperature limitation for Type T wire [63°F rise (35°C)] when installed in accordance with the manufacturer’s instructions.

C. INTERNAL WIRING

A diagram of the internal wiring of this unit is located on the inside of control access panel and in this manual. If any of the original wire as supplied with the appliance must be replaced, the wire gauge and insulation must be same as original wiring.

Transformer is factory wired for 230 volts on 208/230 volt models and must be changed for 208 volt applications. See unit wiring diagram for 208 volt wiring.

D. THERMOSTAT

The room thermostat must be compatible with the spark ignition control on the unit. Generally, all thermostats that are not of the “current robbing” type are compatible with the integrated furnace control. The low voltage wiring should be sized as shown in Table 1.

Install the room thermostat in accordance with the instruction sheet packed in the box with the thermostat. Run the thermostat lead wires through control entry opening (Figure 2 or Figure 17) and connect to the low voltage thermostat connections (see wiring diagram). Never install the thermostat on an outside wall or where it will be influenced by drafts, concealed hot or cold water pipes or ducts, lighting fixtures, radiation from fireplace, sun rays, lamps, televisions, radios or air streams from registers. Refer to instructions packed with the thermostat for “heater” selection or adjustment.

The following is a list of recommended thermostats to be used with or without an economizer:

TABLE 4

FIELD WIRE SIZE FOR 24 VOLT THERMOSTAT CIRCUITS							
		SOLID COPPER WIRE - AWG.					
Thermostat Load - Amps	3.0	16	14	12	10	10	10
	2.5	16	14	12	12	12	10
	2.0	18	16	14	12	12	10
		50	100	150	200	250	300
		Length of Run – Feet (1)					

(1) The total wire length is the distance from the furnace to the thermostat and back to the furnace.

NOTE: DO NOT USE CONTROL WIRING SMALLER THAN NO. 18 AWG.

V. FURNACE SECTION CONTROLS AND IGNITION SYSTEM

NORMAL FURNACE OPERATING SEQUENCE

This unit is equipped with a two stage integrated direct spark ignition control.

NORMAL HEAT MODE

A. Call For First Stage (low fire) Only:

1. Zone thermostat contacts close, a call for first stage (low fire) heat is initiated.
2. Control runs self check.
3. Control checks the high-limit switch for normally closed contacts, the pressure switch for normally open contacts, and all flame rollout switches for continuity.
4. Control energizes the inducer.
5. Control checks the pressure switch for closure.
6. If the pressure switch is closed, the control starts a 30 second prepurge. If the pressure switch is still open after 180 seconds, the inducer will be energized until closure.
7. After prepurge timeout, control initiates spark for 2 seconds minimum, 7 second maximum ignition trial, initiates 45 second, second stage (high fire) warm up timing.
8. Control detects flame, de-energizes spark and initiates 45 second delay on blower timing.
9. After a fixed 45 seconds indoor blower delay on, the control energizes the indoor blower.
10. After the 45 second second stage warmup period control checks thermostat input. If only W1 is called for, W2 is de-energized.
11. Control enters normal operating loop where all inputs are continuously checked.

B. Call For Second Stage, After First Stage Established; Starting from A.11:

1. If a call for second stage (high fire) is initiated after a call for first stage heat is established, the control assures the pressure switch is closed and energizes the second stage of the gas valve.
2. Control enters normal operating loop where all inputs are continuously checked.

C. Second Stage Satisfied; First Stage Still Called For; Starting From B.2:

1. Once the call for second stage is satisfied, the control reduces the gas valve to first stage.
2. Control enters normal operating loop where all inputs are continuously checked.

D. First Stage Satisfied:

1. Zone thermostat is satisfied.
2. Control de-energizes gas valve.
3. Control senses loss of flame.
4. Control initiates 5 second inducer postpurge and 90 second indoor blower delay off.
5. Control de-energizes inducer blower.
6. Control de-energizes indoor blower.
7. Control in the stand by mode with solid red LED.

E. First Stage and Second Stage Called Simultaneously:

1. Zone thermostat contacts close, a call for first stage (low fire) and second stage (high fire) heat is initiated.
2. Control runs self check.
3. Control checks the limit switch for normally closed contacts, the switch for normally open contacts, and the flame rollout switch for continuity.
4. Control energizes the inducer.
5. Control checks the pressure switch for closure.
6. If the pressure switch is closed, the control starts a 30 second prepurge. If the switch is still open after 180 seconds, the inducer will be energized until closure.
7. After prepurge timeout, control initiates spark for 2 seconds minimum, 7 second maximum ignition trial, and initiates 45 second second stage warm up timing.
8. Control detects flame, de-energizes spark and starts a 45 second indoor blower delay on timing.
9. After a fixed 45 seconds indoor blower delay on, the control energizes the indoor blower.
10. After the 45 seconds second stage warmup period control checks the thermostat input. If W1 and W2 is present control enters normal operating loop where all inputs are continuously checked.

F. First Stage and Second Stage Removed Simultaneously:

1. Upon a loss of W1 and W2 the gas valve is de-energized.
2. Upon a loss of flame, the inducer will complete a 5 second postpurge and the indoor blower will complete a 90 second delay off.
3. Control in the stand by mode with solid red LED.

The integrated control is a four-ignition system.

After a total of four cycles without sensing main burner flame, the system goes into a 100% lockout mode. After one hour, the ignition control repeats the prepurge and ignition cycles for 4 tries and then go into 100% lockout mode again. It continues this sequence of cycles and lockout each hour until ignition is successful or power is interrupted. During the lockout mode, neither the ignitor or gas valve will be energized until the system is reset by turning the thermostat to the “OFF” position or interrupting the electrical power to the unit for 3 seconds or longer. The induced draft blower and main burner will shut off when the thermostat is satisfied.

The circulating air blower will start and run on the heating speed if the thermostat fan switch is in the “ON” position.

All integrated furnace controls come standard with a 7 segment diagnostic display. During standby mode with no fault codes present, the display will read “0” (zero). During normal thermostat heating, cooling or continuous fan operations a letter will be displayed to describe the mode of operation outlined in the Wiring Diagrams: Electrical Wiring Schematic: Alarm Codes.

OPERATING INSTRUCTIONS

This appliance is equipped with integrated furnace control. This device lights the main burners each time the room thermostat (closes) calls for heat. See operating instructions on the back of the furnace/controls access panel.

⚠ WARNING

DO NOT ATTEMPT TO MANUALLY LIGHT THIS FURNACE WITH A MATCH OR ANY OPEN FLAME. ATTEMPTING TO DO SO CAN CAUSE AN EXPLOSION OR FIRE RESULTING IN PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

TO START THE FURNACE

1. Set the thermostat to its lowest setting.
2. Turn off all electric power to the appliance.
3. This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
4. Remove control door.
5. Move control switch/knob on the gas valve to the “OFF” position.
6. Wait five (5) minutes to clear out any gas. Then smell for gas, including near the floor. If you smell gas, STOP! Follow B in the safety information on the Operating Instructions located on the back of the controls/access panel. If you don’t smell gas, go to the next step.
7. Move the gas control switch/knob on the gas valve from “OFF” position to “ON” position. Operate this appliance with the gas control switch/knob on the gas valve in the “ON” position only.
8. Replace the control door.
9. Turn on all electric power to the appliance.
10. Set the thermostat to the desired setting.
11. If the appliance will not operate, follow the instructions below on how to shut down the furnace.

⚠ WARNING

THE SPARK IGNITOR AND IGNITION LEAD FROM THE IGNITION CONTROL ARE HIGH VOLTAGE. KEEP HANDS OR TOOLS AWAY TO PREVENT ELECTRICAL SHOCK. SHUT OFF ELECTRICAL POWER BEFORE SERVICING ANY OF THE CONTROLS. FAILURE TO ADHERE TO THIS WARNING CAN RESULT IN PERSONAL INJURY OR DEATH.

The initial start-up on a new installation may require the control system to be energized for some time until air has bled through the system and fuel gas is available at the burners.

TO SHUT DOWN FURNACE

1. Set the thermostat to the lowest setting.
2. Turn off all electric power to the appliance if service is to be performed.
3. Remove control door.
4. Move control switch/knob on the gas valve to the "OFF" position.
5. Replace control door.

⚠ WARNING

SHOULD OVERHEATING OCCUR OR THE GAS SUPPLY FAIL TO SHUT OFF, SHUT OFF THE MANUAL GAS VALVE TO THE APPLIANCE BEFORE SHUTTING OFF THE ELECTRICAL SUPPLY. FAILURE TO DO SO CAN RESULT IN AN EXPLOSION OR FIRE CAUSING PROPERTY DAMAGE, SEVERE PERSONAL INJURY OR DEATH!

BURNERS

Burners for these units have been designed so that field adjustment is not required. Burners are tray-mounted and accessible for easy cleaning when required.

MANUAL RESET OVERTEMPERATURE CONTROL

Two manual reset overtemperature controls are located on the burner shield. These devices senses blockage in the heat exchanger or insufficient combustion air. This shuts off the main burners if excessive temperatures occur in the burner compartment.

Operation of this control indicates an abnormal condition. Therefore, the unit should be examined by a qualified installer, service agency, or the gas supplier before being placed back into operation.

⚠ WARNING

Do not jumper this device! Do not reset the overtemperature control without taking corrective action to assure that an adequate supply of combustion air is maintained under all conditions of operation. Failure to do so can result in carbon monoxide poisoning or death. Replace this control only with the identical replacement part.

PRESSURE SWITCH

This furnace has two pressure switches for sensing a blocked exhaust or a failed induced draft blower. They are normally open and close when the induced draft blower starts, indicating air flow through the combustion chamber.

LIMIT CONTROL

The supply air high temperature limit cut-off is set at the factory and cannot be adjusted. It is calibrated to prevent the air temperature leaving the furnace from exceeding the maximum outlet air temperature.

⚠ WARNING

DO NOT JUMPER THIS DEVICE! DOING SO CAN CAUSE A FIRE OR EXPLOSION RESULTING IN PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

IMPORTANT: *Replace this control only with the identical replacement part.*

VI. COOLING SECTION OPERATION

COOLING MODE

A. **Call for first stage cooling**

1. Zone thermostat contacts close and a call for cooling is initiated.
2. Inputs 'Y1' and 'G'. After 1 sec. delay, control energzes indoo blower and to the control are energized.
3. Control senses 'Y1' and 'G'. After 1 sec. delay, control energizes indoor blower and first stage compressor.
4. Control enters normal operating loop were all inputs are continuously checked.
5. Zone thermostat is satisfied.
6. Control de-energizes indoor blower relay after 80 second indoor blowerl delay off.
7. Control in the stand by mode with solid red LED.

B. **Call for second stage cooling. After first stage cooling established: starting from A4.**

1. If a call for second stage cooling is initiated after a call for first stage cooling is established, the control energizes Y2 and energizes the second stage compressor.
2. Control enters normal operating loop where all inputs are continuously checked.

C. **Second stage satisfied: first stage still called for: starting from B2.**

1. Y2 is de-energized and second stage compressor is de-energized.

D. **First stage and second stage called simultaneously.**

1. Zone thermostat contacts close, a call for first and second stage cooling is initiated.
2. Inputs Y1, Y2 and G to the control are energized.
3. Control senses Y1, Y2 and G, after 1 second delay, control energizes indoor blower, first and second stage compressor are energized.

E. **First stage and second stage removed simultaneously.**

1. Upon a loss of Y1 and Y2 each compressor is de-energized. Control de-energizes indoor blower relay after 80 second indoor blower delay off.
2. Control in the stand by mode with solid red LED.

CONTINUOUS FAN MODE

A 'G' input only indicates a zone thermostat call for continuous indoor blower operation.

BLOWER VFD (VFD equipped models only)

No adjustments of the VFD are required for installation or operation of this unit.

VFD Model
Schneider Altivar 212 (factory programmed).

Replacement
The VFD is horsepower and voltage specific therefore; replacement must be the same model as the existing. A preprogrammed VFD is recommended and available from ProStock. A non-programmed Schneider Altivar 212 may be used but must be programmed exactly per the included VFD I & O Manual (92-104334-01) programming guide for safe and proper function.

Operation
The purpose of the VFD is to allow low airflow in Fan Only (G) and First Stage Cooling (Y1) operation of a two stage unit. Unit air balancing should be performed at High Airflow (100% at RTU-C, 60Hz at VFD) by adjusting the blower motor sheave. High Airflow always occurs during

a W1, W2, or Y2 call. For air balancing, without heating or cooling, the fan only speed can be temporarily increased to 100% by adjustment through the RTU-C keypad. To meet ASHRAE 90.1-2010 and for best performance, First Stage Cool and Fan Only speeds are factory set at 50% airflow (30 Hz at VFD). Both of these speeds are independently adjustable at the RTU-C. The VFD display will indicate an equivalent value in Hz (i.e. Low Cool adjusted to 60% at RTU-C will display as 36Hz at the VFD). A 20 second (adjustable at the VFD) ramp-up or ramp-down is used whenever the blower speed is increased or decreased. Low speed blower operation first ramps to 75%, to close fan proving switch, before ramping to the desired speed. Since the VFD operates on 24VDC control voltage, a blower relay (with 24VAC across the coil) is used to turn the VFD on. Blower speeds are changed via Modbus communication from the RTU-C.

For more information, see VFD I & O Manual (92-104334-01).

VII. SYSTEM OPERATING INFORMATION

ADVISE THE CUSTOMER

1. Change the air filters regularly. The heating system operates better, more efficiently and more economically.
2. Arrange the furniture and drapes so that the supply air registers and the return air grilles are unobstructed.
3. Close doors and windows. This reduces the heating and cooling load on the system.
4. Avoid excessive use of exhaust fans.
5. Do not permit the heat generated by television, lamps or radios to influence the thermostat operation.
6. Except for the mounting platform, keep all combustible articles three feet from the unit and exhaust system.
7. ***IMPORTANT:*** *Replace all blower doors and compartment cover after servicing the unit. Do not operate the unit without all panels and doors securely in place.*
8. Do not allow snow or other debris to accumulate in the vicinity of the appliance.

FURNACE SECTION MAINTENANCE

The unit's furnace should operate for many years without excessive scale build-up in flue passageways; however, it is recommended that a qualified installer, service agency, or the gas supplier annually inspect the flue passageways, the exhaust system and the burners for continued safe operation, paying particular attention to deterioration from corrosion or other sources.

If during inspection the flue passageways and exhaust system are determined to require cleaning, the following procedures should be followed **(by a qualified installer, service agency, or gas supplier):**

1. **Turn off the electrical power to the unit and set the thermostat to the lowest temperature.**
2. **Shut off the gas supply to the unit either at the meter or at manual valve in the supply piping.**

⚠ WARNING

LABEL ALL WIRES PRIOR TO DISCONNECTION WHEN SERVICING CONTROLS. WIRING ERRORS CAN CAUSE IMPROPER AND DANGEROUS OPERATION RESULTING IN FIRE, ELECTRICAL SHOCK, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

3. Remove the furnace controls access panel and the control box cover.
4. Disconnect the gas supply piping from the gas valve.
5. Disconnect the wiring to the induced draft blower motor, gas valve, flame sensor, and flame roll-out control, and ignitor cable. **Mark all wires disconnected for proper reconnection**.
6. Remove the screws (4) connecting the burner tray to the heat exchanger mounting panel.
7. Remove the burner tray and the manifold assembly from the unit.
8. Remove the screws (10) connecting the induced draft blower to the collector box and screws (12) connecting the inducer mounting plate to the heat exchanger center panel. Remove the induced draft blower and the collector box from the unit.
9. Remove the turbulators from inside the heat exchangers by inserting the blade of a screwdriver under the locking tabs. Pop the tabs out of the expanded grooves of the heat exchanger. Slide the turbulators out of the heat exchangers.
10. Direct a water hose into the outlet of the heat exchanger top. Flush the inside of each heat exchanger tube with water. Blow out each tube with air to remove excessive moisture.
11. Reassemble (steps 1 through 9 in reverse order). **Be careful not to strip out the screw holes used to mount the collector box and inducer blower. Replace inducer blower gasket and collector box gasket with factory replacements if damaged.**

⚠ WARNING

HOLES IN THE EXHAUST TRANSITION OR HEAT EXCHANGER CAN CAUSE TOXIC FUMES TO ENTER THE HOME. THE EXHAUST TRANSITION OR HEAT EXCHANGER MUST BE REPLACED IF THEY HAVE HOLES OR CRACKS IN THEM. FAILURE TO DO SO CAN CAUSE CARBON MONOXIDE POISONING RESULTING IN PERSONAL INJURY OR DEATH.

The manufacturer recommends that a qualified installer, service agency or the gas supplier visually inspect the burner flames for the desired flame appearance at the beginning of the heating season and approximately midway in heating season.

The manufacturer also recommends that a qualified installer, service agency or the gas supplier clean the flame sensor with steel wool at the beginning of the heating season.

⚠ WARNING

DISCONNECT MAIN ELECTRICAL POWER TO THE UNIT BEFORE ATTEMPTING MAINTENANCE. FAILURE TO DO SO MAY RESULT IN ELECTRICAL SHOCK OR SEVERE PERSONAL INJURY OR DEATH.

LUBRICATION

IMPORTANT: DO NOT attempt to lubricate the bearings on the blower motor or the induced draft blower motor. Addition of lubricants can reduce the motor life and void the warranty.

The blower motor and induced draft blower motor are prelubricated by the manufacturer and do not require further attention.

A qualified installer, service agency or the gas supplier must periodically clean the motors to prevent the possibility of overheating due to an accumulation of dust and dirt on the windings or on the motor exterior. And, as suggested elsewhere in these instructions, the air filters should be kept clean because dirty filters can restrict air flow and the motor depends upon sufficient air flowing across and through it to prevent overheating.

COOLING SECTION MAINTENANCE

⚠ WARNING

DISCONNECT MAIN ELECTRICAL POWER TO THE UNIT BEFORE ATTEMPTING MAINTENANCE. FAILURE TO DO SO CAN CAUSE ELECTRICAL SHOCK RESULTING IN SEVERE PERSONAL INJURY OR DEATH.

It is recommended that at the beginning of each cooling season a qualified installer or service agency inspect and clean the cooling section of this unit. The following areas should be addressed: evaporator coil. condenser coil, condenser fan motor and venturi area.

To inspect the evaporator coil:

1. Open the filter access panel and remove filters. Also, remove blower access panel. In downflow applications remove the horizontal return to gain access.

⚠ WARNING

LABEL ALL WIRES PRIOR TO DISCONNECTION WHEN SERVICING THE UNIT. WIRING ERRORS CAN CAUSE IMPROPER AND DANGEROUS OPERATION RESULTING IN FIRE, ELECTRICAL SHOCK, PROPERTY DAMAGE, SEVERE PERSONAL INJURY OR DEATH.

2. Shine a flashlight on the evaporator coil (both sides) and inspect for accumulation of lint, insulation, etc.
3. If coil requires cleaning, follow the steps shown below.

Cleaning Evaporator Coil

1. The coil should be cleaned when it is dry. If the coil is coated with dirt or lint, vacuum it with a soft brush attachment. Be careful not to bend the coil fins.
2. If the coil is coated with oil or grease, clean it with a mild detergent-and-water solution. Rinse the coil thoroughly with water. **IMPORTANT: Do not** use excessive water pressure. Excessive water pressure can bend the fins and tubing of the coil and lead to inadequate unit performance. Be careful not to splash water excessively into unit.
3. Inspect the drain pan and condensate drain at the same time the evaporator coil is checked. Clean the drain pan by flushing with water and removing any matters of obstructions which may be present.
4. Go to next section for cleaning the condenser coil.

Cleaning Condenser Coil, Condenser Fan, Circulation Air Blower and Venturi

1. Remove the compressor access panel. Disconnect the wires to the condenser fan motor in the control box (see wiring diagram).
2. The coil should be cleaned when it is dry. If the coil is coated with dirt or lint, vacuum it with a soft brush attachment. Be careful not to bend the coil fins.
3. If the coil is coated with oil or grease, clean it with a mild detergent-and-water solution. Rinse the coil thoroughly with water. **IMPORTANT: Do not** use excessive water pressure. Excessive water pressure can bend the fins and tubing of the coil and lead to inadequate unit performance. Be careful not to splash water excessively into unit.
4. The venturi should also be inspected for items of obstruction such as collections of grass, dirt or spider webs. Remove any that are present.
5. Inspect the circulating air blower wheel and motor for accumulation of lint, dirt or other obstruction and clean it necessary. Inspect the blower motor mounts and the blower housing for loose mounts or other damage. Repair or replace if necessary.

Re-assembly

1. Reconnect fan motor wires per the wiring diagram attached to the back of the cover.
2. Close the filter control and replace the blower/evaporator coil access panels.
3. Replace the control box cover.
4. Restore electrical power to the unit and check for proper operation, especially the condenser fan motor.

REPLACEMENT PARTS

Contact your local distributor for a complete parts list.

TROUBLESHOOTING

Refer to Figures 19 and 20 for determining cause of unit problems.

WIRING DIAGRAMS

Figures 21 through 40 are complete wiring diagrams for the unit and its power sources. Also located on back of compressor access panel.

CHARGING

See pages 46 through 52 for proper charging information.

AIRFLOW PERFORMANCE — 7.5 TON [26.4kW] — 60 Hz — DOWNFLOW

Air Flow CFM [L/s]	Model RGEDZ*090* Voltage 208/230, 460, 575 — 3 phase 60 Hz																																					
	External Static Pressure — Inches of Water [kPa]																																					
	0.1 [.02]		0.2 [.05]		0.3 [.07]		0.4 [.10]		0.5 [.12]		0.6 [.15]		0.7 [.17]		0.8 [.20]		0.9 [.22]		1.0 [.25]		1.1 [.27]		1.2 [.30]		1.3 [.32]		1.4 [.35]		1.5 [.37]		1.6 [.40]		1.7 [.42]		1.8 [.45]		1.9 [.47]		2.0 [.50]	
	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W
2400 [1133]	—	—	551	782	585	814	619	848	652	885	684	926	717	969	748	1016	780	1065	810	1118	841	1174	870	1233	900	1294	929	1359	957	1427	985	1498	1012	1572	1039	1649	1065	1729	1091	1813
2500 [1180]	—	—	562	816	596	848	629	884	661	923	693	964	725	1009	756	1057	787	1108	817	1162	846	1219	876	1279	904	1343	933	1409	960	1478	987	1550	1014	1626	1040	1704	1066	1786	1092	1870
2600 [1227]	—	—	574	851	607	885	639	922	671	962	702	1006	733	1052	764	1101	794	1153	823	1209	852	1267	881	1329	909	1393	937	1461	964	1531	990	1605	1016	1682	1042	1762	1067	1844	1092	1930
2700 [1274]	553	857	585	889	618	925	650	963	681	1004	712	1049	742	1096	772	1147	801	1201	830	1258	858	1317	886	1380	914	1446	941	1515	967	1587	993	1662	1019	1740	1044	1821	1068	1905	1092	1993
2800 [1321]	565	896	597	930	629	966	660	1006	691	1049	721	1095	751	1144	780	1196	808	1251	837	1309	864	1370	892	1434	919	1501	945	1572	971	1645	996	1721	1021	1801	1045	1883	1069	1969	1093	2057
2900 [1368]	577	937	609	972	640	1010	670	1051	701	1096	730	1143	759	1193	788	1246	816	1303	843	1362	871	1425	897	1490	923	1559	949	1630	974	1705	999	1783	1023	1864	1047	1948	1070	2035	1093	2124
3000 [1416]	590	981	621	1017	651	1057	681	1099	710	1145	739	1193	768	1245	796	1300	823	1357	850	1418	877	1482	903	1549	928	1619	953	1692	978	1768	1002	1847	1026	1929	1049	2014	1072	2103	1094	2194
3100 [1463]	602	1027	633	1065	662	1105	692	1149	720	1196	749	1246	777	1299	804	1355	831	1414	857	1476	883	1541	908	1610	933	1681	958	1755	982	1833	1005	1913	1028	1997	1051	2083	1073	2173	1094	2266
3200 [1510]	615	1075	645	1114	674	1157	702	1202	731	1250	758	1301	785	1356	812	1413	838	1473	864	1537	889	1603	914	1673	938	1746	962	1821	986	1900	1008	1982	1031	2067	1053	2155	1074	2246	1095	2340
3300 [1557]	628	1126	657	1166	685	1210	713	1256	741	1306	768	1359	794	1414	820	1473	846	1535	871	1600	896	1668	920	1739	944	1813	967	1890	989	1970	1012	2053	1033	2139	1055	2229	1075	2321	1096	2416
3400 [1604]	640	1179	669	1221	697	1266	724	1314	751	1365	777	1419	803	1476	829	1536	854	1599	878	1665	902	1734	926	1807	949	1882	971	1960	993	2042	1015	2126	1036	2214	1057	2305	1077	2398	1097	2495
3500 [1652]	653	1235	681	1278	708	1324	735	1373	761	1425	787	1481	812	1539	837	1601	861	1665	885	1733	909	1803	932	1877	954	1954	976	2034	997	2116	1018	2202	1039	2291	1059	2383	1078	2478	1097	2576
3600 [1699]	666	1292	693	1337	720	1384	746	1435	771	1489	797	1545	821	1605	845	1668	869	1734	892	1803	915	1875	938	1950	959	2028	981	2109	1001	2193	1022	2280	1042	2371	1061	2464	1080	2560	1098	2660

NOTE: A/F-Drive left of bold line, B/G-Drive right of bold line, C/H-Drive right of double line.

Drive Package	A/F						B/G						C/H					
Motor H.P. [W]	2 [1491.4]						3 [2237.1]						3 [2237.1]					
Blower Sheave	AK84H						AK84H						AK84H					
Motor Sheave	1VL40*7/8						1VP50*7/8						1VP56*7/8					
Belt	A49						A50						A51					
Turns Open	0	1	**2**	3	4	5	0	1	2	3	4	**5**	0	1	2	3	4	**5**
RPM	767	721	**678**	635	590	548	992	949	908	866	823	**782**	1108	1067	1029	987	946	**905**

NOTES: 1. Factory sheave settings are shown in bold type.
2. Do not set motor sheave below minimum or maximum turns open shown.
3. Re-adjustment of sheave required to achieve rated airflow at AHRI minimum External Static Pressure
4. Drive data shown is for vertical airflow with dry coil. Add component resistance (below) to duct resistance to determine total External Static Pressure.

Airflow	AIRFLOW CORRECTION FACTORS *			COMPONENT AIRFLOW RESISTANCE			
				Wet Coil	Vertical Economizer RA Damper Open	Concentric Diffuser RXRN-AEF2000 & Concentric Adapter RXMC-DD01 (Flush)	Concentric Diffuser RXRN-AED2000 & Concentric Adapter RXMC-DD01 (Drop)
CFM [L/s]	Total MBH	Sensible MBH	Power kW	Resistance — Inches of Water [kPa]			
2400 [1133]	0.96	0.89	0.98	0.04 [.01]	0.01 [.00]	0.66 [.16]	0.53 [.13]
2500 [1180]	0.96	0.90	0.99	0.05 [.01]	0.02 [.00]	0.71 [.18]	0.57 [.14]
2600 [1227]	0.97	0.92	0.99	0.05 [.01]	0.02 [.01]	0.75 [.19]	0.60 [.15]
2700 [1274]	0.97	0.93	0.99	0.05 [.01]	0.03 [.01]	0.80 [.20]	0.65 [.16]
2800 [1321]	0.98	0.95	0.99	0.06 [.01]	0.04 [.01]	0.85 [.21]	0.69 [.17]
2900 [1368]	0.98	0.96	1.00	0.06 [.02]	0.04 [.01]	0.91 [.23]	0.74 [.18]
3000 [1416]	0.99	0.97	1.00	0.07 [.02]	0.05 [.01]	0.96 [.24]	0.79 [.20]
3100 [1463]	1.00	0.99	1.00	0.07 [.02]	0.06 [.02]	1.02 [.25]	0.86 [.21]
3200 [1510]	1.00	1.00	1.01	0.07 [.02]	0.07 [.02]	1.08 [.27]	0.92 [.23]
3300 [1557]	1.01	1.02	1.01	0.08 [.02]	0.08 [.02]	1.15 [.29]	0.99 [.25]
3400 [1604]	1.01	1.03	1.01	0.08 [.02]	0.09 [.02]	1.21 [.30]	1.05 [.26]
3500 [1652]	1.02	1.05	1.01	0.09 [.02]	0.10 [.02]	1.29 [.32]	1.09 [.27]
3600 [1699]	1.02	1.06	1.02	0.09 [.02]	0.11 [.03]	1.36 [.34]	1.13 [.28]

* Multiply correction factor times gross performance data — resulting sensible capacity cannot exceed total capacity.

[ ] Designates Metric Conversions

AIRFLOW PERFORMANCE — 7.5 TON [26.4kW] — 60 Hz — SIDEFLOW

Air Flow CFM [L/s]	Model RGEDZ*090* Voltage 208/230, 460, 575 — 3 phase 60 Hz																																					
	External Static Pressure — Inches of Water [kPa]																																						
	0.1 [.02]		0.2 [.05]		0.3 [.07]		0.4 [.10]		0.5 [.12]		0.6 [.15]		0.7 [.17]		0.8 [.20]		0.9 [.22]		1.0 [.25]		1.1 [.27]		1.2 [.30]		1.3 [.32]		1.4 [.35]		1.5 [.37]		1.6 [.40]		1.7 [.42]		1.8 [.45]		1.9 [.47]		2.0 [.50]	
	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W
2400 [1133]	—	—	—	—	558	822	594	853	629	887	663	925	697	965	730	1009	763	1056	794	1106	826	1159	856	1216	886	1275	915	1338	943	1404	971	1474	998	1546	1025	1622	1051	1700	1076	1782
2500 [1180]	—	—	—	—	568	848	604	881	638	917	672	956	705	998	738	1044	769	1092	801	1144	831	1199	861	1258	890	1319	919	1384	947	1452	974	1523	1001	1597	1027	1674	1052	1755	1077	1838
2600 [1227]	—	—	543	846	579	877	613	912	647	950	681	991	713	1035	745	1082	777	1132	807	1186	837	1243	867	1303	895	1366	923	1433	951	1502	978	1575	1004	1651	1029	1730	1054	1812	1078	1898
2700 [1274]	—	—	554	877	589	910	623	946	657	986	689	1029	722	1074	753	1124	784	1176	814	1231	844	1290	872	1352	901	1417	928	1485	955	1556	981	1631	1007	1708	1032	1789	1056	1873	1079	1961
2800 [1321]	—	—	566	911	600	946	634	984	666	1026	699	1070	730	1118	761	1169	792	1223	821	1280	850	1340	878	1404	906	1470	933	1540	959	1613	985	1690	1010	1769	1034	1852	1058	1938	1081	2027
2900 [1368]	543	916	577	949	611	986	644	1026	676	1069	708	1115	739	1164	770	1217	799	1273	828	1332	857	1394	885	1459	912	1528	938	1599	964	1674	989	1752	1014	1833	1037	1918	1061	2005	1083	2096
3000 [1416]	555	955	589	990	622	1029	655	1070	687	1115	718	1163	748	1214	778	1269	807	1326	836	1387	864	1451	891	1518	918	1588	944	1662	969	1738	994	1818	1017	1901	1041	1987	1063	2077	1085	2169
3100 [1463]	568	998	601	1035	634	1075	666	1118	697	1165	728	1215	758	1268	787	1324	816	1383	844	1445	871	1511	898	1580	924	1652	949	1727	974	1806	998	1887	1022	1972	1044	2060	1066	2151	1088	2245
3200 [1510]	581	1044	614	1083	646	1125	677	1170	708	1218	738	1270	768	1324	796	1382	824	1443	852	1507	879	1575	905	1646	931	1719	955	1796	980	1876	1003	1960	1026	2046	1048	2136	1070	2229	1091	2325
3300 [1557]	594	1093	626	1134	658	1178	689	1225	719	1275	749	1328	778	1384	806	1444	833	1507	860	1573	887	1642	912	1714	937	1790	962	1869	985	1951	1008	2036	1031	2124	1052	2216	1073	2310	1094	2408
3400 [1604]	607	1146	639	1189	670	1234	701	1283	730	1335	759	1390	788	1448	815	1509	843	1574	869	1642	895	1713	920	1787	944	1864	968	1945	991	2028	1014	2115	1036	2205	1057	2298	1077	2395	1097	2494
3500 [1652]	621	1203	652	1247	683	1294	713	1344	742	1398	770	1455	798	1515	825	1578	852	1644	878	1714	903	1786	928	1862	952	1941	975	2024	997	2109	1019	2198	1041	2290	1061	2385	1081	2483	1101	2584
3600 [1699]	635	1262	666	1308	696	1357	725	1409	754	1465	782	1523	809	1585	836	1650	862	1718	887	1789	912	1864	936	1941	959	2022	982	2106	1004	2194	1025	2284	1046	2378	1066	2474	1086	2574	1104	2677

NOTE: A/F-Drive left of bold line, B/G-Drive right of bold line, C/H-Drive right of double line.

Drive Package	A/F						B/G						C/H					
Motor H.P. [W]	2 [1491.4]						3 [2237.1]						3 [2237.1]					
Blower Sheave	AK84H						AK84H						AK84H					
Motor Sheave	1VL40*7/8						1VP50*7/8						1VP56*7/8					
Belt	A49						A50						A51					
Turns Open	0	1	**2**	3	4	5	0	1	2	3	4	**5**	0	1	2	3	4	**5**
RPM	765	720	**676**	633	589	544	989	949	908	865	823	**780**	1108	1067	1029	987	946	**905**

NOTES: 1. Factory sheave settings are shown in bold type.
2. Do not set motor sheave below minimum or maximum turns open shown.
3. Re-adjustment of sheave required to achieve rated airflow at AHRI minimum External Static Pressure
4. Drive data shown is for horizontal airflow with dry coil. Add component resistance (below) to duct resistance to determine total External Static Pressure.

Airflow	AIRFLOW CORRECTION FACTORS *			COMPONENT AIRFLOW RESISTANCE			
				Wet Coil	Horizontal Economizer RA Damper Open	Concentric Diffuser RXRN-AEF2000 & Concentric Adapter RXMC-DD01 (Flush)	Concentric Diffuser RXRN-AED2000 & Concentric Adapter RXMC-DD01 (Drop)
CFM [L/s]	Total MBH	Sensible MBH	Power kW	Resistance — Inches of Water [kPa]			
2400 [1133]	0.96	0.89	0.98	0.04 [.01]	0.01 [.00]	0.66 [.16]	0.53 [.13]
2500 [1180]	0.96	0.90	0.99	0.05 [.01]	0.02 [.00]	0.71 [.18]	0.57 [.14]
2600 [1227]	0.97	0.92	0.99	0.05 [.01]	0.02 [.00]	0.75 [.19]	0.60 [.15]
2700 [1274]	0.97	0.93	0.99	0.05 [.01]	0.03 [.01]	0.80 [.20]	0.65 [.16]
2800 [1321]	0.98	0.95	0.99	0.06 [.01]	0.04 [.01]	0.85 [.21]	0.69 [.17]
2900 [1368]	0.98	0.96	1.00	0.06 [.02]	0.04 [.01]	0.91 [.23]	0.74 [.18]
3000 [1416]	0.99	0.97	1.00	0.07 [.02]	0.05 [.01]	0.96 [.24]	0.79 [.20]
3100 [1463]	1.00	0.99	1.00	0.07 [.02]	0.06 [.01]	1.02 [.25]	0.86 [.21]
3200 [1510]	1.00	1.00	1.01	0.07 [.02]	0.07 [.02]	1.08 [.27]	0.92 [.23]
3300 [1557]	1.01	1.02	1.01	0.08 [.02]	0.08 [.02]	1.15 [.29]	0.99 [.25]
3400 [1604]	1.01	1.03	1.01	0.08 [.02]	0.09 [.02]	1.21 [.30]	1.05 [.26]
3500 [1652]	1.02	1.05	1.01	0.09 [.02]	0.10 [.02]	1.29 [.32]	1.09 [.27]
3600 [1699]	1.02	1.06	1.02	0.09 [.02]	0.11 [.03]	1.36 [.34]	1.13 [.28]

* Multiply correction factor times gross performance data — resulting sensible capacity cannot exceed total capacity.

[ ] Designates Metric Conversions

AIRFLOW PERFORMANCE — 8.5 TON [29.9kW] — 60 Hz — DOWNFLOW

Air Flow CFM [L/s]	Model RGEDZ*102* Voltage 208/230, 460, 575 — 3 phase 60 Hz																																					
	External Static Pressure — Inches of Water [kPa]																																						
	0.1 [.02]		0.2 [.05]		0.3 [.07]		0.4 [.10]		0.5 [.12]		0.6 [.15]		0.7 [.17]		0.8 [.20]		0.9 [.22]		1.0 [.25]		1.1 [.27]		1.2 [.30]		1.3 [.32]		1.4 [.35]		1.5 [.37]		1.6 [.40]		1.7 [.42]		1.8 [.45]		1.9 [.47]		2.0 [.50]	
	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W
2700 [1274]	—	—	561	894	596	934	631	975	665	1018	698	1062	730	1108	762	1155	793	1203	823	1253	853	1304	882	1357	910	1411	937	1467	964	1524	990	1583	1015	1643	1039	1704	1063	1767	1086	1832
2800 [1321]	—	—	573	927	608	969	642	1013	676	1058	708	1104	740	1152	771	1201	802	1252	832	1304	861	1358	889	1413	917	1470	943	1528	970	1587	995	1648	1020	1711	1044	1775	1067	1840	1090	1907
2900 [1368]	—	—	586	964	620	1008	654	1054	687	1101	719	1150	750	1200	781	1252	811	1305	840	1360	869	1416	897	1473	924	1532	950	1593	976	1654	1001	1718	1025	1782	1048	1848	1071	1916	1093	1985
3000 [1416]	564	959	599	1004	633	1051	666	1099	698	1149	730	1200	761	1253	791	1307	820	1362	849	1419	877	1477	904	1537	931	1598	957	1661	982	1725	1006	1791	1030	1858	1053	1926	1075	1996	1097	2067
3100 [1463]	578	1001	612	1048	645	1098	678	1148	710	1200	741	1254	771	1308	801	1365	830	1423	858	1482	886	1542	912	1605	939	1668	964	1733	989	1800	1012	1868	1036	1937	1058	2008	1080	2080	1101	2154
3200 [1510]	592	1046	625	1096	658	1148	690	1201	721	1255	752	1311	782	1368	811	1427	840	1487	867	1548	894	1611	921	1676	946	1742	971	1809	995	1878	1019	1948	1041	2020	1063	2093	1085	2168	1105	2244
3300 [1557]	605	1096	638	1148	671	1202	702	1257	733	1314	763	1372	793	1432	821	1493	849	1555	877	1619	903	1684	929	1751	954	1819	979	1889	1002	1960	1025	2033	1047	2107	1069	2182	1090	2259	1110	2337
3400 [1604]	619	1149	652	1204	684	1260	715	1317	745	1376	775	1437	804	1499	832	1562	860	1627	886	1693	912	1761	938	1830	962	1900	986	1972	1009	2046	1032	2121	1053	2197	1074	2275	1095	2354	1114	2435
3500 [1652]	634	1206	666	1263	697	1322	728	1382	758	1443	787	1506	815	1570	843	1635	870	1702	896	1771	922	1841	946	1912	970	1985	994	2060	1017	2135	1038	2213	1060	2291	1080	2371	1100	2453	1119	2536
3600 [1699]	648	1267	680	1326	711	1387	741	1449	770	1513	799	1578	827	1645	854	1713	880	1782	906	1853	931	1925	955	1999	979	2074	1002	2151	1024	2229	1045	2308	1066	2389	1086	2472	1105	2556	1124	2641
3700 [1746]	663	1332	694	1393	724	1456	754	1521	783	1587	811	1654	838	1723	865	1793	891	1865	916	1938	941	2013	965	2089	988	2167	1010	2246	1032	2326	1053	2408	1073	2491	1092	2576	1111	2662	1129	2750
3800 [1793]	678	1400	708	1464	738	1529	767	1596	795	1665	823	1734	850	1805	876	1878	902	1952	926	2028	951	2105	974	2183	996	2263	1018	2344	1039	2427	1060	2511	1080	2597	1099	2684	1117	2772	1134	2862
3900 [1840]	693	1472	723	1538	752	1606	781	1675	808	1746	836	1818	862	1892	888	1966	913	2043	937	2121	961	2200	983	2281	1005	2363	1027	2447	1048	2532	1067	2618	1087	2706	1105	2796	1123	2886	1140	2979
4000 [1888]	708	1548	737	1617	766	1687	794	1758	822	1831	848	1906	874	1981	900	2059	924	2137	948	2218	971	2299	993	2382	1015	2467	1036	2553	1056	2640	1075	2729	1094	2819	1112	2911	1129	3004	1146	3099
4100 [1935]	723	1628	752	1699	781	1771	808	1845	835	1920	861	1997	887	2075	911	2155	935	2236	959	2318	981	2402	1003	2488	1024	2574	1045	2663	1064	2752	1083	2844	1101	2936	1119	3030	1136	3126	1152	3223

NOTE: A/F-Drive left of bold line, B/G-Drive right of bold line, C/H-Drive right of double line.

Drive Package	A/F						B/G						C/H					
Motor H.P. [W]	2 [1491.4]						3 [2237.1]						3 [2237.1]					
Blower Sheave	AK79H						AK79H						AK79H					
Motor Sheave	1VL40*7/8						1VP50*7/8						1VP56*7/8					
Belt	A49						A50						A51					
Turns Open	0	1	**2**	3	4	5	0	1	2	3	4	**5**	0	1	2	3	4	**5**
RPM	804	758	**710**	661	616	559	1048	1003	959	914	872	**826**	1168	1128	1087	1044	1002	**957**

NOTES: 1. Factory sheave settings are shown in bold type.
2. Do not set motor sheave below minimum or maximum turns open shown.
3. Re-adjustment of sheave required to achieve rated airflow at AHRI minimum External Static Pressure
4. Drive data shown is for vertical airflow with dry coil. Add component resistance (below) to duct resistance to determine total External Static Pressure.

Airflow	AIRFLOW CORRECTION FACTORS *			COMPONENT AIRFLOW RESISTANCE			
				Wet Coil	Vertical Economizer RA Damper Open	Concentric Diffuser RXRN-AEF2000 & Concentric Adapter RXMC-DD01 (Flush)	Concentric Diffuser RXRN-AED2000 & Concentric Adapter RXMC-DD01 (Drop)
CFM [L/s]	Total MBH	Sensible MBH	Power kW	Resistance — Inches of Water [kPa]			
2700 [1274]	0.97	0.93	0.99	0.07 [.02]	0.03 [.01]	0.80 [.20]	0.65 [.16]
2800 [1321]	0.98	0.94	0.99	0.07 [.02]	0.03 [.01]	0.85 [.21]	0.69 [.17]
2900 [1368]	0.98	0.96	0.99	0.08 [.02]	0.04 [.01]	0.91 [.23]	0.74 [.18]
3000 [1416]	0.99	0.97	1.00	0.08 [.02]	0.05 [.01]	0.96 [.24]	0.79 [.20]
3100 [1463]	0.99	0.99	1.00	0.09 [.02]	0.06 [.01]	1.02 [.25]	0.86 [.21]
3200 [1510]	1.00	1.00	1.00	0.10 [.02]	0.07 [.02]	1.08 [.27]	0.92 [.23]
3300 [1557]	1.01	1.01	1.00	0.10 [.03]	0.08 [.02]	1.15 [.29]	0.99 [.25]
3400 [1604]	1.01	1.03	1.01	0.11 [.03]	0.09 [.02]	1.21 [.30]	1.05 [.26]
3500 [1652]	1.02	1.04	1.01	0.11 [.03]	0.10 [.02]	1.29 [.32]	1.09 [.27]
3600 [1699]	1.02	1.06	1.01	0.12 [.03]	0.11 [.03]	1.36 [.34]	1.13 [.28]
3700 [1746]	1.03	1.07	1.02	0.13 [.03]	0.12 [.03]	1.43 [.36]	1.18 [.29]
3800 [1793]	1.03	1.09	1.02	0.13 [.03]	0.13 [.03]	1.50 [.37]	1.23 [.31]
3900 [1840]	1.04	1.10	1.02	0.14 [.04]	0.15 [.04]	1.59 [.40]	1.31 [.33]
4000 [1888]	1.05	1.12	1.02	0.14 [.04]	0.16 [.04]	1.68 [.42]	1.38 [.34]
4100 [1935]	1.05	1.13	1.03	0.15 [.04]	0.17 [.04]	1.74 [.43]	1.44 [.36]

* Multiply correction factor times gross performance data — resulting sensible capacity cannot exceed total capacity.

[ ] Designates Metric Conversions

AIRFLOW PERFORMANCE — 8.5 TON [29.9kW] — 60 Hz — SIDEFLOW

Air Flow CFM [L/s]	Model RGEDZ*102* Voltage 208/230, 460, 575 — 3 phase 60 Hz																																					
	External Static Pressure — Inches of Water [kPa]																																					
	0.1 [.02]		0.2 [.05]		0.3 [.07]		0.4 [.10]		0.5 [.12]		0.6 [.15]		0.7 [.17]		0.8 [.20]		0.9 [.22]		1.0 [.25]		1.1 [.27]		1.2 [.30]		1.3 [.32]		1.4 [.35]		1.5 [.37]		1.6 [.40]		1.7 [.42]		1.8 [.45]		1.9 [.47]		2.0 [.50]	
	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W
2700 [1274]	—	—	—	—	577	932	611	969	644	1009	677	1052	710	1098	742	1147	774	1199	806	1254	837	1312	868	1373	898	1437	929	1505	959	1575	988	1648	1017	1725	1046	1804	1074	1886	1102	1972
2800 [1321]	—	—	556	926	589	962	622	1000	655	1042	687	1087	719	1134	751	1185	783	1239	814	1295	844	1355	875	1418	905	1484	934	1553	963	1624	992	1699	1021	1777	1049	1858	1077	1942	1105	2029
2900 [1368]	—	—	568	958	601	995	633	1036	666	1079	697	1125	729	1174	760	1227	791	1282	821	1340	851	1402	881	1466	911	1533	940	1604	968	1677	997	1754	1025	1834	1052	1916	1080	2002	1107	2090
3000 [1416]	—	—	580	994	613	1033	645	1074	676	1119	708	1167	738	1218	769	1272	799	1329	829	1389	859	1452	888	1518	917	1587	945	1659	973	1734	1001	1812	1029	1894	1056	1978	1082	2065	1109	2155
3100 [1463]	561	996	593	1033	624	1073	656	1117	687	1163	718	1213	748	1265	778	1321	808	1379	837	1441	866	1506	895	1573	923	1644	951	1718	978	1794	1006	1874	1033	1957	1059	2043	1085	2132	1111	2224
3200 [1510]	574	1037	605	1076	636	1118	667	1163	698	1211	728	1262	758	1316	787	1373	816	1434	845	1497	873	1563	902	1632	929	1705	957	1780	984	1858	1010	1940	1037	2024	1063	2112	1088	2202	1113	2296
3300 [1557]	587	1082	618	1122	648	1166	679	1212	709	1262	738	1315	767	1371	796	1430	825	1491	853	1556	881	1624	908	1695	936	1769	962	1846	989	1926	1015	2009	1041	2095	1066	2184	1091	2276	1116	2372
3400 [1604]	600	1130	630	1172	660	1217	690	1266	720	1317	749	1371	777	1429	806	1489	834	1553	861	1619	888	1689	915	1761	942	1837	968	1916	994	1997	1020	2082	1045	2170	1070	2260	1094	2354	1118	2451
3500 [1652]	613	1182	643	1226	672	1273	702	1323	730	1376	759	1432	787	1491	815	1553	842	1618	869	1686	896	1757	922	1831	948	1909	974	1989	999	2072	1024	2158	1049	2248	1073	2340	1097	2436	1121	2534
3600 [1699]	626	1238	656	1283	685	1332	713	1383	741	1438	769	1495	797	1556	824	1620	851	1687	877	1756	904	1829	929	1905	955	1984	980	2066	1005	2151	1029	2238	1053	2329	1077	2423	1100	2520	1123	2621
3700 [1746]	640	1297	668	1344	697	1394	725	1447	753	1504	780	1563	807	1625	833	1690	860	1759	886	1830	911	1905	937	1982	961	2063	986	2146	1010	2233	1034	2322	1057	2415	1081	2510	1103	2609	1126	2711
3800 [1793]	653	1360	681	1409	709	1460	737	1515	764	1573	790	1634	817	1698	843	1765	869	1835	894	1908	919	1984	944	2063	968	2145	992	2230	1016	2318	1039	2410	1062	2504	1084	2601	1107	2701	1128	2805
3900 [1840]	667	1426	694	1477	721	1530	748	1587	775	1646	801	1709	827	1774	852	1843	878	1914	902	1989	927	2067	951	2147	975	2231	998	2318	1021	2408	1044	2500	1066	2596	1088	2695	1110	2797	1131	2902
4000 [1888]	680	1496	707	1548	734	1604	760	1662	786	1723	812	1787	837	1854	862	1924	887	1998	911	2074	935	2153	958	2235	981	2321	1004	2409	1027	2501	1049	2595	1071	2693	1092	2793	1113	2897	1134	3003
4100 [1935]	694	1570	720	1624	746	1681	772	1740	797	1803	822	1869	847	1938	872	2009	896	2084	919	2162	943	2243	965	2327	988	2414	1010	2504	1032	2597	1054	2693	1075	2792	1096	2895	1116	3000	1137	3108

NOTE: A/F-Drive left of bold line, B/G-Drive right of bold line, C/H-Drive right of double line.

Drive Package	A/F						B/G						C/H					
Motor H.P. [W]	2 [1491.4]						3 [2237.1]						3 [2237.1]					
Blower Sheave	AK79H						AK79H						AK79H					
Motor Sheave	1VL40*7/8						1VP50*7/8						1VP56*7/8					
Belt	A49						A50						A51					
Turns Open	0	1	**2**	3	4	5	0	1	2	3	4	**5**	0	1	2	3	4	**5**
RPM	802	754	**707**	662	616	555	1048	1005	960	916	870	**827**	1170	1126	1085	1044	1000	**956**

NOTES: 1. Factory sheave settings are shown in bold type.
2. Do not set motor sheave below minimum or maximum turns open shown.
3. Re-adjustment of sheave required to achieve rated airflow at AHRI minimum External Static Pressure
4. Drive data shown is for horizontal airflow with dry coil. Add component resistance (below) to duct resistance to determine total External Static Pressure.

Airflow	AIRFLOW CORRECTION FACTORS *			COMPONENT AIRFLOW RESISTANCE			
				Wet Coil	Horizontal Economizer RA Damper Open	Concentric Diffuser RXRN-AEF2000 & Concentric Adapter RXMC-DD01 (Flush)	Concentric Diffuser RXRN-AED2000 & Concentric Adapter RXMC-DD01 (Drop)
CFM [L/s]	Total MBH	Sensible MBH	Power kW	Resistance — Inches of Water [kPa]			
2700 [1274]	0.97	0.93	0.99	0.07 [.02]	0.03 [.01]	0.80 [.20]	0.65 [.16]
2800 [1321]	0.98	0.94	0.99	0.07 [.02]	0.03 [.01]	0.85 [.21]	0.69 [.17]
2900 [1368]	0.98	0.96	0.99	0.08 [.02]	0.04 [.01]	0.91 [.23]	0.74 [.18]
3000 [1416]	0.99	0.97	1.00	0.08 [.02]	0.05 [.01]	0.96 [.24]	0.79 [.20]
3100 [1463]	0.99	0.99	1.00	0.09 [.02]	0.06 [.01]	1.02 [.25]	0.86 [.21]
3200 [1510]	1.00	1.00	1.00	0.10 [.02]	0.07 [.02]	1.08 [.27]	0.92 [.23]
3300 [1557]	1.01	1.01	1.00	0.10 [.03]	0.08 [.02]	1.15 [.29]	0.99 [.25]
3400 [1604]	1.01	1.03	1.01	0.11 [.03]	0.09 [.02]	1.21 [.30]	1.05 [.26]
3500 [1652]	1.02	1.04	1.01	0.11 [.03]	0.10 [.02]	1.29 [.32]	1.09 [.27]
3600 [1699]	1.02	1.06	1.01	0.12 [.03]	0.11 [.03]	1.36 [.34]	1.13 [.28]
3700 [1746]	1.03	1.07	1.02	0.13 [.03]	0.12 [.03]	1.43 [.36]	1.18 [.29]
3800 [1793]	1.03	1.09	1.02	0.13 [.03]	0.13 [.03]	1.50 [.37]	1.23 [.31]
3900 [1840]	1.04	1.10	1.02	0.14 [.04]	0.15 [.04]	1.59 [.40]	1.31 [.33]
4000 [1888]	1.05	1.12	1.02	0.15 [.04]	0.16 [.04]	1.68 [.42]	1.38 [.34]
4100 [1935]	1.05	1.13	1.03	0.15 [.04]	0.17 [.04]	1.74 [.43]	1.44 [.36]

* Multiply correction factor times gross performance data — resulting sensible capacity cannot exceed total capacity.

[ ] Designates Metric Conversions

AIRFLOW PERFORMANCE — 10 TON [35.1kW] — 60 Hz — DOWNFLOW

Air Flow CFM [L/s]	Model RGEDZ*120* Voltage 208/230, 460, 575 — 3 phase 60 Hz																																			
	External Static Pressure — Inches of Water [kPa]																																			
	0.1 [.02]		0.2 [.05]		0.3 [.07]		0.4 [.10]		0.5 [.12]		0.6 [.15]		0.7 [.17]		0.8 [.20]		0.9 [.22]		1.0 [.25]		1.1 [.27]		1.2 [.30]		1.3 [.32]		1.4 [.35]		1.5 [.37]		1.6 [.40]		1.7 [.42]		1.8 [.45]		1.9 [.47]		2.0 [.50]	
	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W
3200 [1510]	597	1046	629	1092	661	1141	692	1191	723	1242	753	1296	782	1351	811	1409	839	1468	867	1528	893	1591	920	1655	945	1722	970	1790	994	1859	1018	1931	1041	2004	1064	2080	1085	2157	1107	2236
3300 [1557]	610	1092	642	1141	674	1192	705	1244	735	1299	764	1355	793	1413	822	1473	849	1535	876	1599	903	1664	928	1731	954	1800	978	1871	1002	1943	1025	2018	1048	2094	1070	2172	1091	2251	1112	2333
3400 [1604]	624	1142	655	1194	686	1247	717	1303	747	1360	776	1419	804	1480	832	1542	859	1607	886	1673	912	1741	937	1811	962	1883	986	1956	1010	2031	1032	2108	1055	2187	1076	2268	1097	2350	1117	2435
3500 [1652]	638	1196	669	1251	699	1307	729	1365	759	1425	787	1487	815	1550	843	1616	870	1683	896	1752	921	1823	946	1895	971	1969	994	2046	1017	2124	1040	2203	1061	2285	1083	2368	1103	2454	1123	2541
3600 [1699]	651	1255	682	1312	712	1371	742	1432	771	1494	799	1559	827	1625	854	1693	880	1763	906	1835	931	1908	955	1984	979	2061	1003	2140	1025	2220	1047	2303	1068	2387	1089	2473	1109	2561	1129	2651
3700 [1746]	665	1317	696	1377	725	1439	755	1503	783	1568	811	1635	838	1704	865	1775	891	1848	916	1922	941	1998	965	2076	988	2156	1011	2238	1033	2321	1055	2406	1075	2493	1096	2582	1115	2673	1134	2765
3800 [1793]	679	1385	709	1447	739	1512	767	1578	795	1646	823	1716	850	1788	876	1861	901	1937	926	2014	950	2093	974	2173	997	2256	1019	2340	1041	2426	1062	2514	1083	2604	1102	2696	1122	2789	1140	2884
3900 [1840]	693	1456	723	1521	752	1589	780	1658	808	1728	835	1801	861	1875	887	1952	912	2030	936	2110	960	2191	983	2275	1006	2360	1028	2447	1049	2536	1070	2627	1090	2719	1109	2813	1128	2909	1146	3007
4000 [1888]	708	1532	737	1600	765	1670	793	1741	820	1815	847	1890	873	1967	898	2046	923	2127	947	2210	970	2294	993	2380	1015	2468	1036	2558	1057	2650	1077	2743	1097	2838	1116	2935	1134	3034	1152	3135
4100 [1935]	722	1612	751	1682	779	1755	806	1830	833	1906	859	1984	884	2064	909	2145	933	2229	957	2314	980	2401	1002	2490	1024	2581	1045	2673	1065	2768	1085	2864	1104	2962	1123	3061	1141	3163	1158	3266
4200 [1982]	736	1696	765	1769	792	1845	819	1922	845	2001	871	2082	896	2164	921	2249	944	2335	968	2423	990	2513	1012	2604	1033	2698	1054	2793	1074	2890	1093	2989	1112	3090	1130	3192	1147	3296	1164	3402
4300 [2029]	751	1784	779	1861	806	1939	832	2019	858	2100	883	2184	908	2269	932	2356	955	2445	978	2536	1000	2629	1022	2723	1043	2819	1063	2917	1082	3017	1101	3118	1119	3222	1137	3327	1154	3434	—	—
4400 [2076]	765	1877	793	1956	820	2037	846	2120	871	2204	896	2290	920	2378	944	2468	967	2560	989	2653	1010	2749	1032	2846	1052	2945	1072	3045	1091	3148	1109	3252	1127	3358	1144	3466	1161	3576	—	—
4500 [2123]	780	1974	807	2056	833	2140	859	2225	884	2312	908	2401	932	2492	955	2584	978	2679	1000	2775	1021	2873	1041	2973	1061	3074	1081	3178	1099	3283	1117	3390	1135	3499	1152	3609	1168	3722	—	—
4600 [2171]	795	2076	821	2160	847	2246	872	2335	897	2424	921	2516	944	2610	967	2705	989	2802	1010	2901	1031	3002	1051	3104	1071	3208	1090	3314	1108	3422	1126	3532	1143	3644	1159	3757	—	—	—	—
4700 [2218]	810	2181	836	2269	861	2358	886	2448	910	2541	934	2635	957	2732	979	2830	1000	2929	1021	3031	1042	3134	1062	3240	1081	3347	1099	3455	1117	3566	1134	3679	1151	3793	1167	3909	—	—	—	—
4800 [2265]	825	2291	850	2381	875	2473	900	2567	923	2662	946	2759	969	2858	991	2959	1012	3061	1033	3165	1052	3272	1072	3380	1090	3489	1108	3601	1126	3714	1143	3829	1159	3946	—	—	—	—	—	—

NOTE: A/F-Drive left of bold line, B/G-Drive right of bold line, C/H-Drive right of double line.

Drive Package	A/F						B/G						C/H					
Motor H.P. [W]	2 [1491.4]						3 [2237.1]						3 [2237.1]					
Blower Sheave	AK79H						AK79H						AK79H					
Motor Sheave	1VL40*7/8						1VP50*7/8						1VP56*7/8					
Belt	A49						A50						A51					
Turns Open	0	1	**2**	3	4	5	0	1	2	3	4	**5**	0	1	2	3	4	**5**
RPM	802	758	**710**	661	616	559	1040	999	955	911	868	**824**	1155	1120	1080	1039	996	**953**

NOTES: 1. Factory sheave settings are shown in bold type.
2. Do not set motor sheave below minimum or maximum turns open shown.
3. Re-adjustment of sheave required to achieve rated airflow at AHRI minimum External Static Pressure
4. Drive data shown is for vertical airflow with dry coil. Add component resistance (below) to duct resistance to determine total External Static Pressure.

Airflow	AIRFLOW CORRECTION FACTORS *			COMPONENT AIRFLOW RESISTANCE			
				Wet Coil	Vertical Economizer RA Damper Open	Concentric Diffuser RXRN-AEF3415 & Diffuser RXMC-DD02 (Flush)	Concentric Diffuser RXRN-AED3415 & Diffuser RXMC-DD02 (Drop)
CFM [L/s]	Total MBH	Sensible MBH	Power kW	Resistance — Inches of Water [kPa]			
3200 [1510]	0.97	0.93	0.99	0.10 [.02]	0.07 [.02]	0.74 [.18]	0.56 [.14]
3300 [1557]	0.98	0.94	0.99	0.10 [.03]	0.08 [.02]	0.79 [.20]	0.59 [.15]
3400 [1604]	0.98	0.96	0.99	0.11 [.03]	0.09 [.02]	0.84 [.21]	0.62 [.15]
3500 [1652]	0.99	0.97	1.00	0.11 [.03]	0.10 [.02]	0.90 [.22]	0.66 [.16]
3600 [1699]	0.99	0.98	1.00	0.12 [.03]	0.11 [.03]	0.95 [.24]	0.69 [.17]
3700 [1746]	1.00	0.99	1.00	0.13 [.03]	0.12 [.03]	1.00 [.25]	0.73 [.18]
3800 [1793]	1.00	1.01	1.00	0.13 [.03]	0.13 [.03]	1.04 [.26]	0.76 [.19]
3900 [1840]	1.01	1.02	1.00	0.14 [.04]	0.15 [.04]	1.09 [.27]	0.80 [.20]
4000 [1888]	1.01	1.03	1.01	0.15 [.04]	0.16 [.04]	1.13 [.28]	0.84 [.21]
4100 [1935]	1.02	1.04	1.01	0.15 [.04]	0.17 [.04]	1.19 [.30]	0.88 [.22]
4200 [1982]	1.02	1.06	1.01	0.16 [.04]	0.19 [.05]	1.24 [.31]	0.92 [.23]
4300 [2029]	1.03	1.07	1.01	0.17 [.04]	0.20 [.05]	1.31 [.33]	0.97 [.24]
4400 [2076]	1.03	1.08	1.01	0.18 [.04]	0.21 [.05]	1.37 [.34]	1.02 [.25]
4500 [2123]	1.04	1.09	1.02	0.19 [.05]	0.23 [.06]	1.43 [.35]	1.07 [.27]
4600 [2171]	1.04	1.11	1.02	0.19 [.05]	0.24 [.06]	1.48 [.37]	1.11 [.28]
4700 [2218]	1.05	1.12	1.02	0.20 [.05]	0.26 [.06]	1.54 [.38]	1.15 [.29]
4800 [2265]	1.05	1.13	1.02	0.21 [.05]	0.28 [.07]	1.59 [.40]	1.19 [.30]

* Multiply correction factor times gross performance data — resulting sensible capacity cannot exceed total capacity.

[ ] Designates Metric Conversions

AIRFLOW PERFORMANCE — 10 TON [35.1kW] — 60 Hz — SIDEFLOW

Air Flow CFM [L/s]	Model RGEDZ*120* Voltage 208/230, 460, 575 — 3 phase 60 Hz																																			
	External Static Pressure — Inches of Water [kPa]																																			
	0.1 [.02]		0.2 [.05]		0.3 [.07]		0.4 [.10]		0.5 [.12]		0.6 [.15]		0.7 [.17]		0.8 [.20]		0.9 [.22]		1.0 [.25]		1.1 [.27]		1.2 [.30]		1.3 [.32]		1.4 [.35]		1.5 [.37]		1.6 [.40]		1.7 [.42]		1.8 [.45]		1.9 [.47]		2.0 [.50]	
	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W
3200 [1510]	575	1018	607	1057	637	1099	667	1143	697	1191	727	1240	756	1293	785	1348	814	1406	842	1466	870	1529	897	1595	924	1664	951	1735	978	1809	1004	1885	1030	1965	1055	2047	1080	2131	1105	2219
3300 [1557]	588	1060	618	1101	649	1146	679	1192	708	1242	737	1294	766	1349	795	1406	823	1466	850	1529	878	1595	905	1663	932	1734	958	1808	984	1884	1010	1963	1035	2045	1060	2129	1085	2216	1109	2306
3400 [1604]	600	1106	630	1150	660	1196	690	1245	719	1297	748	1352	776	1409	804	1469	832	1531	859	1597	886	1664	913	1735	939	1808	965	1884	990	1963	1016	2044	1040	2128	1065	2215	1089	2305	1113	2397
3500 [1652]	613	1156	643	1202	672	1251	701	1302	730	1357	758	1413	786	1473	814	1535	841	1600	868	1668	894	1738	920	1811	946	1887	972	1965	997	2046	1022	2130	1046	2217	1070	2306	1094	2397	1117	2492
3600 [1699]	626	1210	655	1258	684	1310	713	1364	741	1420	769	1479	796	1541	823	1606	850	1673	877	1743	903	1816	929	1892	954	1970	979	2050	1004	2134	1028	2220	1052	2309	1076	2400	1099	2494	1122	2591
3700 [1746]	639	1268	668	1319	696	1373	724	1429	752	1488	779	1550	806	1614	833	1681	860	1751	886	1823	911	1898	937	1976	962	2056	986	2140	1011	2225	1035	2314	1058	2405	1081	2499	1104	2596	1127	2695
3800 [1793]	652	1330	680	1384	708	1440	736	1498	763	1560	790	1624	817	1690	843	1760	869	1832	895	1907	920	1984	945	2064	970	2147	994	2233	1018	2321	1041	2412	1064	2505	1087	2602	1110	2701	1132	2802
3900 [1840]	665	1397	693	1452	721	1511	748	1572	775	1636	801	1702	828	1771	854	1843	879	1917	904	1995	929	2075	954	2157	978	2242	1001	2330	1025	2421	1048	2514	1071	2610	1093	2709	1115	2810	1137	2914
4000 [1888]	678	1467	706	1525	733	1586	760	1650	787	1716	813	1785	839	1856	864	1930	889	2007	914	2087	938	2169	962	2254	986	2341	1009	2432	1032	2525	1055	2620	1077	2719	1099	2820	1121	2923	1142	3030
4100 [1935]	692	1542	719	1602	746	1666	772	1731	798	1800	824	1871	850	1945	875	2022	899	2101	923	2183	947	2267	971	2355	994	2445	1017	2537	1040	2633	1062	2731	1084	2831	1105	2935	1126	3041	1147	3150
4200 [1982]	706	1621	732	1684	759	1749	785	1817	810	1888	836	1962	861	2038	885	2117	909	2199	933	2283	957	2370	980	2460	1003	2552	1025	2647	1047	2745	1069	2845	1091	2948	1112	3054	1132	3163	1153	3274
4300 [2029]	720	1704	746	1769	772	1837	797	1907	823	1981	847	2057	872	2135	896	2217	920	2301	943	2387	966	2477	989	2569	1012	2664	1034	2761	1055	2861	1077	2964	1098	3069	1118	3178	1139	3288	1158	3402
4400 [2076]	734	1791	760	1858	785	1928	810	2001	835	2077	859	2155	883	2237	907	2320	931	2407	954	2496	976	2587	999	2682	1020	2779	1042	2879	1063	2981	1084	3087	1105	3195	1125	3305	1145	3418	—	—
4500 [2123]	748	1882	773	1952	798	2024	823	2100	847	2178	871	2259	895	2342	918	2428	941	2517	964	2608	986	2702	1008	2799	1030	2899	1051	3001	1071	3106	1092	3214	1112	3324	1132	3437	1151	3552	—	—
4600 [2171]	762	1977	787	2049	812	2124	836	2202	860	2283	884	2366	907	2451	930	2540	952	2631	974	2725	996	2822	1018	2921	1039	3023	1059	3127	1080	3235	1100	3345	1120	3457	1139	3573	1158	3691	—	—
4700 [2218]	777	2076	801	2151	826	2228	849	2309	873	2391	896	2477	919	2565	941	2656	963	2750	985	2846	1006	2945	1027	3046	1048	3151	1068	3258	1088	3367	1108	3480	1127	3595	1146	3712	—	—	—	—
4800 [2265]	792	2180	816	2257	840	2337	863	2419	886	2504	909	2592	931	2683	953	2776	975	2872	996	2971	1017	3072	1037	3176	1058	3283	1077	3392	1097	3504	1116	3619	1135	3736	1153	3856	—	—	—	—

NOTE: A/F-Drive left of bold line, B/G-Drive right of bold line, C/H-Drive right of double line.

Drive Package	A/F						B/G						C/H					
Motor H.P. [W]	2 [1491.4]						3 [2237.1]						3 [2237.1]					
Blower Sheave	AK79H						AK79H						AK79H					
Motor Sheave	1VL40*7/8						1VP50*7/8						1VP56*7/8					
Belt	A49						A50						A51					
Turns Open	0	1	**2**	3	4	5	0	1	2	3	4	**5**	0	1	2	3	4	**5**
RPM	798	753	**707**	663	616	556	1041	998	955	912	867	**824**	1155	1119	1078	1037	994	**951**

NOTES: 1. Factory sheave settings are shown in bold type.
2. Do not set motor sheave below minimum or maximum turns open shown.
3. Re-adjustment of sheave required to achieve rated airflow at AHRI minimum External Static Pressure
4. Drive data shown is for horizontal airflow with dry coil. Add component resistance (below) to duct resistance to determine total External Static Pressure.

Airflow	AIRFLOW CORRECTION FACTORS *			COMPONENT AIRFLOW RESISTANCE			
				Wet Coil	Horizontal Economizer RA Damper Open	Concentric Diffuser RXRN-AEF3415 & Diffuser RXMC-DD02 (Flush)	Concentric Diffuser RXRN-AED3415 & Diffuser RXMC-DD02 (Drop)
CFM [L/s]	Total MBH	Sensible MBH	Power kW	Resistance — Inches of Water [kPa]			
3200 [1510]	0.97	0.93	0.99	0.10 [.02]	0.07 [.02]	0.74 [.18]	0.56 [.14]
3300 [1557]	0.98	0.94	0.99	0.10 [.03]	0.08 [.02]	0.79 [.20]	0.59 [.15]
3400 [1604]	0.98	0.96	0.99	0.11 [.03]	0.09 [.02]	0.84 [.21]	0.62 [.15]
3500 [1652]	0.99	0.97	1.00	0.11 [.03]	0.10 [.02]	0.90 [.22]	0.66 [.16]
3600 [1699]	0.99	0.98	1.00	0.12 [.03]	0.11 [.03]	0.95 [.24]	0.69 [.17]
3700 [1746]	1.00	0.99	1.00	0.13 [.03]	0.12 [.03]	1.00 [.25]	0.73 [.18]
3800 [1793]	1.00	1.01	1.00	0.13 [.03]	0.13 [.03]	1.04 [.26]	0.76 [.19]
3900 [1840]	1.01	1.02	1.00	0.14 [.04]	0.15 [.04]	1.09 [.27]	0.80 [.20]
4000 [1888]	1.01	1.03	1.01	0.15 [.04]	0.16 [.04]	1.13 [.28]	0.84 [.21]
4100 [1935]	1.02	1.04	1.01	0.15 [.04]	0.17 [.04]	1.19 [.30]	0.88 [.22]
4200 [1982]	1.02	1.06	1.01	0.16 [.04]	0.19 [.05]	1.24 [.31]	0.92 [.23]
4300 [2029]	1.03	1.07	1.01	0.17 [.04]	0.20 [.05]	1.31 [.33]	0.97 [.24]
4400 [2076]	1.03	1.08	1.01	0.18 [.04]	0.21 [.05]	1.37 [.34]	1.02 [.25]
4500 [2123]	1.04	1.09	1.02	0.19 [.05]	0.23 [.06]	1.43 [.35]	1.07 [.27]
4600 [2171]	1.04	1.11	1.02	0.19 [.05]	0.24 [.06]	1.48 [.37]	1.11 [.28]
4700 [2218]	1.05	1.12	1.02	0.20 [.05]	0.26 [.06]	1.54 [.38]	1.15 [.29]
4800 [2265]	1.05	1.13	1.02	0.21 [.05]	0.28 [.07]	1.59 [.40]	1.19 [.30]

* Multiply correction factor times gross performance data — resulting sensible capacity cannot exceed total capacity.

[ ] Designates Metric Conversions

AIRFLOW PERFORMANCE — 12.5 TON [43.9kW] — 60 Hz — DOWNFLOW

Air Flow CFM [L/s]	Model RGEDZ*150* Voltage 208/230, 460, 575 — 3 phase 60 Hz																																					
	External Static Pressure — Inches of Water [kPa]																																					
	0.1 [.02]		0.2 [.05]		0.3 [.07]		0.4 [.10]		0.5 [.12]		0.6 [.15]		0.7 [.17]		0.8 [.20]		0.9 [.22]		1.0 [.25]		1.1 [.27]		1.2 [.30]		1.3 [.32]		1.4 [.35]		1.5 [.37]		1.6 [.40]		1.7 [.42]		1.8 [.45]		1.9 [.47]		2.0 [.50]	
	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W
4000 [1888]	766	1776	795	1806	824	1842	851	1883	878	1931	904	1985	929	2044	953	2110	976	2181	998	2259	1019	2342	1040	2431	1059	2526	1078	2627	1096	2734	1113	2847	1129	2966	1144	3091	1158	3221	1171	3358
4100 [1935]	778	1820	807	1856	835	1897	862	1944	888	1997	913	2056	937	2120	961	2191	983	2268	1005	2350	1026	2439	1045	2533	1064	2634	1082	2740	1099	2852	1116	2970	1131	3094	1145	3224	1159	3360	1171	3502
4200 [1982]	792	1875	820	1915	847	1961	873	2014	899	2072	923	2136	947	2206	969	2282	991	2364	1012	2451	1032	2545	1051	2645	1070	2750	1087	2862	1103	2979	1119	3102	1134	3232	1147	3367	1160	3508	1172	3655
4300 [2029]	806	1938	833	1984	859	2036	885	2093	910	2156	934	2226	957	2301	979	2382	1000	2469	1020	2562	1040	2661	1058	2766	1076	2877	1092	2993	1108	3116	1123	3244	1137	3379	1150	3519	1162	3665	1174	3818
4400 [2076]	820	2012	847	2063	873	2119	898	2182	922	2251	945	2325	967	2406	989	2492	1009	2584	1029	2682	1048	2787	1065	2897	1082	3013	1098	3134	1113	3262	1128	3396	1141	3536	1154	3681	1165	3833	1176	3990
4500 [2123]	835	2095	861	2151	886	2213	911	2281	934	2355	957	2434	978	2520	999	2611	1019	2709	1038	2812	1056	2922	1073	3037	1090	3158	1105	3285	1119	3418	1133	3557	1146	3702	1158	3853	1168	4009	1178	4172
4600 [2171]	851	2187	876	2249	901	2316	925	2389	947	2468	969	2553	990	2644	1010	2740	1030	2843	1048	2952	1065	3066	1082	3187	1097	3313	1112	3445	1126	3584	1139	3728	1151	3878	1162	4034	1172	4196	1182	4363
4700 [2218]	867	2290	892	2356	916	2428	939	2507	961	2591	982	2681	1003	2777	1022	2879	1041	2987	1058	3101	1075	3220	1091	3346	1106	3478	1120	3615	1133	3759	1145	3908	1157	4063	1167	4224	1177	4391	1186	4564
4800 [2265]	884	2401	908	2473	932	2551	954	2634	975	2723	996	2819	1016	2920	1034	3027	1052	3140	1069	3259	1085	3384	1101	3515	1115	3652	1128	3795	1141	3943	1153	4098	1163	4258	1173	4425	1182	4597	1190	4775
4900 [2312]	902	2523	925	2599	948	2682	969	2771	990	2866	1010	2966	1029	3073	1047	3185	1065	3303	1081	3427	1097	3558	1111	3694	1125	3836	1138	3984	1149	4137	1160	4297	1170	4463	1180	4634	1188	4812	1195	4995
5000 [2359]	920	2653	943	2736	965	2824	986	2917	1006	3017	1025	3123	1044	3235	1061	3352	1078	3476	1093	3605	1108	3741	1122	3882	1135	4029	1147	4182	1158	4341	1169	4506	1178	4677	1187	4854	1194	5036	1201	5225
5100 [2407]	939	2794	961	2881	982	2974	1003	3073	1022	3179	1041	3289	1058	3406	1075	3529	1091	3658	1106	3792	1120	3933	1134	4079	1146	4232	1158	4390	1168	4554	1178	4725	1187	4901	1194	5083	1201	5270	1208	5464
5200 [2454]	958	2944	980	3036	1000	3135	1020	3239	1039	3349	1057	3465	1074	3588	1090	3716	1105	3849	1120	3989	1133	4135	1146	4287	1158	4444	1168	4608	1178	4777	1187	4953	1196	5134	1203	5321	1209	5514	1215	5713
5300 [2501]	978	3103	999	3201	1019	3305	1038	3414	1056	3530	1074	3651	1090	3778	1106	3912	1120	4051	1134	4196	1147	4347	1159	4504	1170	4666	1180	4835	1189	5010	1198	5190	1205	5377	1212	5569	1217	5767	1222	5972
5400 [2548]	999	3273	1019	3376	1038	3484	1057	3599	1074	3720	1091	3846	1107	3979	1122	4117	1136	4261	1149	4412	1161	4568	1172	4730	1183	4898	1192	5072	1201	5252	1209	5438	1215	5629	1221	5827	1226	6030	—	—
5500 [2595]	1020	3451	1040	3559	1058	3673	1076	3793	1093	3919	1109	4051	1124	4189	1138	4332	1152	4482	1164	4637	1176	4799	1186	4966	1196	5139	1205	5318	1213	5503	1220	5694	1226	5891	—	—	—	—	—	—
5600 [2643]	1042	3640	1061	3753	1079	3872	1096	3997	1112	4128	1128	4265	1142	4408	1156	4557	1168	4712	1180	4872	1191	5039	1201	5212	1210	5390	1218	5574	1226	5765	—	—	—	—	—	—	—	—	—	—
5700 [2690]	1064	3838	1083	3956	1100	4080	1117	4211	1132	4347	1147	4489	1161	4637	1174	4791	1186	4951	1197	5117	1207	5289	1216	5467	1225	5650	—	—	—	—	—	—	—	—	—	—	—	—	—	—
5800 [2737]	1088	4045	1105	4169	1122	4298	1138	4434	1153	4575	1167	4723	1180	4876	1192	5035	1204	5200	1214	5371	1224	5548	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
5900 [2784]	1111	4262	1128	4391	1144	4526	1160	4666	1174	4813	1187	4966	1200	5124	1211	5289	1222	5459	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
6000 [2831]	1136	4489	1152	4623	1167	4763	1182	4909	1196	5061	1208	5218	1220	5382	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

NOTE: A/F-Drive left of bold line, B/G-Drive right of bold line.

Drive Package	A						B					
Motor H.P. [W]	3 [1118.5]						5 [2237.1]					
Blower Sheave	AK71H						AK79H					
Motor Sheave	1VL44*7/8						1VP60*1x1/8					
Belt	A48						A52					
Turns Open	0	1	**2**	3	4	5	0	1	2	3	4	**5**
RPM	1003	958	**912**	863	814	764	1220	1171	1127	1085	1039	**994**

NOTES: 1. Factory sheave settings are shown in bold type.
2. Do not set motor sheave below minimum or maximum turns open shown.
3. Re-adjustment of sheave required to achieve rated airflow at AHRI minimum External Static Pressure
4. Drive data shown is for vertical airflow with dry coil. Add component resistance (below) to duct resistance to determine total External Static Pressure.

Airflow	AIRFLOW CORRECTION FACTORS *			COMPONENT AIRFLOW RESISTANCE			
				Wet Coil	Vertical Economizer RA Damper Open	Concentric Diffuser RXRN-AEF3618 & Concentric Adapter RXMC-DD03 (Flush)	Concentric Diffuser RXRN-AED3618 & Concentric Adapter RXMC-DD03 (Drop)
CFM [L/s]	Total MBH	Sensible MBH	Power kW	Resistance — Inches of Water [kPa]			
4000 [1888]	1.01	1.03	1.01	0.15 [.04]	0.16 [.04]	0.76 [.19]	0.68 [.17]
4100 [1935]	1.02	1.04	1.01	0.16 [.04]	0.17 [.04]	0.79 [.20]	0.72 [.18]
4200 [1982]	1.02	1.06	1.01	0.17 [.04]	0.19 [.05]	0.82 [.20]	0.75 [.19]
4300 [2029]	1.03	1.07	1.01	0.17 [.04]	0.20 [.05]	0.86 [.21]	0.79 [.20]
4400 [2076]	1.03	1.08	1.01	0.18 [.05]	0.21 [.05]	0.90 [.22]	0.83 [.21]
4500 [2123]	1.04	1.09	1.02	0.19 [.05]	0.23 [.06]	0.94 [.23]	0.86 [.21]
4600 [2171]	1.04	1.11	1.02	0.20 [.05]	0.24 [.06]	0.98 [.24]	0.89 [.22]
4700 [2218]	1.05	1.12	1.02	0.21 [.05]	0.26 [.06]	1.02 [.25]	0.94 [.23]
4800 [2265]	1.05	1.13	1.02	0.21 [.05]	0.28 [.07]	1.06 [.26]	0.98 [.24]
4900 [2312]	1.06	1.14	1.02	0.22 [.06]	0.29 [.07]	1.10 [.27]	1.01 [.25]
5000 [2359]	1.06	1.16	1.03	0.23 [.06]	0.31 [.08]	1.14 [.28]	1.04 [.26]
5100 [2407]	1.07	1.17	1.03	0.24 [.06]	0.33 [.08]	1.18 [.29]	1.07 [.27]
5200 [2454]	1.07	1.18	1.03	0.25 [.06]	0.35 [.09]	1.22 [.30]	1.10 [.27]
5300 [2501]	1.08	1.19	1.03	0.26 [.06]	0.36 [.09]	1.27 [.32]	1.15 [.29]
5400 [2548]	1.08	1.21	1.03	0.27 [.07]	0.38 [.09]	1.33 [.33]	1.20 [.30]
5500 [2595]	1.09	1.22	1.04	0.28 [.07]	0.40 [.10]	1.37 [.34]	1.25 [.31]
5600 [2643]	1.09	1.23	1.04	0.29 [.07]	0.42 [.10]	1.42 [.35]	1.30 [.32]
5700 [2690]	1.10	1.24	1.04	0.30 [.07]	0.44 [.11]	1.47 [.37]	1.34 [.33]
5800 [2737]	1.10	1.26	1.04	0.31 [.08]	0.46 [.11]	1.52 [.38]	1.38 [.34]
5900 [2784]	1.10	1.27	1.05	0.32 [.08]	0.48 [.12]	1.56 [.39]	1.42 [.35]
6000 [2831]	1.11	1.28	1.05	0.33 [.08]	0.51 [.13]	1.60 [.40]	1.45 [.36]

* Multiply correction factor times gross performance data — resulting sensible capacity cannot exceed total capacity.

[ ] Designates Metric Conversions

AIRFLOW PERFORMANCE — 12.5 TON [43.9kW] — 60 Hz — SIDEFLOW

Air Flow CFM [L/s]	Model RGEDZ*150* Voltage 208/230, 460, 575 — 3 phase 60 Hz																																			
	External Static Pressure — Inches of Water [kPa]																																			
	0.1 [.02]		0.2 [.05]		0.3 [.07]		0.4 [.10]		0.5 [.12]		0.6 [.15]		0.7 [.17]		0.8 [.20]		0.9 [.22]		1.0 [.25]		1.1 [.27]		1.2 [.30]		1.3 [.32]		1.4 [.35]		1.5 [.37]		1.6 [.40]		1.7 [.42]		1.8 [.45]		1.9 [.47]		2.0 [.50]	
	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W	RPM	W
4000 [1888]	—	—	791	1757	819	1824	846	1892	872	1961	897	2031	922	2101	946	2173	970	2245	993	2318	1015	2392	1036	2467	1057	2542	1077	2619	1096	2696	1115	2774	1133	2853	1150	2933	1167	3014	1183	3095
4100 [1935]	782	1773	809	1841	836	1911	863	1982	888	2053	913	2125	937	2198	961	2272	984	2346	1006	2422	1027	2498	1048	2576	1068	2654	1088	2733	1106	2812	1124	2893	1142	2975	1158	3057	1174	3140	1189	3224
4200 [1982]	801	1860	828	1932	854	2004	880	2077	905	2150	929	2225	952	2300	975	2377	997	2454	1019	2532	1040	2611	1060	2691	1079	2771	1098	2853	1116	2935	1133	3018	1150	3102	1166	3187	1181	3272	1196	3359
4300 [2029]	819	1954	845	2028	871	2102	896	2177	920	2254	944	2331	967	2409	989	2488	1011	2567	1032	2648	1052	2729	1071	2811	1090	2894	1108	2978	1125	3063	1142	3149	1158	3235	1174	3323	1188	3411	1202	3500
4400 [2076]	837	2053	863	2129	888	2207	912	2284	936	2363	959	2443	981	2523	1003	2605	1024	2687	1044	2770	1064	2854	1082	2938	1101	3024	1118	3110	1135	3197	1151	3286	1166	3375	1181	3464	1195	3555	1208	3646
4500 [2123]	855	2159	880	2237	905	2317	929	2397	952	2479	974	2561	996	2644	1016	2727	1037	2812	1056	2897	1075	2984	1093	3071	1111	3159	1128	3248	1144	3338	1159	3428	1174	3520	1188	3612	1201	3705	1214	3799
4600 [2171]	873	2270	898	2351	921	2433	944	2516	967	2600	988	2684	1009	2770	1030	2856	1049	2943	1068	3031	1086	3120	1104	3210	1121	3300	1137	3392	1152	3484	1167	3577	1181	3671	1195	3766	1207	3861	1219	3958
4700 [2218]	891	2387	914	2471	938	2556	960	2641	982	2727	1003	2814	1023	2902	1043	2991	1062	3080	1080	3171	1097	3262	1114	3354	1130	3447	1146	3541	1161	3636	1175	3732	1188	3828	1201	3925	1213	4023	—	—
4800 [2265]	908	2511	931	2597	954	2684	975	2772	996	2860	1017	2950	1036	3040	1055	3132	1074	3224	1091	3317	1108	3410	1124	3505	1140	3601	1155	3697	1169	3794	1182	3892	1195	3991	1207	4091	1219	4191	—	—
4900 [2312]	925	2640	947	2729	969	2818	990	2908	1011	3000	1031	3092	1050	3184	1068	3278	1086	3373	1102	3468	1119	3565	1134	3662	1149	3760	1163	3859	1177	3958	1190	4059	1202	4160	1213	4262	—	—	—	—
5000 [2359]	942	2775	964	2866	985	2958	1005	3051	1025	3145	1044	3239	1062	3335	1080	3431	1097	3528	1113	3626	1129	3725	1144	3824	1158	3925	1172	4026	1185	4128	1197	4231	1208	4335	1219	4440	—	—	—	—
5100 [2407]	958	2916	979	3010	1000	3104	1020	3200	1039	3296	1057	3393	1075	3491	1092	3589	1108	3689	1124	3789	1139	3891	1153	3993	1167	4096	1180	4200	1192	4304	1204	4410	1214	4516	—	—	—	—	—	—
5200 [2454]	975	3063	995	3160	1015	3256	1034	3354	1053	3453	1070	3552	1087	3653	1104	3754	1120	3856	1135	3959	1149	4063	1162	4167	1175	4273	1188	4379	1199	4486	1210	4594	1220	4703	—	—	—	—	—	—
5300 [2501]	991	3217	1010	3315	1030	3415	1048	3515	1066	3616	1083	3718	1100	3821	1115	3924	1130	4029	1145	4134	1158	4241	1171	4348	1184	4456	1195	4564	1206	4674	1216	4785	—	—	—	—	—	—	—	—
5400 [2548]	1006	3376	1026	3477	1044	3579	1062	3681	1079	3785	1096	3889	1111	3995	1126	4101	1141	4208	1155	4316	1168	4425	1180	4534	1192	4645	1203	4756	1213	4868	—	—	—	—	—	—	—	—	—	—
5500 [2595]	1022	3541	1040	3644	1058	3749	1075	3854	1092	3960	1108	4067	1123	4175	1137	4283	1151	4393	1164	4503	1177	4614	1188	4726	1199	4839	1210	4953	1219	5068	—	—	—	—	—	—	—	—	—	—
5600 [2643]	1037	3712	1055	3818	1072	3924	1089	4032	1105	4141	1120	4250	1134	4361	1148	4472	1161	4584	1174	4697	1185	4810	1196	4925	1207	5040	1216	5156	—	—	—	—	—	—	—	—	—	—	—	—
5700 [2690]	1052	3888	1069	3997	1086	4106	1102	4217	1117	4328	1132	4440	1145	4552	1159	4666	1171	4780	1183	4896	1194	5012	1204	5129	1214	5247	—	—	—	—	—	—	—	—	—	—	—	—	—	—
5800 [2737]	1067	4071	1083	4182	1099	4294	1115	4407	1129	4520	1143	4635	1156	4750	1169	4866	1181	4983	1192	5101	1202	5220	1212	5339	1221	5460	—	—	—	—	—	—	—	—	—	—	—	—	—	—
5900 [2784]	1081	4260	1097	4374	1113	4488	1127	4603	1141	4719	1154	4836	1167	4954	1179	5073	1190	5192	1200	5312	1210	5433	1219	5555	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
6000 [2831]	1095	4455	1111	4571	1126	4688	1139	4805	1153	4924	1165	5043	1177	5164	1188	5285	1199	5407	1209	5529	1218	5653	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

NOTE: A/F-Drive left of bold line, B/G-Drive right of bold line.

Drive Package	A						B					
Motor H.P. [W]	3 [2237.1]						5 [3728.5]					
Blower Sheave	AK71H						AK79H					
Motor Sheave	1VL44*7/8						1VP60*1x1/2					
Belt	A48						A52					
Turns Open	0	1	**2**	3	4	5	0	1	2	3	4	**5**
RPM	1002	955	**909**	862	813	765	1208	1171	1127	1084	1038	**995**

NOTES: 1. Factory sheave settings are shown in bold type.
2. Do not set motor sheave below minimum or maximum turns open shown.
3. Re-adjustment of sheave required to achieve rated airflow at AHRI minimum External Static Pressure
4. Drive data shown is for horizontal airflow with dry coil. Add component resistance (below) to duct resistance to determine total External Static Pressure.

Airflow	AIRFLOW CORRECTION FACTORS *			COMPONENT AIRFLOW RESISTANCE			
				Wet Coil	Horizontal Economizer RA Damper Open	Concentric Diffuser RXRN-AEF3618 & Concentric Adapter RXMC-DD03 (Flush)	Concentric Diffuser RXRN-AED3618 & Concentric Adapter RXMC-DD03 (Drop)
CFM [L/s]	Total MBH	Sensible MBH	Power kW	Resistance — Inches of Water [kPa]			
4000 [1888]	1.01	1.03	1.01	0.15 [.04]	0.16 [.04]	0.76 [.19]	0.68 [.17]
4100 [1935]	1.02	1.04	1.01	0.16 [.04]	0.17 [.04]	0.79 [.20]	0.72 [.18]
4200 [1982]	1.02	1.06	1.01	0.17 [.04]	0.19 [.05]	0.82 [.20]	0.75 [.19]
4300 [2029]	1.03	1.07	1.01	0.17 [.04]	0.20 [.05]	0.86 [.21]	0.79 [.20]
4400 [2076]	1.03	1.08	1.01	0.18 [.05]	0.21 [.05]	0.90 [.22]	0.83 [.21]
4500 [2123]	1.04	1.09	1.02	0.19 [.05]	0.23 [.06]	0.94 [.23]	0.86 [.21]
4600 [2171]	1.04	1.11	1.02	0.20 [.05]	0.24 [.06]	0.98 [.24]	0.89 [.22]
4700 [2218]	1.05	1.12	1.02	0.21 [.05]	0.26 [.06]	1.02 [.25]	0.94 [.23]
4800 [2265]	1.05	1.13	1.02	0.21 [.05]	0.28 [.07]	1.06 [.26]	0.98 [.24]
4900 [2312]	1.06	1.14	1.02	0.22 [.06]	0.29 [.07]	1.10 [.27]	1.01 [.25]
5000 [2359]	1.06	1.16	1.03	0.23 [.06]	0.31 [.08]	1.14 [.28]	1.04 [.26]
5100 [2407]	1.07	1.17	1.03	0.24 [.06]	0.33 [.08]	1.18 [.29]	1.07 [.27]
5200 [2454]	1.07	1.18	1.03	0.25 [.06]	0.35 [.09]	1.22 [.30]	1.10 [.27]
5300 [2501]	1.08	1.19	1.03	0.26 [.06]	0.36 [.09]	1.27 [.32]	1.15 [.29]
5400 [2548]	1.08	1.21	1.03	0.27 [.07]	0.38 [.09]	1.33 [.33]	1.20 [.30]
5500 [2595]	1.09	1.22	1.04	0.28 [.07]	0.40 [.10]	1.37 [.34]	1.25 [.31]
5600 [2643]	1.09	1.23	1.04	0.29 [.07]	0.42 [.10]	1.42 [.35]	1.30 [.32]
5700 [2690]	1.10	1.24	1.04	0.30 [.07]	0.44 [.11]	1.47 [.37]	1.34 [.33]
5800 [2737]	1.10	1.26	1.04	0.31 [.08]	0.46 [.11]	1.52 [.38]	1.38 [.34]
5900 [2784]	1.10	1.27	1.05	0.32 [.08]	0.48 [.12]	1.56 [.39]	1.42 [.35]
6000 [2831]	1.11	1.28	1.05	0.33 [.08]	0.51 [.13]	1.60 [.40]	1.45 [.36]

* Multiply correction factor times gross performance data — resulting sensible capacity cannot exceed total capacity.

[ ] Designates Metric Conversions


FIGURE 19
COOLING TROUBLESHOOTING CHART

⚠ WARNING

DISCONNECT ALL POWER TO UNIT BEFORE SERVICING. CONTACTOR MAY BREAK ONLY ONE SIDE. FAILURE TO SHUT OFF POWER CAN CAUSE ELECTRICAL SHOCK RESULTING IN PERSONAL INJURY OR DEATH.


SYMPTOM	POSSIBLE CAUSE	REMEDY
Unit will not run	• Power off or loose electrical connection	• Check for correct voltage at compressor contactor in control box
	• Thermostat out of calibration-set too high	• Reset
	• Failed contactor	• Check for 24 volts at contactor coil - replace if contacts are open
	• Blown fuses	• Replace fuses
	• Transformer defective	• Check wiring-replace transformer
	• High pressure control open (if provided)	• Reset-also see high head pressure remedy-The high pressure control opens at 450 PSIG
	• Interconnecting low voltage wiring damaged	• Replace thermostat wiring
Condenser fan runs, compressor doesn't	• Loose connection	• Check for correct voltage at compressor - check & tighten all connections
	• Compressor stuck, grounded or open motor winding open internal overload.	• Wait at least 2 hours for overload to reset. If still open, replace the compressor.
	• Low voltage condition	At compressor terminals, voltage must be within 10% of rating plate volts when unit is operating.
	• Low voltage condition	• Add start kit components
Insufficient cooling	• Improperly sized unit	• Recalculate load
	• Improper airflow	• Check - should be approximately 400 CFM per ton.
	• Incorrect refrigerant charge	• Charge per procedure attached to unit service panel.
	• Air, non-condensibles or moisture in system	• Recover refrigerant, evacuate & recharge, add filter drier
	• Incorrect voltage	• At compressor terminals, voltage must be within 10% of rating plate volts when unit is operating.
Compressor short cycles	• Incorrect voltage	• At compressor terminals, voltage must be ± 10% of nameplate marking when unit is operating.
	• Defective overload protector	• Replace - check for correct voltage
	• Refrigerant undercharge	• Add refrigerant
Registers sweat	• Low evaporator airflow	• Increase speed of blower or reduce restriction - replace air filter
High head-low vapor pressures	• Restriction in liquid line, expansion device or filter drier	• Remove or replace defective component
	• Flow check piston size too small	• Change to correct size piston
	• Incorrect capillary tubes	• Change coil assembly
	• TXV does not open	• Replace TXV
High head-high or normal vapor pressure - Cooling mode	• Dirty condenser coil	• Clean coil
	• Refrigerant overcharge	• Correct system charge
	• Condenser fan not running	• Repair or replace
	• Air or non-condensibles in system	• Recover refrigerant, evacuate & recharge
Low head-high vapor pressures	• Defective Compressor valves	• Replace compressor
	• Incorrect capillary tubes	• Replace coil assembly
Low vapor - cool compressor - iced evaporator coil	• Low evaporator airflow	• Increase speed of blower or reduce restriction - replace air filter
	• Operating below 65°F outdoors	• Add Low Ambient Kit
	• Moisture in system	• Recover refrigerant - evacuate & recharge - add filter drier
High vapor pressure	• Excessive load	• Recheck load calculation
	• Defective compressor	• Replace
Fluctuating head & vapor pressures	• TXV hunting	• Check TXV bulb clamp - check air distribution on coil - replace TXV
	• Air or non-condensibles in system	• Recover refrigerant, evacuate & recharge
Gurgle or pulsing noise at expansion device or liquid line	• Air or non-condensibles in system	• Recover refrigerant, evacuate & recharge

FIGURE 20
FURNACE TROUBLESHOOTING GUIDE
(COMBINATION HEATING AND COOLING UNITS WITH DIRECT SPARK IGNITION)

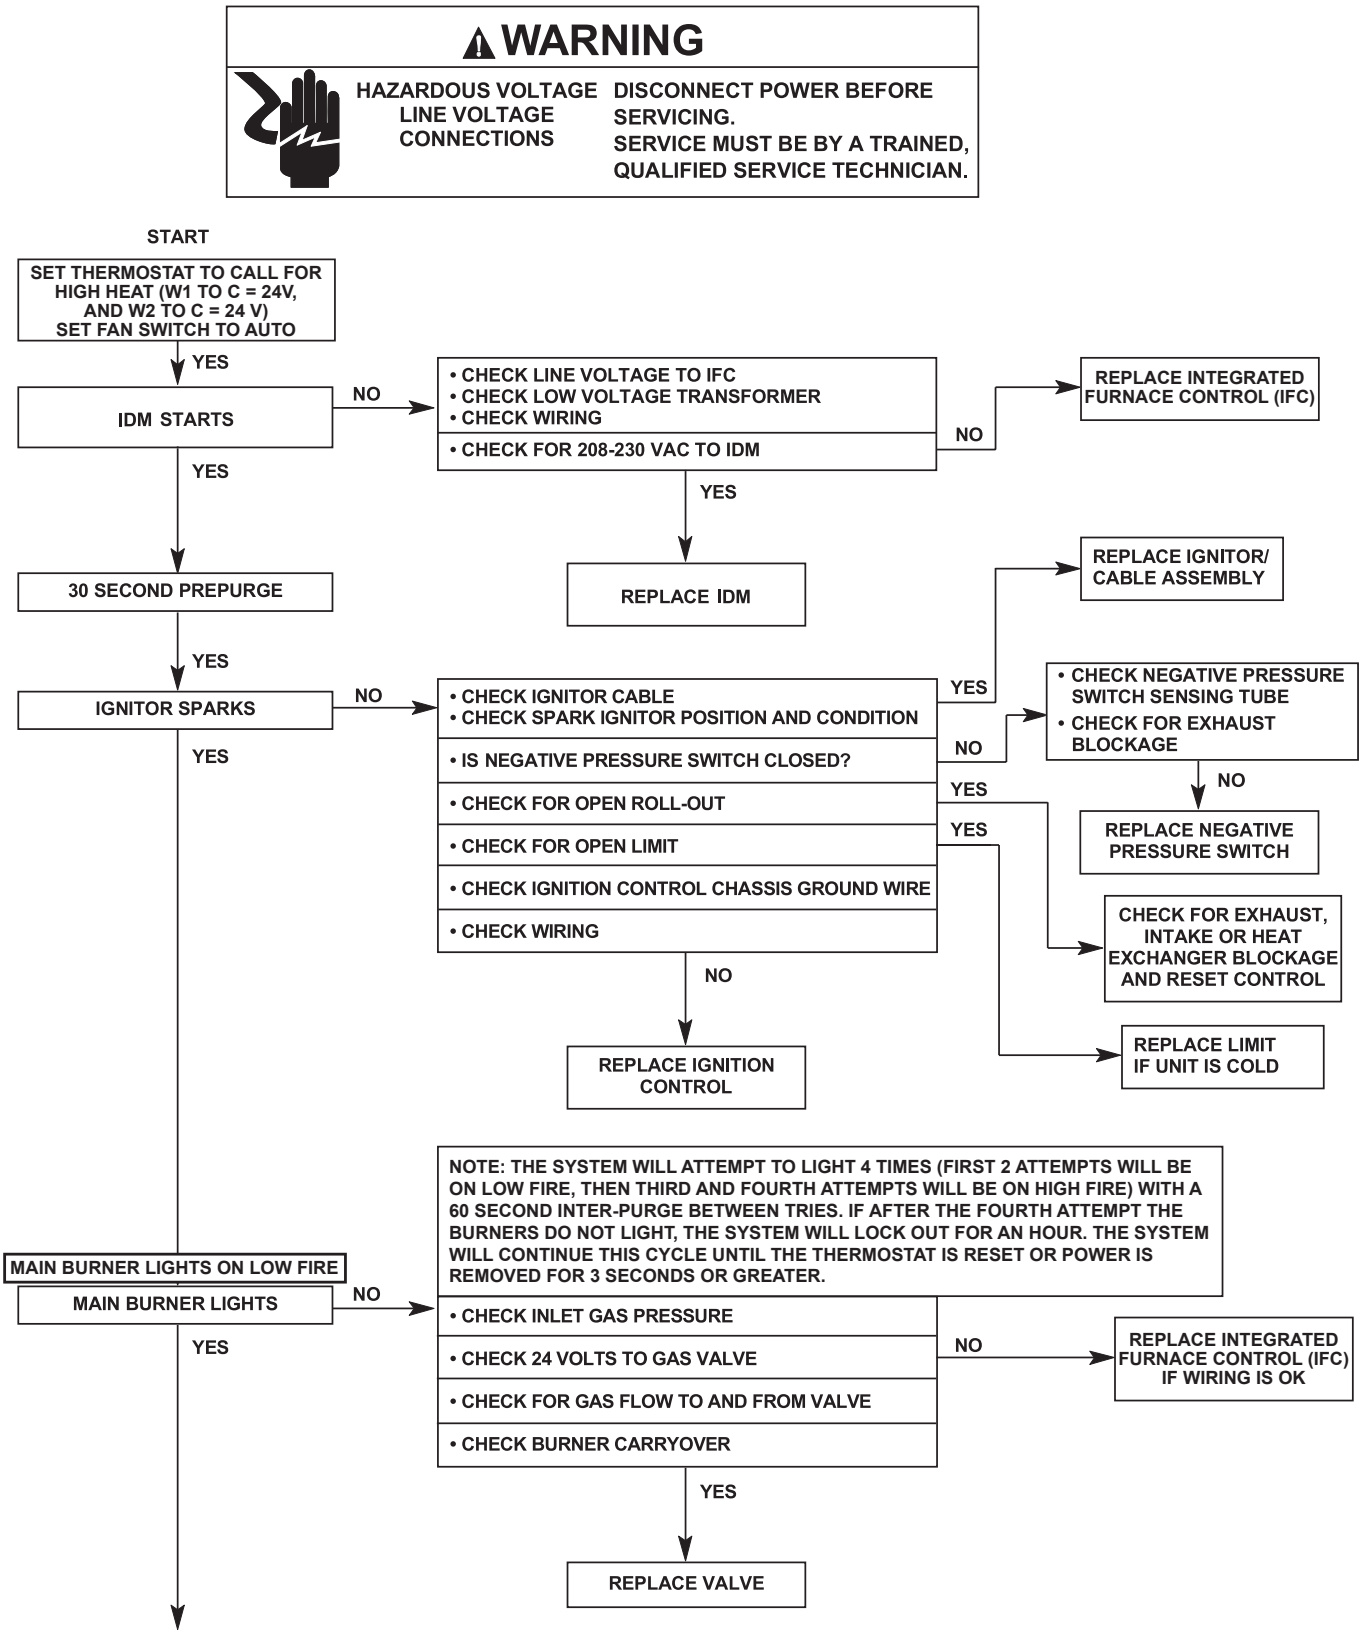

FLOW CHART CONTINUED ON NEXT PAGE

FLOW CHART CONTINUED FROM LAST PAGE

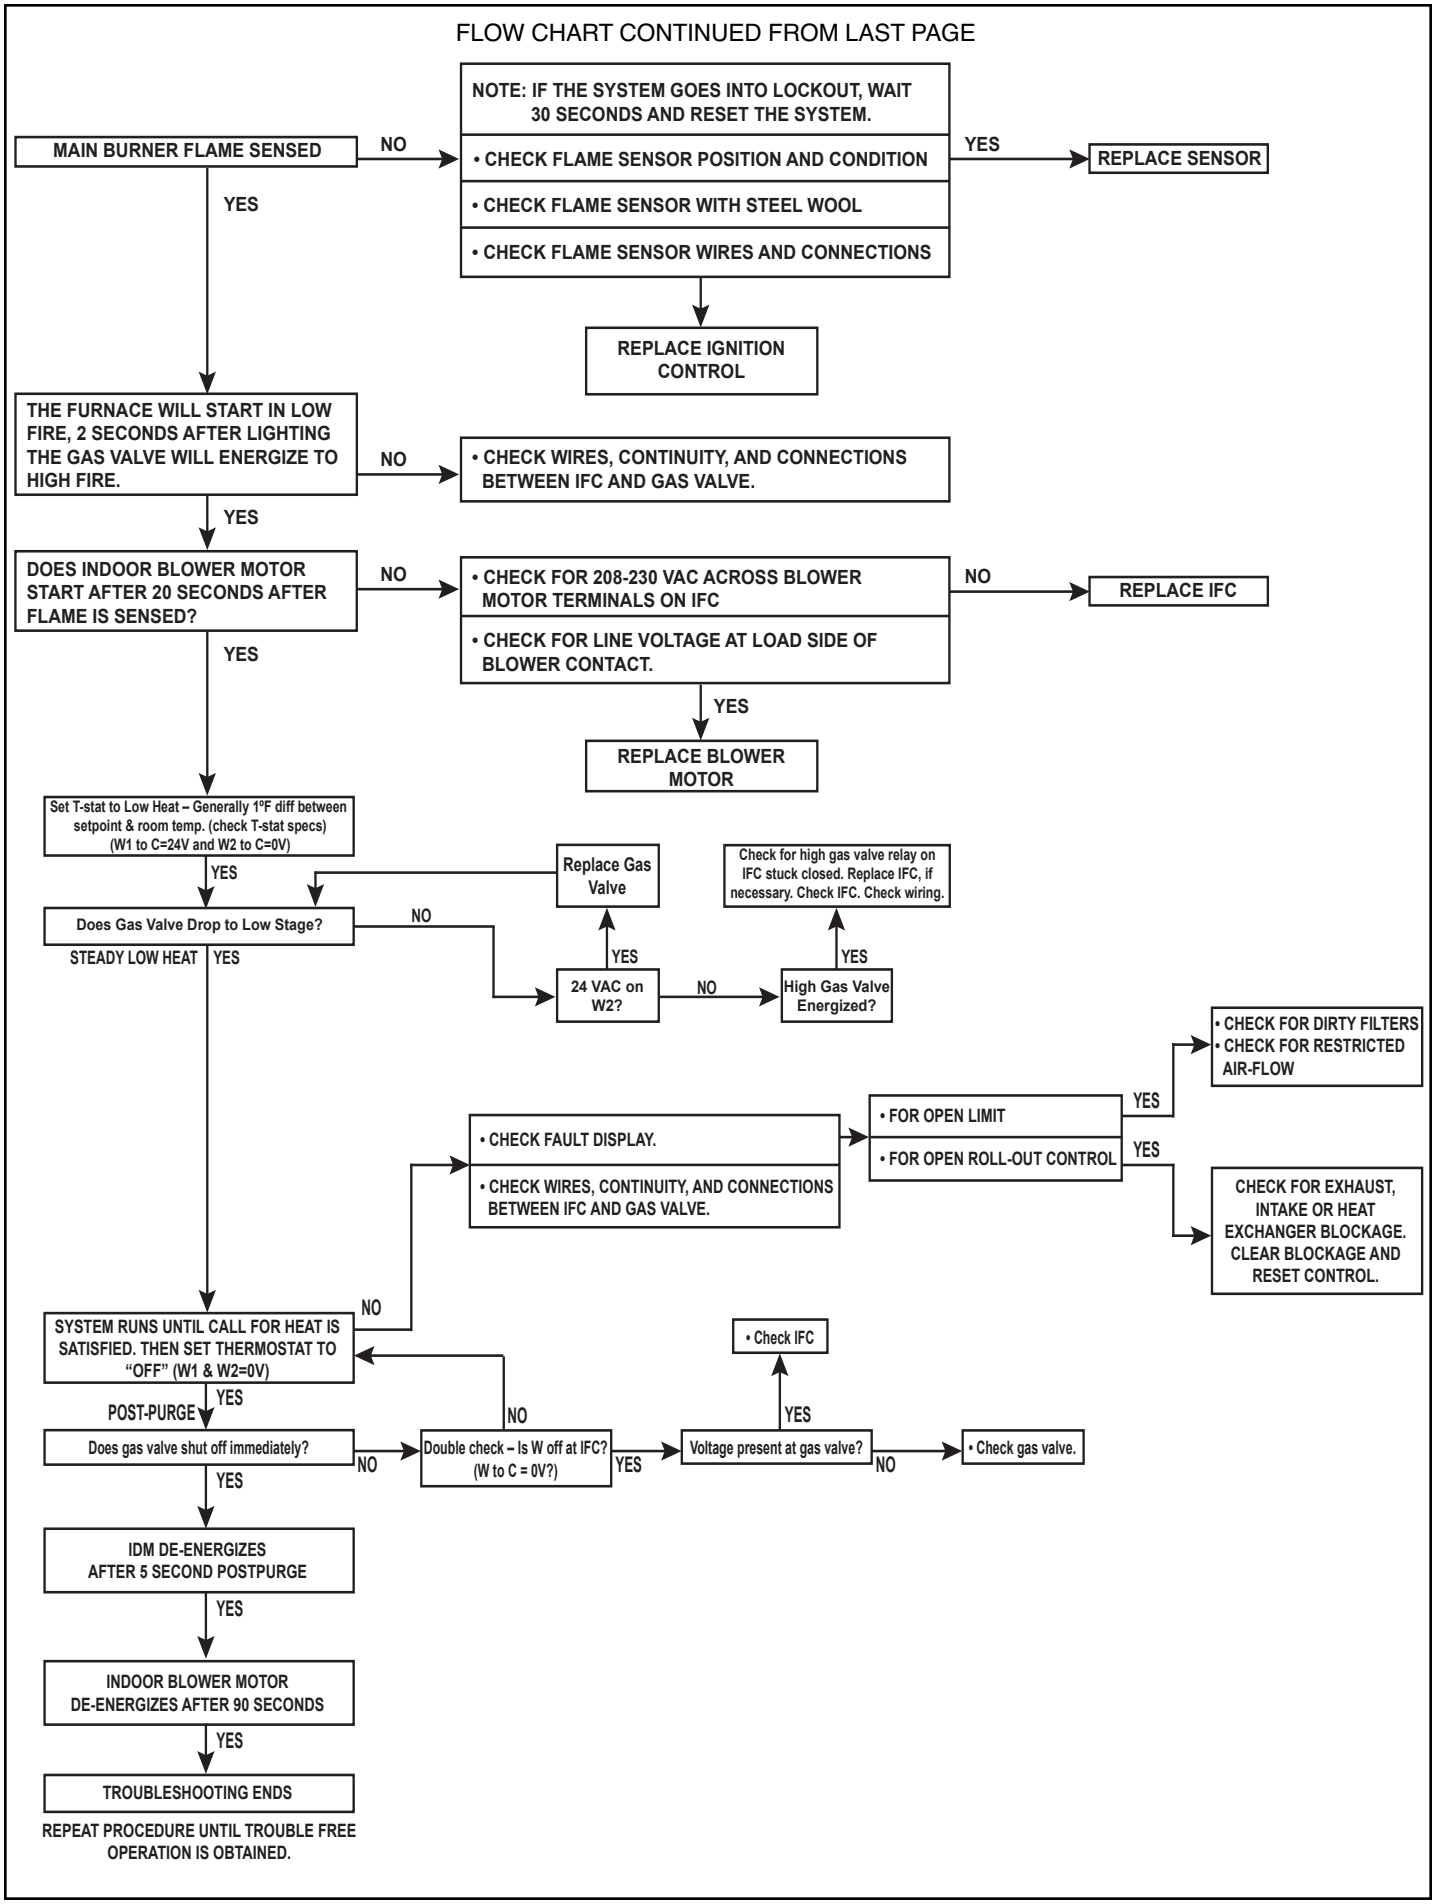


IFC Alarm Codes

CODE	Description	FAULT LEVEL –0,1,2,3*
0	STANDBY	0
c	COMPRESSOR ON – Low (Flashing if in time delay)	0
C	COMPRESSOR ON – High (Flashing if in time delay)	0
E	Economizer Cooling – No Compressor	0
F	CONTINOUS FAN	0
h	HEAT ON – Low Stage	0
H	GAS HEAT ON – High Stage	0
4	Comfort Alert Code 4 for Compressor Circuit 1	3
5	Comfort Alert Code 5 for Compressor Circuit 1	3
6	Comfort Alert Code 6 for Compressor Circuit 1	3
7	Comfort Alert Code 7 for Compressor Circuit 1	3
8	Comfort Alert Code 8 for Compressor Circuit 1	3
9	Comfort Alert Code 9 for Compressor Circuit 1	3
11	FAILED IGNITION	2
12	LO FLAME SENSE	1
13	FLAME LOST	2
14	UNEXPECTED FLAME	3
15	2nd Stage Gas valve improper voltage	2
20	REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 1	2
21	REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 2	2
22	MAIN LIMIT OPEN	2
29	REFRIGERANT HIGH PRESSURE SWITCH OPEN – CIRCUIT 1	2
30	REFRIGERANT HIGH PRESSURE SWITCH OPEN – CIRCUIT 2	2
33	MRLC (Rollout Limit) OPEN	2
34	Comfort Alert Code 4 for Compressor Circuit 2	3
35	Comfort Alert Code 5 for Compressor Circuit 2	3
36	Comfort Alert Code 6 for Compressor Circuit 2	3
37	Comfort Alert Code 7 for Compressor Circuit 2	3
38	Comfort Alert Code 8 for Compressor Circuit 2	3
39	Comfort Alert Code 9 for Compressor Circuit 2	3
42	Invalid Thermostat Selection	1
44	1st Stage COMBUSTION PRESS SWITCH CLOSED	2
46	1st Stage COMBUSTION PRESS SWITCH OPEN	2
49	FREEZE SWITCH OPEN – CIRCUIT 1	2
50	FREEZE SWITCH OPEN – CIRCUIT 2	2
55	2nd Stage COMBUSTION PRESS SWITCH CLOSED	2
57	2nd Stage COMBUSTION PRESS SWITCH OPEN	2,3
59	Condensate Drain Plugged	3
61	Blower Fault – NO RUN	3
83	Condenser Coil Temp Sensor Fail-OCT	2
84	Outdoor Air Temperature Sensor Fail-OAT	2
88	Emergency Stop Fault	3
93	CONTROL Fault	3
97	Smoke Detection	3

*Fault levels:0 = none, 1=warning, 2= problem, 3=shutdown

SYSTEM CHARGE CHART - REFRIGERANT 410A

7.5 TON

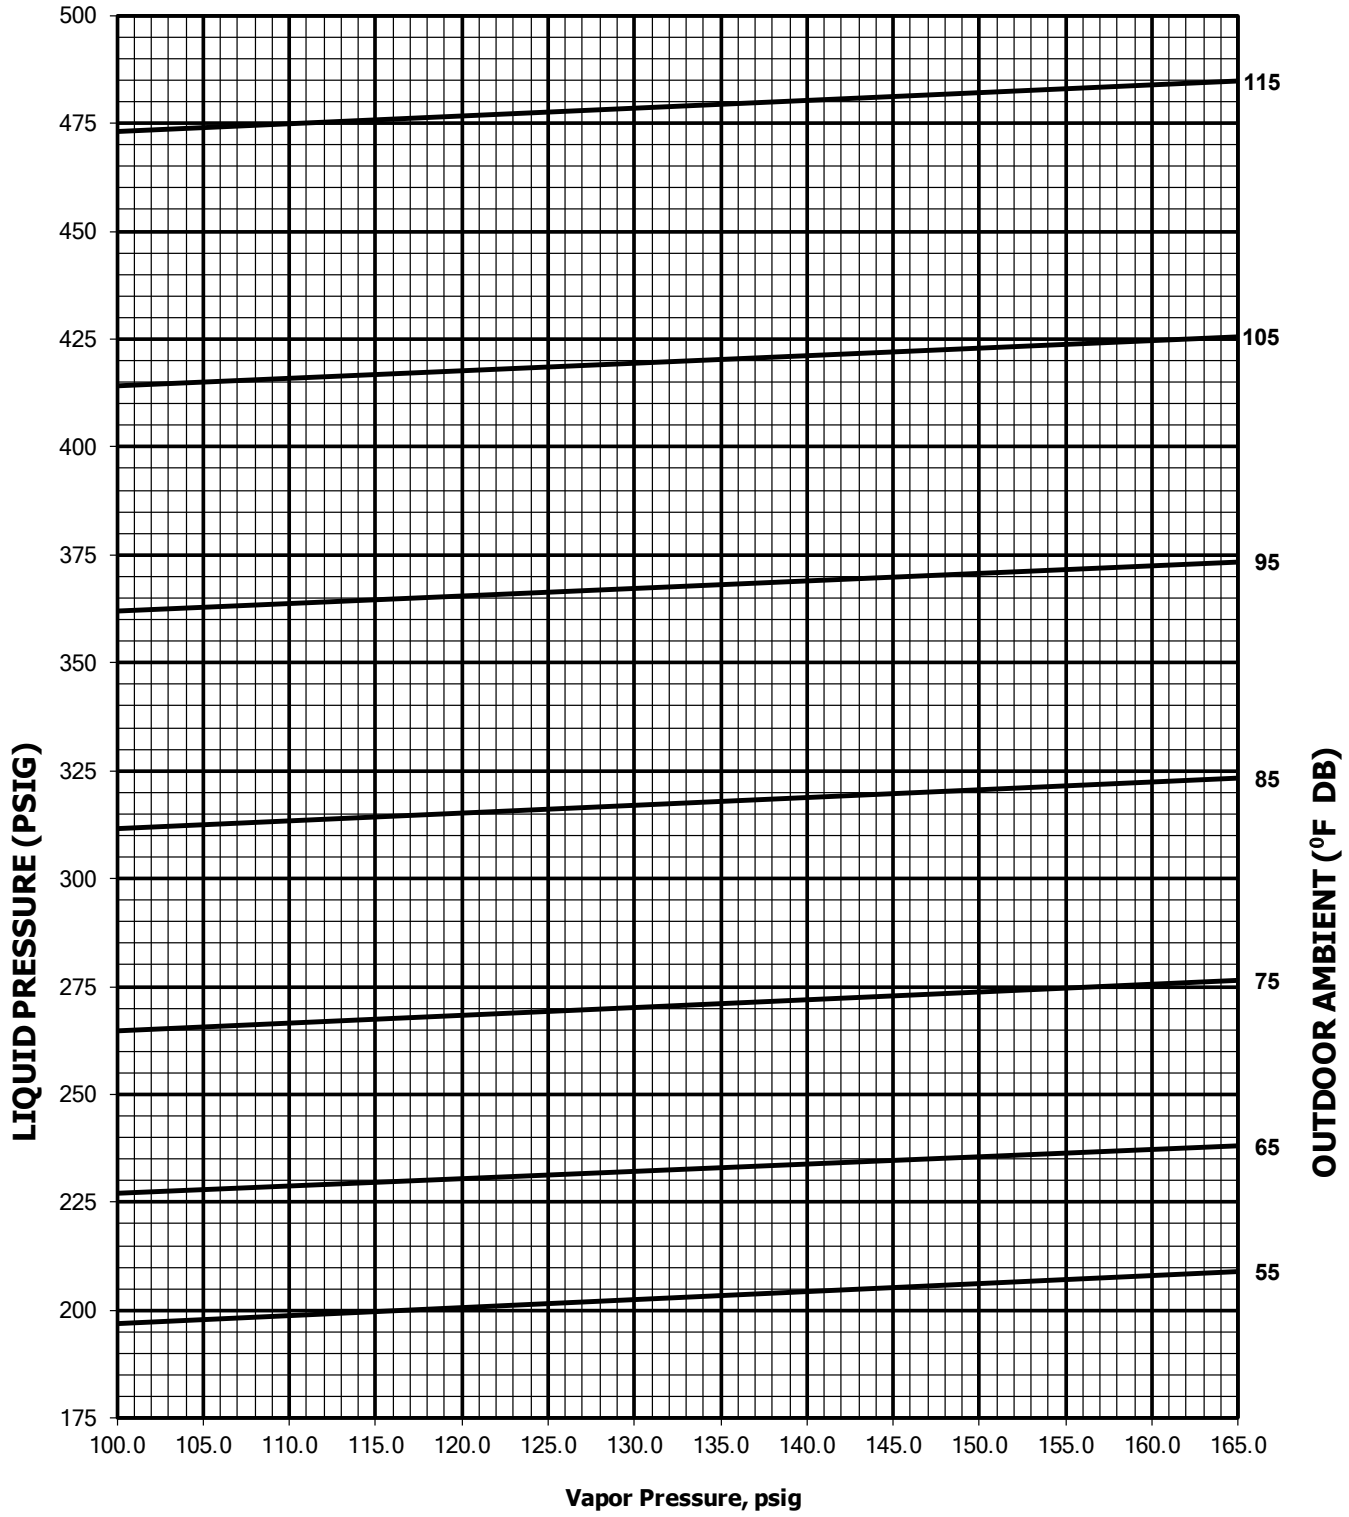


CAUTION: **1. RETURN AIR TEMPERATURE MUST BE WITHIN COMFORT CONDITIONS BEFORE FINAL REFRIGERANT CHECK!**

INSTRUCTIONS:
1. MEASURE PRESSURE AT COMPRESSOR SUCTION AND L IOUID.
2. MEASURE OUTDOOR AMBIENT TO UNIT.
3. PLACE X ON CHART WHERE SUCTION AND LIOUID INTERSECT.
4. IF X IS BELOW OUTDOOR AMBIENT L:NE, ADD CHARGE AND REPEAT STEPS 1-3.
5. IF X IS ABOVE OUTDOOR AMBIENT LINE, RECOVER ExCESS CHARGE AND REPEAT STEPS 1-3.

SYSTEM CHARGE CHART - REFRIGERANT 410A

8.5 TON

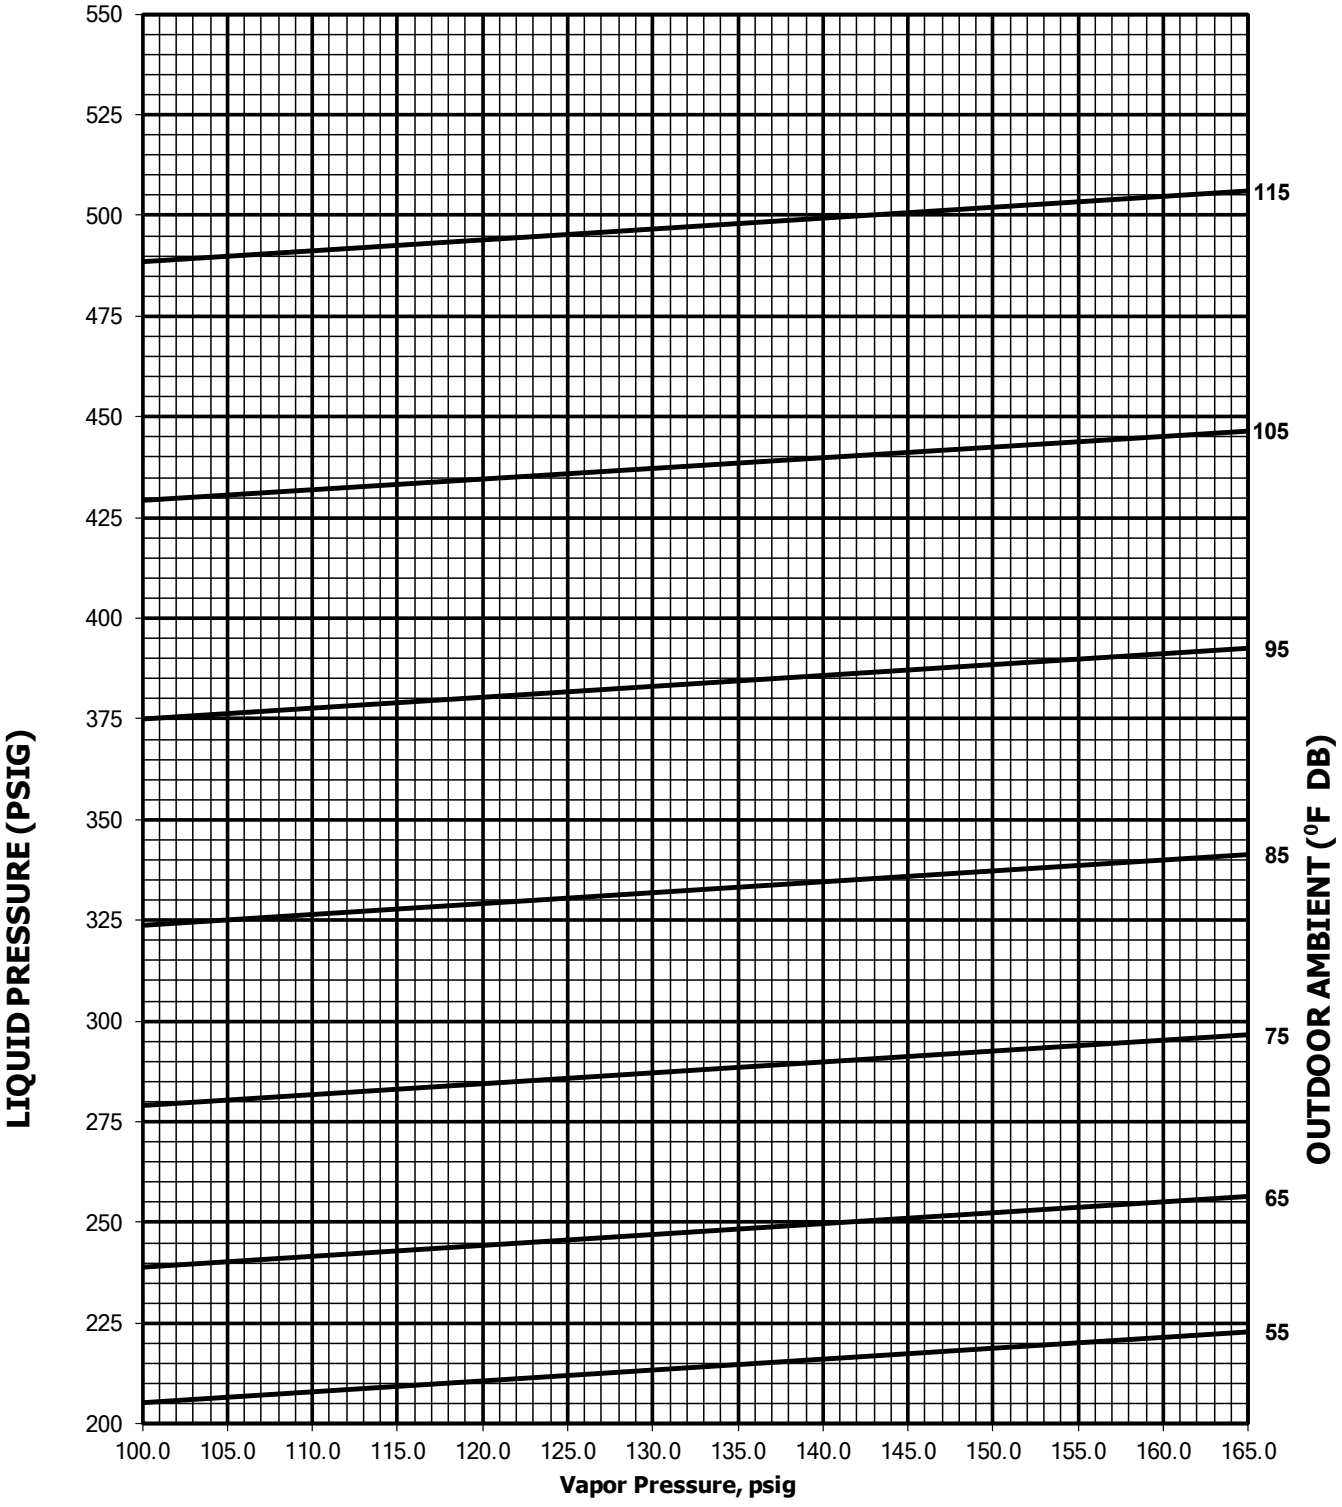


CAUTION: **1. RETURN AIR TEMPERATURE MUST BE WITHIN COMFORT CONDITIONS BEFORE FINAL REFRIGERANT CHECK!**

INSTRUCTIONS:
1. MEASURE PRESSURE AT COMPRESSOR SUCTION AND L IOUID.
2.MEASURE OUTDOOR AMBIENT TO UNIT.
3.PLACE X ON CHART WHERE SUCTION AND LIOUID INTERSECT.
4.IF X IS BELOW OUTDOOR AMBIENT L:NE, ADD CHARGE AND REPEAT STEPS 1-3.
5.IF X IS ABOVE OUTDOOR AMBIENT LINE, RECOVER ExCESS CHARGE AND REPEAT STEPS 1-3.

SYSTEM CHARGE CHART - REFRIGERANT 410A

10 TON

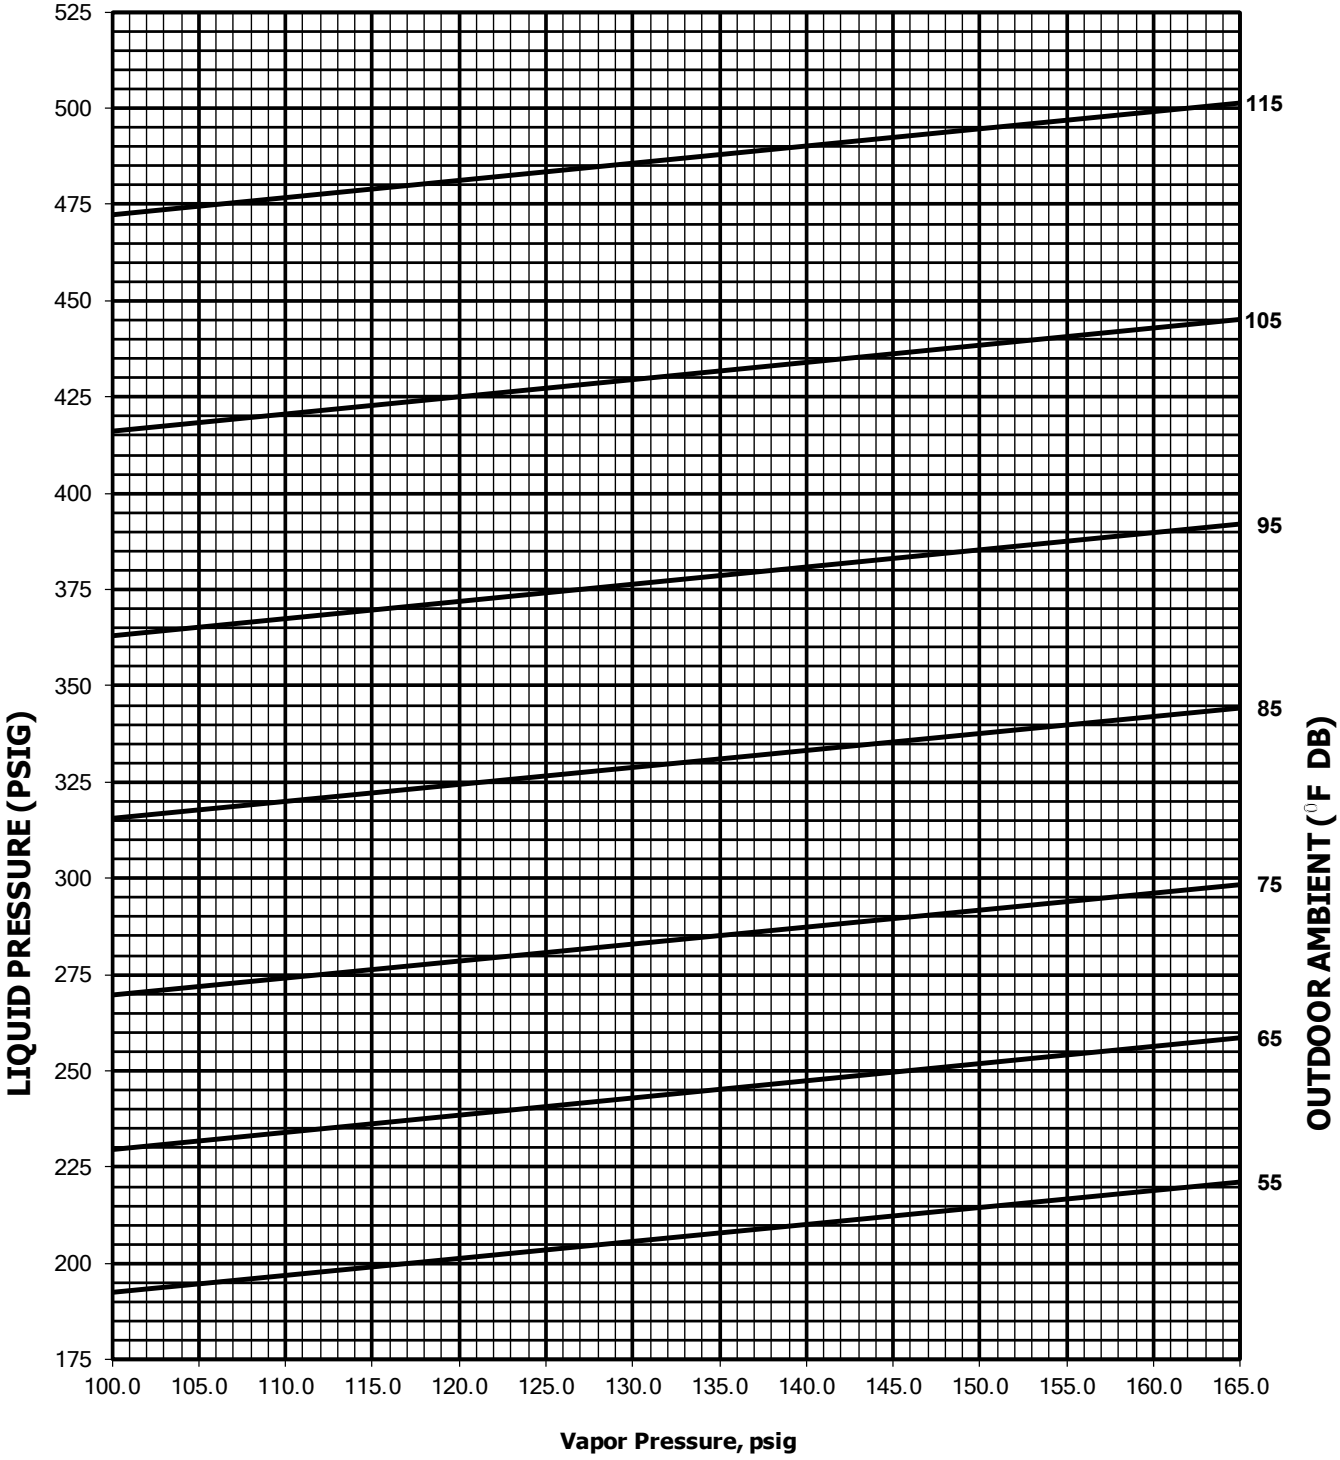


CAUTION: **1. RETURN AIR TEMPERATURE MUST BE WITHIN COMFORT CONDITIONS BEFORE FINAL REFRIGERANT CHECK!**

INSTRUCTIONS:
1. MEASURE PRESSURE AT COMPRESSOR SUCTION AND L IOUID.
2.MEASURE OUTDOOR AMBIENT TO UNIT.
3.PLACE X ON CHART WHERE SUCTION AND LIOUID INTERSECT.
4.IF X IS BELOW OUTDOOR AMBIENT L:NE, ADD CHARGE AND REPEAT STEPS 1-3.
5.IF X IS ABOVE OUTDOOR AMBIENT LINE, RECOVER ExCESS CHARGE AND REPEAT STEPS 1-3.

92-106138-03-00

12.5-Ton AC Charging Chart

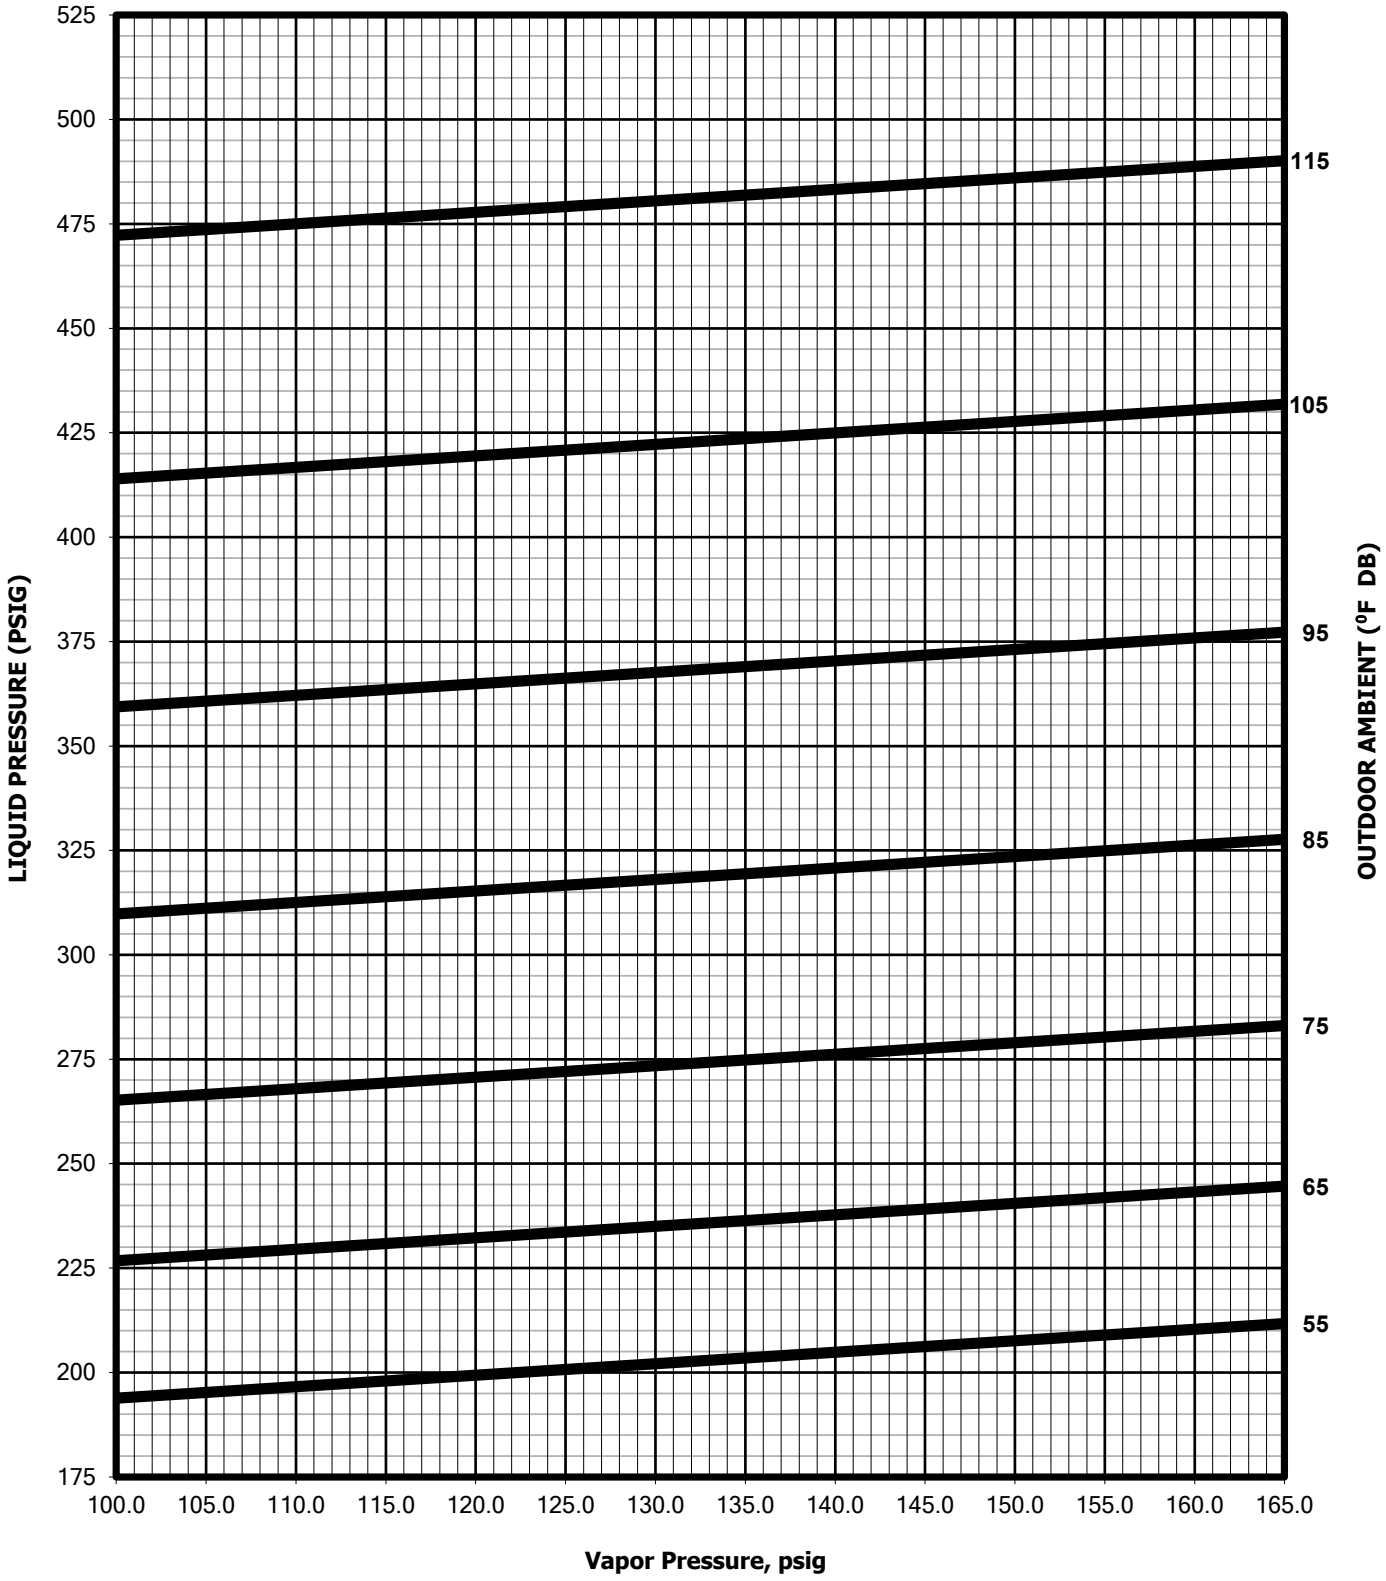


CAUTION: 1. RETURN AIR TEMPERATURE MUST BE WITHIN COMFORT CONDITIONS BEFORE FINAL REFRIGERANT CHECK!

INSTRUCTIONS:
1. MEASURE PRESSURE AT COMPRESSOR SUCTION AND LIQUID.
2. MEASURE OUTDOOR AMBIENT TO UNIT.
3. PLACE X ON CHART WHERE SUCTION AND LIQUID INTERSECT.
4. IF X IS BELOW OUTDOOR AMBIENT LINE, ADD CHARGE AND REPEAT STEPS 1-3.
5. IF X IS ABOVE OUTDOOR AMBIENT LINE, RECOVER EXCESS CHARGE AND REPEAT STEPS 1-3.

92-106138-04-00

7.5 Ton 2 - Stage AC Charging Chart

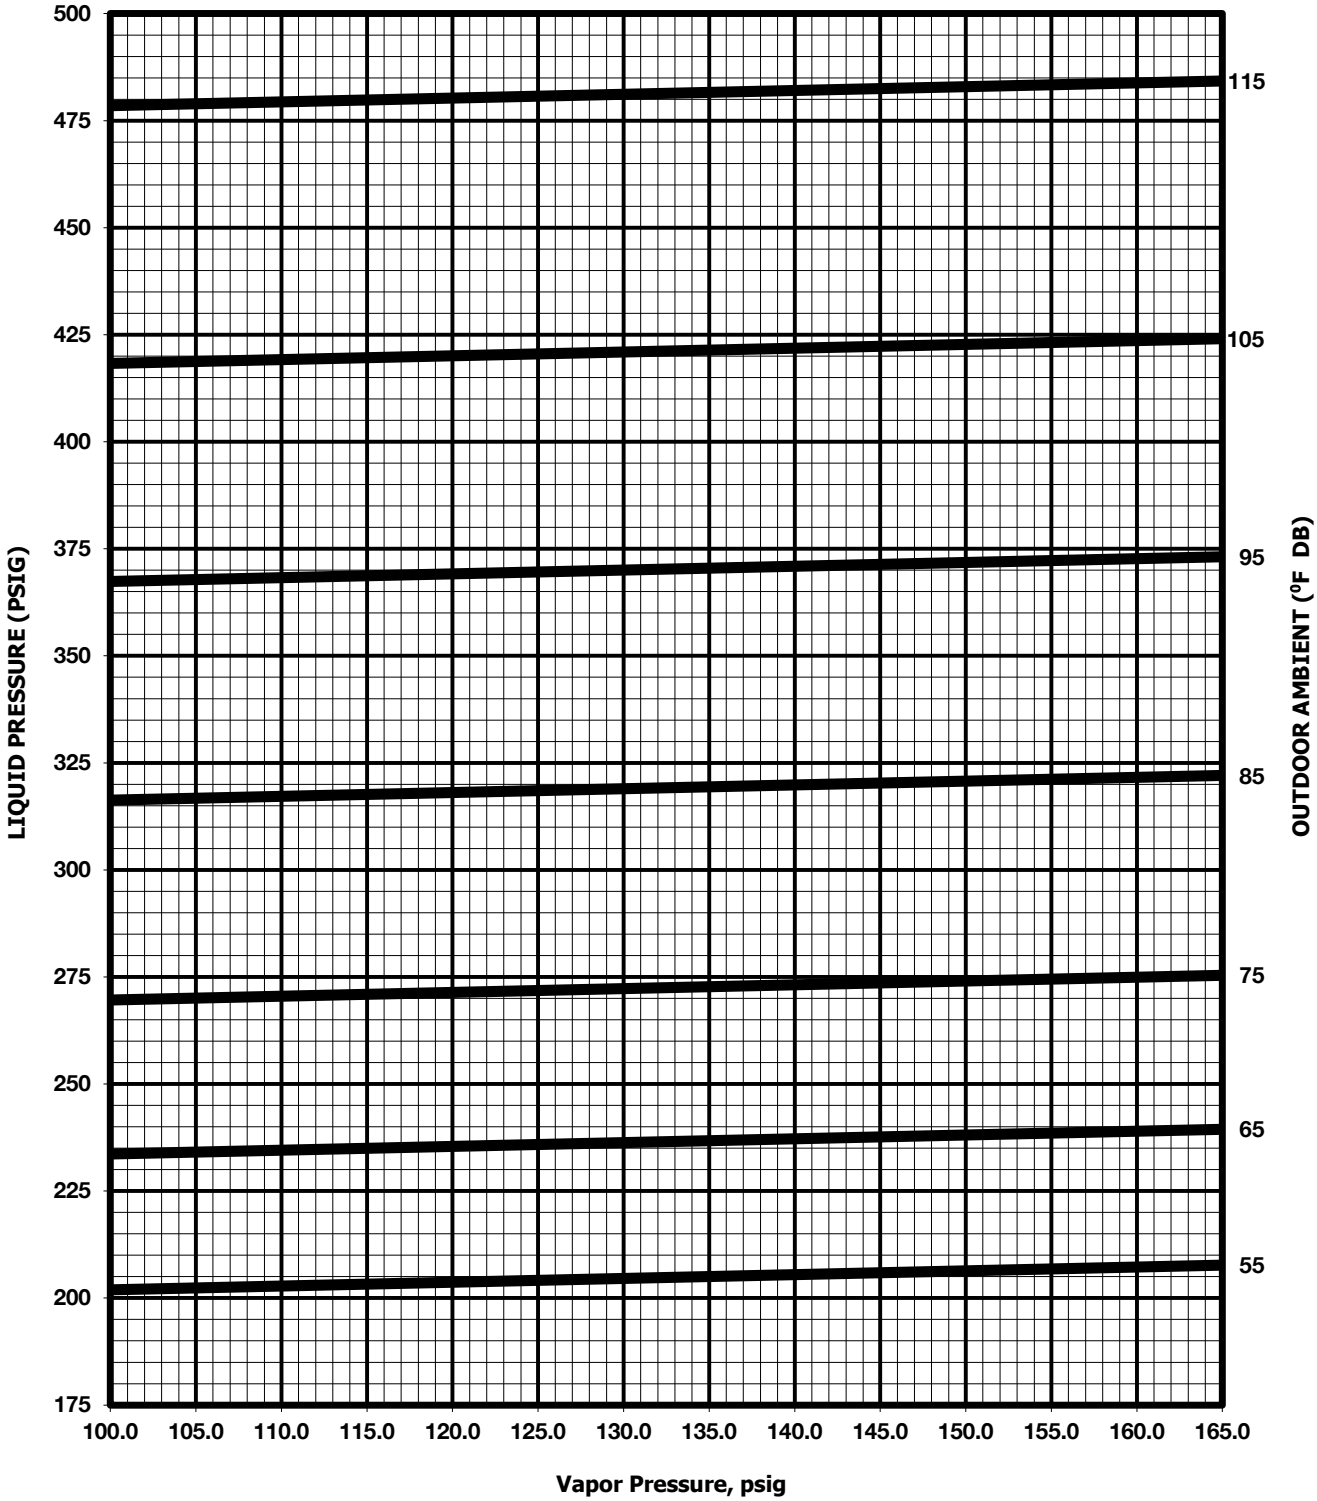

CAUTION: 1. RETURN AIR TEMPERATURE MUST BE WITHIN COMFORT CONDITIONS BEFORE FINAL REFRIGERANT CHECK!

INSTRUCTIONS: 1. MEASURE PRESSURE AT COMPRESSOR SUCTION AND LIQUID.

2. MEASURE OUTDOOR AMBIENT TO UNIT.


3. PLACE X ON CHART WHERE SUCTION AND LIQUID INTERSECT.

4. IF X IS BELOW OUTDOOR AMBIENT LINE, ADD CHARGE AND REPEAT STEPS 1-3.

5. IF X IS ABOVE OUTDOOR AMBIENT LINE, RECOVER EXCESS CHARGE AND REPEAT STEPS 1-3.

92-106138-09-0C

8.5 Ton 2 - Stage AC Charging Chart

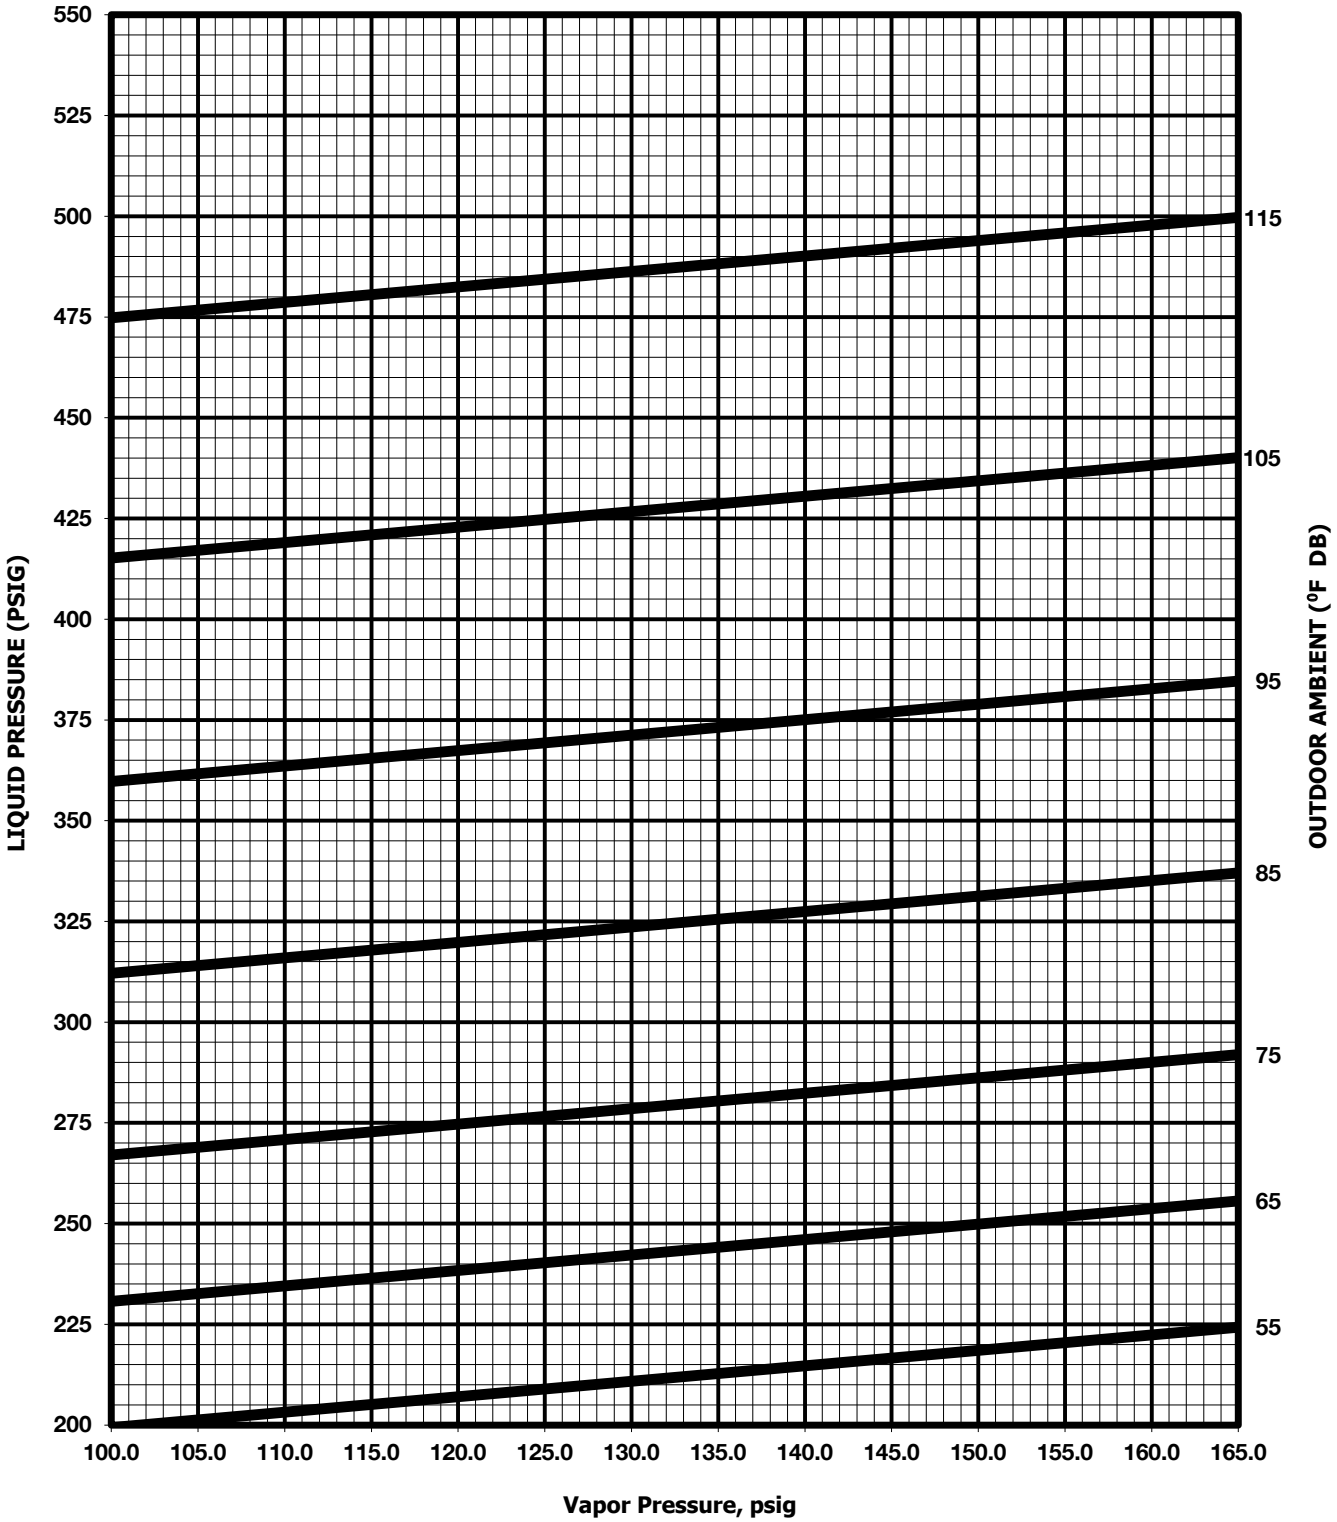

CAUTION: 1. RETURN AIR TEMPERATURE MUST BE WITHIN COMFORT CONDITIONS BEFORE FINAL REFRIGERANT CHECK!

INSTRUCTIONS: 1. MEASURE PRESSURE AT COMPRESSOR SUCTION AND LIQUID.

2. MEASURE OUTDOOR AMBIENT TO UNIT.


3. PLACE X ON CHART WHERE SUCTION AND LIQUID INTERSECT.

4. IF X IS BELOW OUTDOOR AMBIENT LINE, ADD CHARGE AND REPEAT STEPS 1-3.

5. IF X IS ABOVE OUTDOOR AMBIENT LINE, RECOVER EXCESS CHARGE AND REPEAT STEPS 1-3.

92-106138-10-00

10-Ton 2 Stage AC Charging Chart

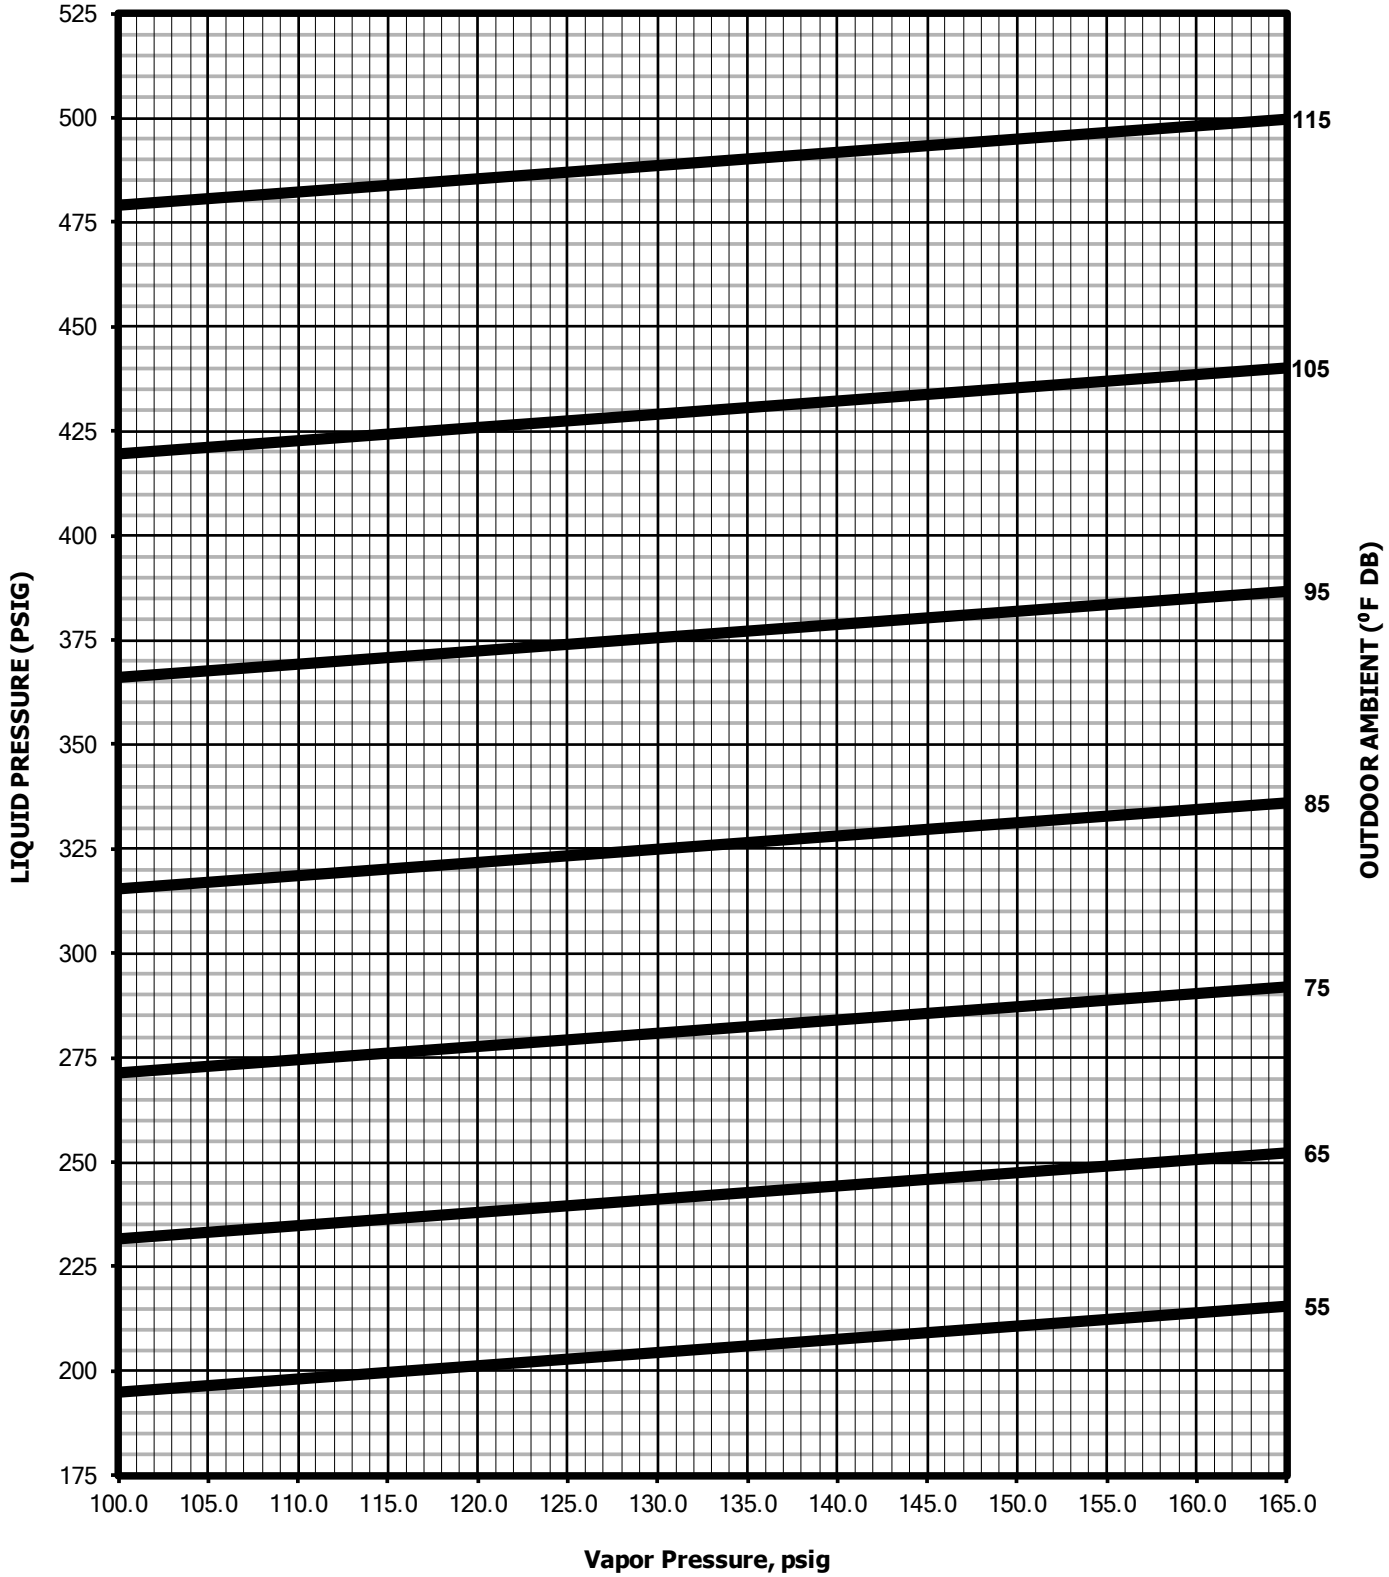


CAUTION: **1. RETURN AIR TEMPERATURE MUST BE WITHIN COMFORT CONDITIONS BEFORE FINAL REFRIGERANT CHECK!**

INSTRUCTIONS:

1. MEASURE PRESSURE AT COMPRESSOR SUCTION AND LIQUID.
2. MEASURE OUTDOOR AMBIENT TO UNIT.
3. PLACE X ON CHART WHERE SUCTION AND LIQUID INTERSECT.
4. IF X IS BELOW OUTDOOR AMBIENT LINE, ADD CHARGE AND REPEAT STEPS 1-3.
5. IF X IS ABOVE OUTDOOR AMBIENT LINE, RECOVER EXCESS CHARGE AND REPEAT STEPS 1-3.

92-106138-11-00

FIGURE 21

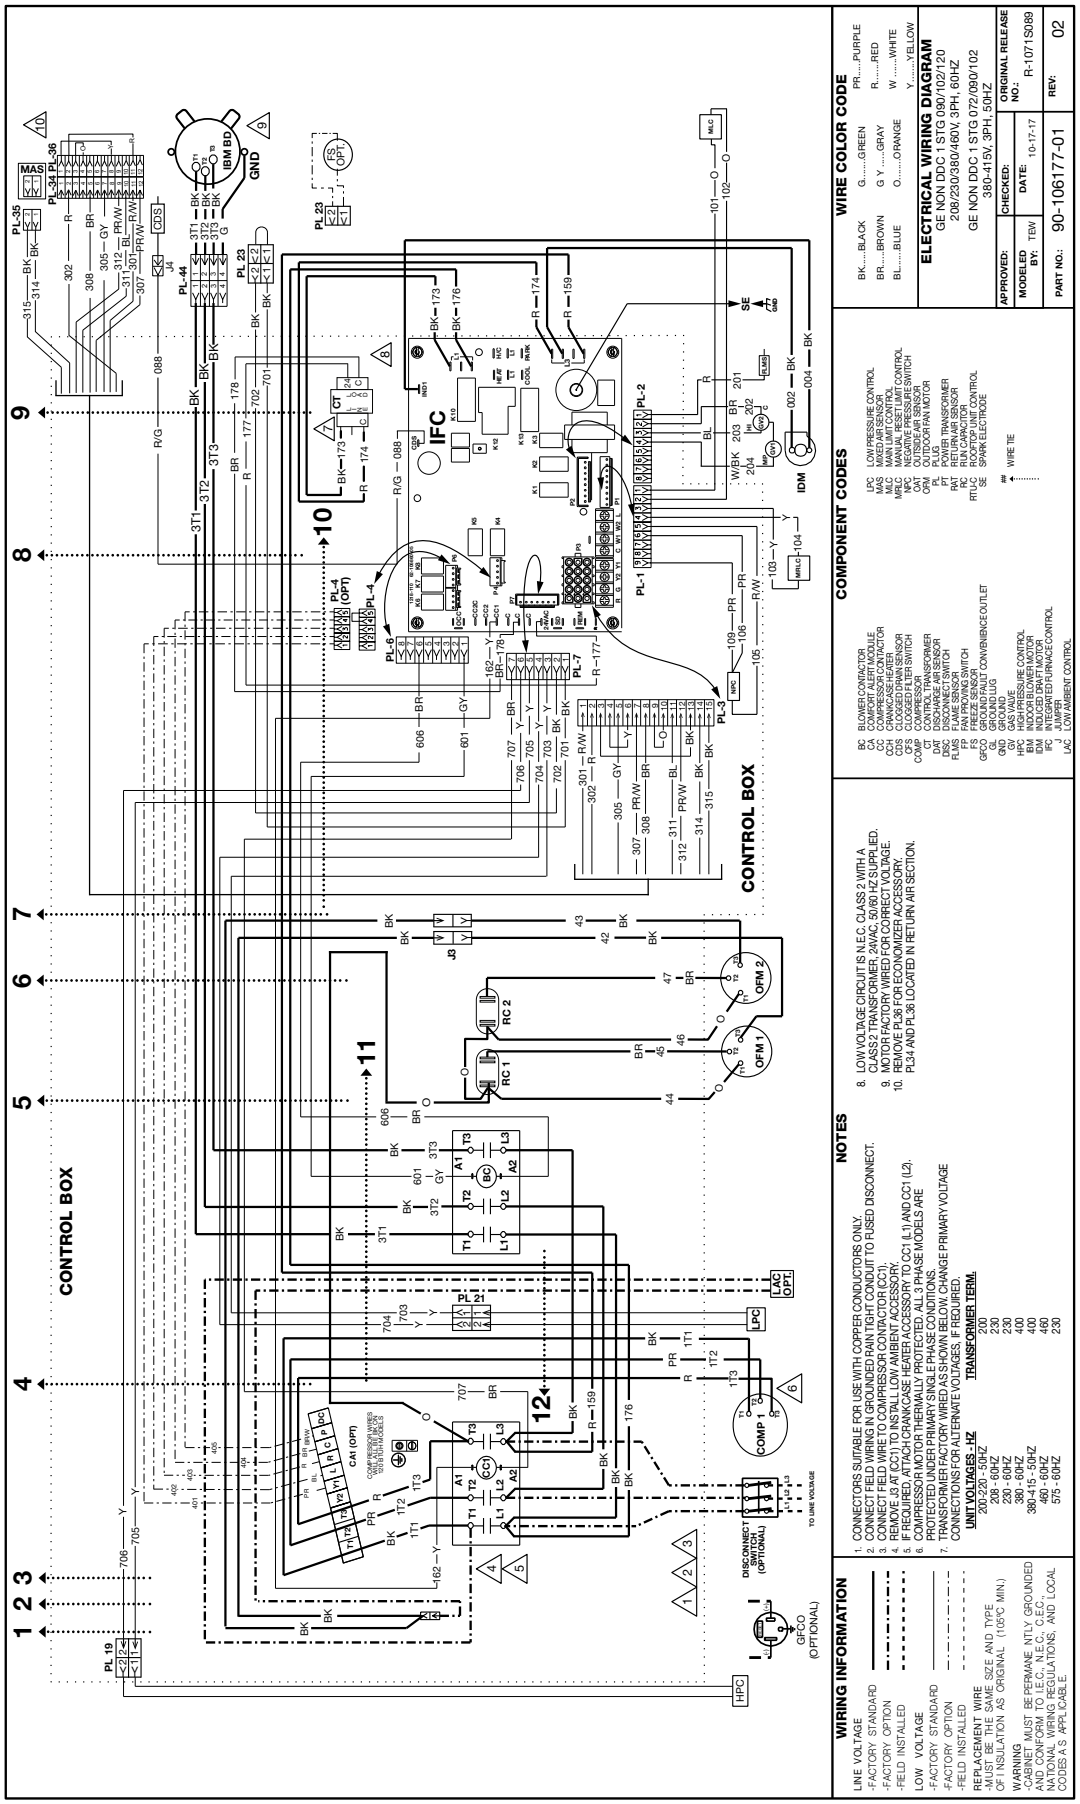

WIRING INFORMATION

LINE VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED

LOW VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED

REPLACEMENT WIRE
-MUST BE THE SAME SIZE AND TYPE OF INSULATION AS ORIGINAL (105°C MIN.)

WARNING
-CABINET MUST BE PERMANENTLY GROUNDED AND CONFORM TO I.E.C., N.E.C., C.E.C., AND LOCAL WIRING REGULATIONS, AND LOCAL CODES AS APPLICABLE.

NOTES

1. CONNECTORS SUITABLE FOR USE WITH COPPER CONDUCTORS ONLY.
2. CONNECT FIELD WIRING IN GROUNDED METAL CONDUIT TO FUSED DISCONNECT.
3. CONNECT FIELD WIRE TO COMPRESSOR CONTACTOR (CC1).
4. REMOVE J3 AT (CC1) TO INSTALL LOW AMBIENT ACCESSORY.
5. IF REQUIRED, ATTACH CRANKCASE HEATER ACCESSORY TO CC1 (L1) AND CC1 (L2).
6. COMPRESSOR MOTOR THERMALLY PROTECTED. ALL 3 PHASE MODELS ARE PROTECTED UNDER PRIMARY SINGLE PHASE CONDITIONS.
7. TRANSFORMER FACTORY WIRED AS SHOWN BELOW. CHANGE PRIMARY VOLTAGE CONNECTIONS FOR ALTERNATE VOLTAGES, IF REQUIRED.

UNIT VOLTAGES - HZ	TRANSFORMER TERM.
200-230 - 50HZ	200
208 - 60HZ	208
230 - 60HZ	230
380 - 60HZ	400
380-415 - 50HZ	400
460 - 60HZ	460
575 - 60HZ	575

8. LOW VOLTAGE CIRCUIT IS N.E.C. CLASS 2 WITH A CLASS 2 TRANSFORMER, 24VAC, 50/60 HZ SUPPLIED.
9. MOTOR FACTORY WIRED FOR CORRECT VOLTAGE.
10. REMOVE PL-36 FOR CONNECTION OF OPTIONAL ACCESSORY PL34 AND PL36 LOCATED IN RETURN AIR SECTION.

COMPONENT CODES


BC	BLOWER CONTACTOR
CAP	CONTACTOR COIL MODULE
CC	COMPRESSOR CONTACTOR
CCH	CRANKCASE HEATER
CFS	CLOGGED FILTER SENSOR
CFS	CLOGGED FILTER SWITCH
COMP	COMPRESSOR
CPT	CONTROL POWER TRANSFORMER
DAT	DISCHARGE AIR SENSOR
DSC	DISCONNECT SWITCH
FLWS	FAN PROVING SWITCH
FS	FREEZE SENSOR
GFCI	GROUND FAULT CONVENIENCE OUTLET
GFCO	GROUND FAULT
GND	GROUND
J	JUMPER
HPC	HIGH PRESSURE CONTROL
IBM	INDOOR BLOWER MOTOR
IDM	INDOOR BLOWER MOTOR
IFC	INTEGRATED FURNACE CONTROL
J	JUMPER
LAC	LOW AMBIENT CONTROL
LPC	LOW PRESSURE CONTROL
MAS	MIXED AIR SENSOR
MLC	MAIN LIMIT CONTROL
MMEC	MANUAL MEDIUM SPEED CUT OUT CONTROL
NPC	NEGATIVE PRESSURE SWITCH
OAT	OUTSIDE AIR SENSOR
ORM	OUTDOOR FAN MOTOR
PL	PLUG
PT	POWER TRANSFORMER
RAT	RETURN AIR SENSOR
RC	RUN CAPACITOR
RTUC	ROOFTOP UNIT CONTROL
SE	SPARK ELECTRODE
##	WIRE TIE

WIRE COLOR CODE

BK....BLACK	G.....GREEN	PR.....PURPLE
BR.....BROWN	G Y .....GRAY	R.....RED
BL.....BLUE	O.....ORANGE	W .....WHITE
		Y.....YELLOW

ELECTRICAL WIRING DIAGRAM
GE NON DDC 1 STG 090/102/120
208/230/380/460V, 3PH, 60HZ
GE NON DDC 1 STG 072/090/102
380-415V, 3PH, 50HZ

APPROVED:	CHECKED:	ORIGINAL RELEASE NO.:
MODELED BY: TEW	DATE: 10-17-17	R-1071S089
PART NO.: 90-106177-01	REV: 02	

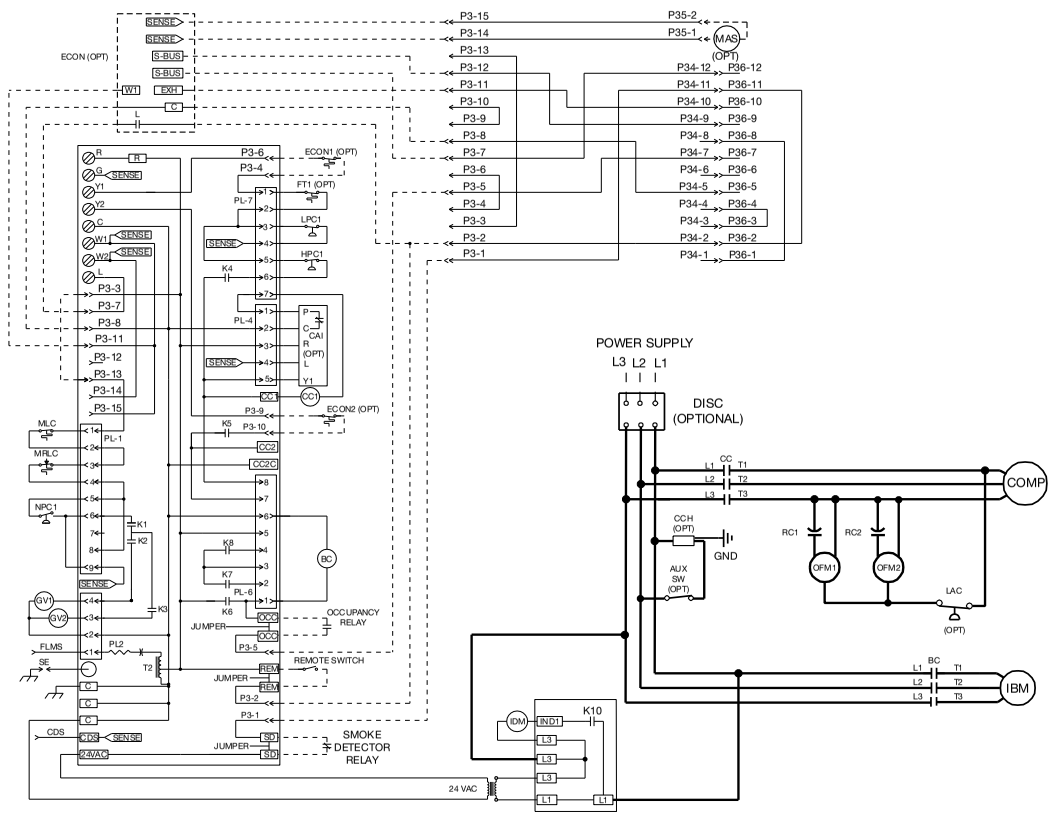

ALARM CODES

CODE	Description	FAULT LEVEL –0,1,2,3*
0	STANDBY	0
c	COMPRESSOR ON – Low (Flashing if in time delay)	0
C	COMPRESSOR ON – High (Flashing if in time delay)	0
E	Economizer Cooling – No Compressor	0
F	CONTINOUS FAN	0
h	HEAT ON –Low Stage	0
H	GAS HEAT ON – High Stage	0
4	Comfort Alert Code 4 for Compressor Circuit 1	3
5	Comfort Alert Code 5 for Compressor Circuit 1	3
6	Comfort Alert Code 6 for Compressor Circuit 1	3
7	Comfort Alert Code 7 for Compressor Circuit 1	3
8	Comfort Alert Code 8 for Compressor Circuit 1	3
9	Comfort Alert Code 9 for Compressor Circuit 1	3
11	FAILED IGNITION	2
12	LO FLAME SENSE	1
13	FLAME LOST	2
14	UNEXPECTED FLAME	3
15	2ND Stage Gas valve improper voltage	2
20	REFRIGERANT LOW PRESSURE SWITCH OPEN –CIRCUIT1	2
21	REFRIGERANT LOW PRESSURE SWITCH OPEN –CIRCUIT2	2
22	MAIN LIMIT OPEN	2
29	REFRIGERANT HIGH PRESSURES WITCH OPEN –CIRCUIT1	2
30	REFRIGERANT HIGH PRESSURES WITCH OPEN –CIRCUIT2	2
33	MRLC (Rollout Limit) OPEN	2
34	Comfort Alert Code 4 for Compressor Circuit 2	3
35	Comfort Alert Code 5 for Compressor Circuit 2	3
36	Comfort Alert Code 6 for Compressor Circuit 2	3
37	Comfort Alert Code 7 for Compressor Circuit 2	3
38	Comfort Alert Code 8 for Compressor Circuit 2	3
39	Comfort Alert Code 9 for Compressor Circuit 2	3
42	Invalid Thermostat Selection	1
44	1ST Stage COMBUSTION PRESS SWITCH CLOSED	2
46	1ST Stage COMBUSTION PRESS SWITCH OPEN	2
49	FREEZE SWITCH OPEN – CIRCUIT 1	2
50	FREEZE SWITCH OPEN -CIRCUIT 2	2
55	2ND Stage COMBUSTION PRESS SWITCH CLOSED	2
57	2ND Stage COMBUSTION PRESS SWITCH OPEN	2,3
59	Condensate Drain Plugged	3
61	Blower Fault – NO RUN	3
83	Condenser Coil Temp Sensor Fail-OCT	2
84	Outdoor Air Temperature Sensor Fail-OAT	2
88	Emergency Stop Fault	3
93	CONTROL Fault	3
97	Smoke Detection	3

*Fault levels: 0 = none, 1=warning, 2= problem, 3=shutdown

WIRING INFORMATION

LINE VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED

LOW VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED

REPLACEMENT WIRE
-MUST BE THE SAME SIZE AND TYPE OF INSULATION AS ORIGINAL (105°C MIN.)

WARNING
-CABINET MUST BE PERMANENTLY GROUNDED AND CONFORM TO I.E.C., N.E.C., C.E.C., NATIONAL WIRING REGULATIONS, AND LOCAL CODES AS APPLICABLE.

NOTES

1. CONNECTORS SUITABLE FOR USE WITH COPPER CONDUCTORS ONLY.
2. CONNECT FIELD WIRING IN GROUNDED RAIN TIGHT CONDUIT TO FUSED DISCONNECT.
3. CONNECT FIELD WIRE TO COMPRESSOR CONTACTOR (CC1).
4. REMOVE J3 AT (CC1) TO INSTALL LOW AMBIENT ACCESSORY.
5. IF REQUIRED, ATTACH CRANKCASE HEATER ACCESSORY TO CC1 (L1) AND CC1 (L2).
6. COMPRESSOR MOTOR THERMALLY PROTECTED. ALL 3 PHASE MODELS ARE PROTECTED UNDER PRIMARY SINGLE PHASE CONDITIONS.
7. TRANSFORMER FACTORY WIRED AS SHOWN BELOW. CHANGE PRIMARY VOLTAGE CONNECTIONS FOR ALTERNATE VOLTAGES, IF REQUIRED.

UNIT VOLTAGES - HZ	TRANSFORMER TERM.
200-220 - 50HZ	200
208 - 60HZ	230
230 - 60HZ	230
380 - 60HZ	400
380-415 - 50HZ	400
460 - 60HZ	460
575 - 60HZ	230

8. LOW VOLTAGE CIRCUIT IS N.E.C. CLASS 2 WITH A CLASS 2 TRANSFORMER, 24VAC, 50/60 HZ SUPPLIED.
9. MOTOR FACTORY WIRED FOR CORRECT VOLTAGE.
10. REMOVE PL36 FOR ECONOMIZER ACCESSORY. PL34 AND PL36 LOCATED IN RETURN AIR SECTION.

COMPONENT CODES

BC	BLOWER CONTACTOR
CA	COMFORT ALERT MODULE
CC	COMPRESSOR CONTACTOR
CCH	CRANKCASE HEATER
CDS	CLOGGED DRAIN SENSOR
CFS	CLOGGED FILTER SWITCH
COMP	COMPRESSOR
CT	CONTROL TRANSFORMER
DAT	DISCHARGE AIR SENSOR
DISC	DISCONNECT SWITCH
FLMS	FLAME SENSOR
FP	FAN PROVING
FS	FREEZE SENSOR
GFCO	GROUND FAULT CONVENIENCE OUTLET
GL	GROUND LUG
GND	GROUND
HPC	HIGH PRESSURE CONTROL
IBM	INDOOR BLOWER MOTOR
IDM	INDUCED DRAFT MOTOR
IFC	INTEGRATED FURNACE CONTROL
LAC	LOW AMBIENT CONTROL
LPC	LOW PRESSURE CONTROL
MAS	MIXED AIR SENSOR
MLC	MAIN LIMIT CONTROL
MRLC	MANUAL RESET LIMIT CONTROL
NPC	NEGATIVE PRESSURE SWITCH
OAT	OUTSIDE AIR SENSOR
OFM	OUTDOOR FAN MOTOR
PL	PLUG
PT	POWER TRANSFORMER
RAT	RETURN AIR SENSOR
RC	RUN CAPACITOR
RTU-C	ROOFTOP UNIT CONTROL
SE	SPARK ELECTRODE

WIRE COLOR CODE

BK.....BLACK	G.....GREEN	PR.....PURPLE
BR.....BROWN	G Y .....GRAY	R.....RED
BL.....BLUE	O.....ORANGE	W .....WHITE
		Y .....YELLOW

ELECTRICAL WIRING SCHEMATIC

GE NON DDC 1 STG 090/102/120
208/230/380/460V, 3PH, 60HZ

GE NON DDC 1 STG 072/090/102
380-415V, 3PH, 50HZ

APPROVED:	CHECKED:	ORIGINAL RELEASE NO.:
MODELED BY: TEW	DATE: 10-17-17	R-1071S089
PART NO.: 90-106178-01		REV: 03

FIGURE 23

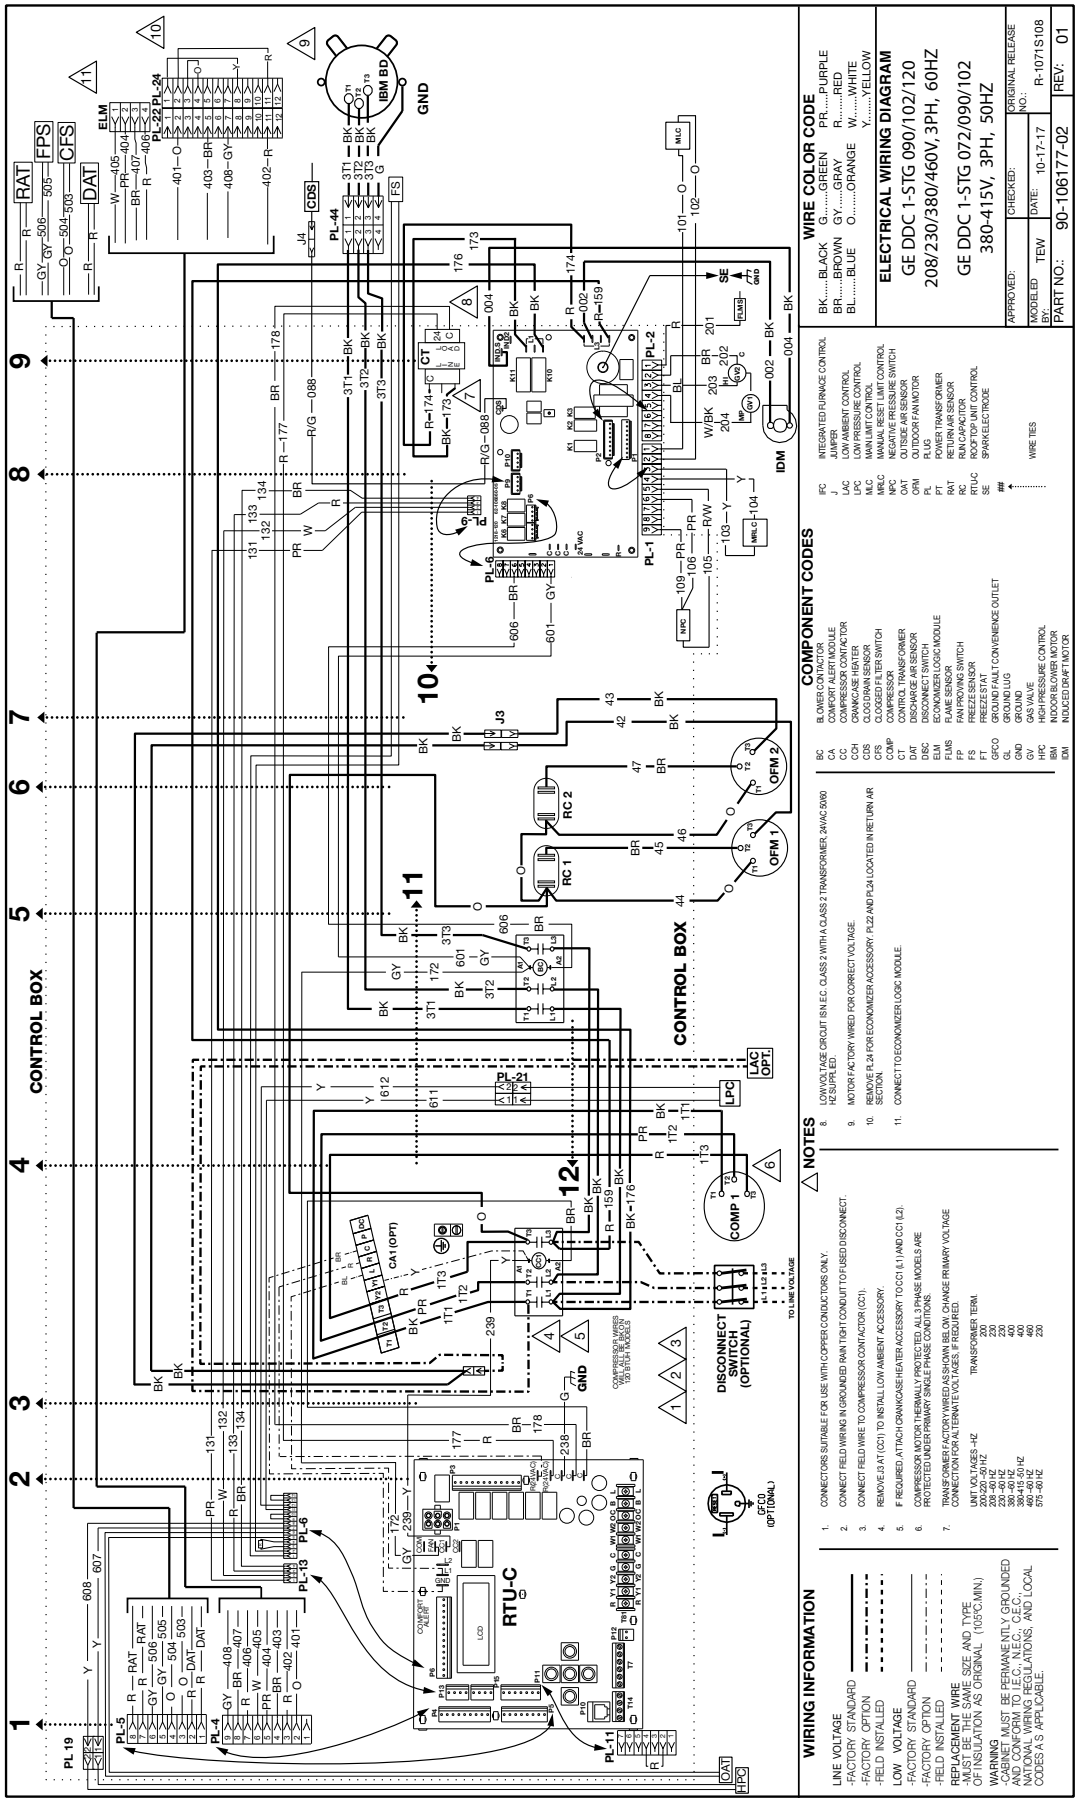

ELECTRICAL WIRING DIAGRAM
GE DDC 1-STG 090/102/120
208/230/380/460V, 3PH, 60HZ
GE DDC 1-STG 072/090/102
380-415V, 3PH, 50HZ
WIRE COLOR CODE
BK..... BLACK G..... GREEN PR..... PURPLE
BR..... BROWN GY..... GRAY R..... RED
BL..... BLUE O..... ORANGE W..... WHITE
Y..... YELLOW
APPROVED:
CHECKED:
ORIGINAL RELEASE NO.:
MODIFIED BY: TEW
DATE: 10-17-17
R-1071S108
PART NO.: 90-106177-02
REV: 01
WIRING INFORMATION
LINE VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
LOW VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
REPLACEMENT WIRE MUST BE SAME SIZE AND TYPE OF INSULATION AS ORIGINAL (105°C MIN.)
WARNING
-CABINET MUST BE PERMANENTLY GROUNDED AND CONFORM TO I.E.C., N.E.C., C.E.C., NATIONAL WIRING REGULATIONS, AND LOCAL CODES AS APPLICABLE.
NOTES
1. CONNECTORS SUITABLE FOR USE WITH COPPER CONDUCTORS ONLY.
2. CONNECT FIELD WIRING IN GROUNDED RAIN TIGHT CONDUIT TO FUSED DISCONNECT.
3. CONNECT FIELD WIRE TO COMPRESSOR CONTACTOR (CC1).
4. REMOVE JUMPER AT (CC1) TO INSTALL LOW AMBIENT ACCESSORY.
5. IF REQUIRED, ATTACH CRANKCASE HEATER ACCESSORY TO CC1 (L1) AND CC1 (L2).
6. COMPRESSOR MOTOR THERMALLY PROTECTED. ALL 3 PHASE MODELS ARE PROTECTED UNDER PRIMARY SINGLE PHASE CONDITIONS.
7. TRANSFORMER FACTORY WIRED AS SHOWN BELOW. CHANGE PRIMARY VOLTAGE CONNECTION FOR ALTERNATE VOLTAGES, IF REQUIRED.
UNIT VOLTAGES - HZ TRANSFORMER TERM.
208 - 60 - HZ 230
230 - 60 - HZ 230
230 - 60 - HZ 230
380 - 415 - 50 HZ 400
460 - 60 - HZ 460
575 - 60 - HZ 230
8. LOW VOLTAGE CIRCUIT IS N.E.C. CLASS 2 WITH A CLASS 2 TRANSFORMER, 24VAC 50/60 HZ SUPPLIED.
9. MOTOR FACTORY WIRED FOR CORRECT VOLTAGE.
10. REMOVE PL24 FOR ECONOMIZER ACCESSORY. PL22 AND PL24 LOCATED IN RETURN AIR SECTION.
11. CONNECT TO ECONOMIZER LOGIC MODULE.
COMPONENT CODES
BC BLOWER CONTACTOR
CA COMFORT ALERT MODULE
CC COMPRESSOR CONTACTOR
CH CRANKCASE HEATER
CLD CLOGGED DRAIN SENSOR
CFS CLOGGED FILTER SWITCH
COMP COMPRESSOR
CT CONTROL TRANSFORMER
DAT DISCHARGE AIR SENSOR
DISC DISCONNECT SWITCH
ELM ECONOMIZER LOGIC MODULE
FLMS FLAME SENSOR
FP FAN PROVING SWITCH
FS FREEZE SENSOR
FU1-FU3 FREEZE STAT
GFCO GROUND FAULT CONVENIENCE OUTLET
GL GROUND LUG
GND GROUND
GV GAS VALVE
HPC HIGH PRESSURE CONTROL
IBM INDOOR BLOWER MOTOR
IDM INDUCED DRAFT MOTOR
IFC INTEGRATED FURNACE CONTROL
J JUMPER
LAC LOW AMBIENT CONTROL
LPC LOW PRESSURE CONTROL
MAT/OAT MIXED AIR SENSOR
MRLC MANUAL RESET LIMIT CONTROL
NEGATIVE PRESSURE SWITCH
NPC
OAT OUTSIDE AIR SENSOR
OFM OUTDOOR FAN MOTOR
PL PLUG
PT POWER TRANSFORMER
RAT RETURN AIR SENSOR
RC RUN CAPACITOR
RTU-C ROOFTOP UNIT CONTROL
SE SPARK ELECTRODE
WIRE TIES
RTU-C
DISCONNECT SWITCH (OPTIONAL)
CONTROL BOX
COMP 1
OFM 1
OFM 2
RC 1
RC 2
CA1 (OPT)
IDM
IBM BD
GND
RAT
FPS
CFS
DAT
ELM
PL-22 PL-24
PL-19
PL-5
PL-4
PL-13
PL-6
PL-11
PL-44
PL-1
PL-2
PL-3
PL-12
LAC OPT.
OAT
FPC
FCO OPT (10mA)
TO LINE VOLTAGE
COMPRESSOR WIRES MUST ALL BE ROUTED WITHIN THIS AREA

FIGURE 24


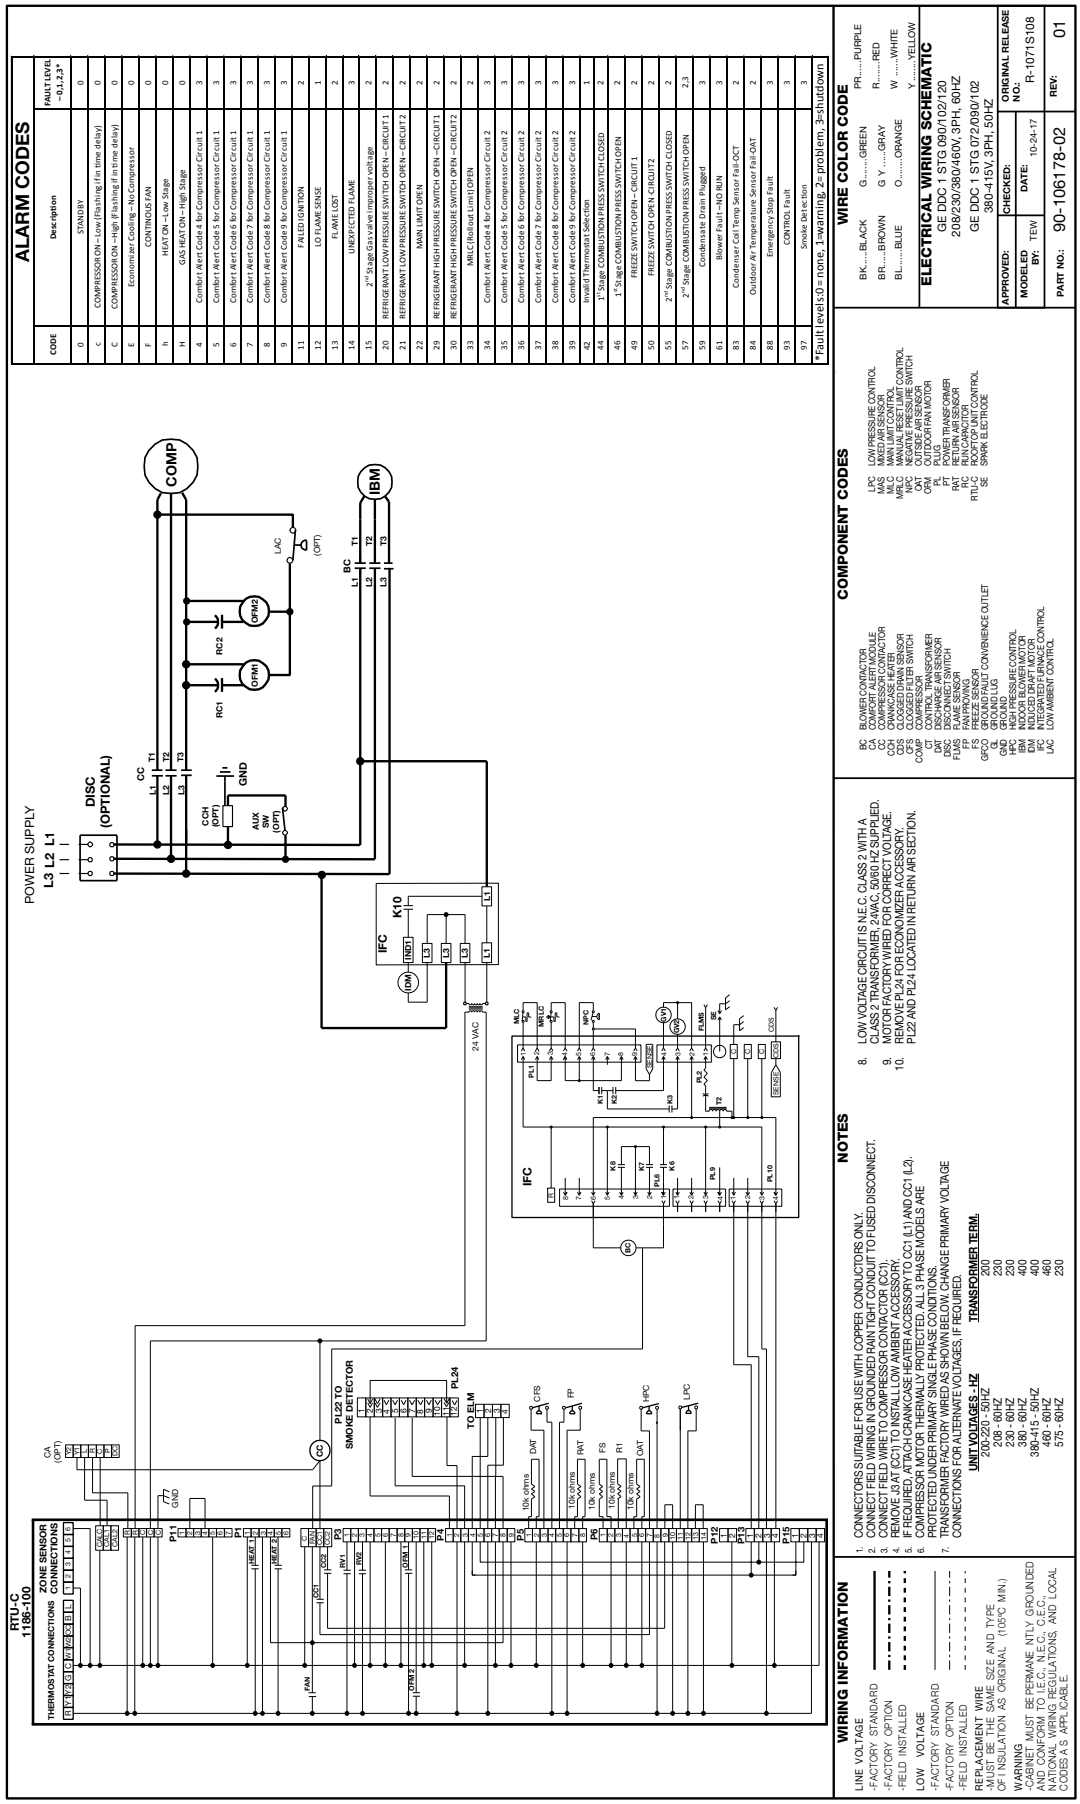

ALARM CODES
CODE
Description
FAULT LEVEL - 0,1,2,3*
0 STANDBY 0
c COMPRESSOR ON – Low (Flashing if in time delay) 0
C COMPRESSOR ON –High (Flashing if in time delay) 0
E Economizer Cooling – No Compressor 0
F CONTINOUS FAN 0
h HEAT ON – Low Stage 0
H GAS HEAT ON – High Stage 0
4 Comfort Alert Code 4 for Compressor Circuit 1 3
5 Comfort Alert Code 5 for Compressor Circuit 1 3
6 Comfort Alert Code 6 for Compressor Circuit 1 3
7 Comfort Alert Code 7 for Compressor Circuit 1 3
8 Comfort Alert Code 8 for Compressor Circuit 1 3
9 Comfort Alert Code 9 for Compressor Circuit 1 3
11 FAILED IGNITION 2
12 LO FLAME SENSE 1
13 FLAME LOST 2
14 UNEXPECTED FLAME 3
15 2nd Stage Gas valve improper voltage 2
20 REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 1 2
21 REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 2 2
22 MAIN LIMIT OPEN 2
29 REFRIGERANT HIGH PRESSURE SWITCH OPEN – CIRCUIT 1 2
30 REFRIGERANT HIGH PRESSURE SWITCH OPEN – CIRCUIT 2 2
33 MRLC (Rollout Limit) OPEN 2
34 Comfort Alert Code 4 for Compressor Circuit 2 3
35 Comfort Alert Code 5 for Compressor Circuit 2 3
36 Comfort Alert Code 6 for Compressor Circuit 2 3
37 Comfort Alert Code 7 for Compressor Circuit 2 3
38 Comfort Alert Code 8 for Compressor Circuit 2 3
39 Comfort Alert Code 9 for Compressor Circuit 2 3
42 Invalid Thermostat Selection 1
44 1st Stage COMBUSTION PRESS SWITCH CLOSED 2
46 1st stage COMBUSTION PRESS SWITCH OPEN 2
49 FREEZE SWITCH OPEN – CIRCUIT 1 2
50 FREEZE SWITCH OPEN CIRCUIT 2 2
55 2nd Stage COMBUSTION PRESS SWITCH CLOSED 2
57 2nd Stage COMBUSTION PRESS SWITCH OPEN 2,3
59 Condensate Drain Plugged 3
61 Blower Fault – NO RUN 3
83 Condenser Coil Temp Sensor Fail-OCT 2
84 Outdoor Air Temperature Sensor Fail OAT 2
88 Emergency Stop Fault 3
93 CONTROL Fault 3
97 Smoke Detection 3
*Fault Levels: 0 = none, 1=warning, 2= problem, 3=shutdown
RTU-C
1186-100
THERMOSTAT CONNECTIONS
ZONE SENSOR CONNECTIONS
POWER SUPPLY
L3 L2 L1
DISC (OPTIONAL)
CC
CCH (OPT)
AUX SW (OPT)
GND
RC1
RC2
OFM1
OFM2
LAC
(OPT)
COMP
(IBM)
BC
K10
IFC
24 VAC
TO ELM
PL22 TO SMOKE DETECTOR
PL24
CA (OPT)
FAN
OFM1
OFM2
HEAT 1
HEAT 2
COMPONENT CODES
BC BLOWER CONTACTOR
CA COMFORT ALERT MODULE
CC COMPRESSOR CONTACTOR
CCH CRANKCASE HEATER
CDS CLOGGED DRAIN SENSOR
CFS CLOGGED FILTER SWITCH
COMP COMPRESSOR
CT CONTROL TRANSFORMER
DAT DISCHARGE AIR SENSOR
DPS DIFFERENTIAL PRESS SWITCH
FLMS FLAME SENSOR
FP FAN PROVING
FS FREEZE SENSOR
GFCO GROUND FAULT CONVENIENCE OUTLET
GL GROUND LUG
HPC HIGH PRESSURE CONTROL
IBM INDOOR BLOWER MOTOR
IFC INTEGRATED FURNACE CONTROL
LAC LOW AMBIENT CONTROL
LPC LOW PRESSURE CONTROL
MAS MIXED AIR SENSOR
MAT MIXED AIR CONTROL
MRLC MANUAL RESET LIMIT CONTROL
NPC NEGATIVE PRESSURE SWITCH
OAT OUTDOOR AIR SENSOR
OFM OUTDOOR FAN MOTOR
PL PLUGS
PT POWER TRANSFORMER
RAT RETURN AIR SENSOR
RC RUN CAPACITOR
RTRC REVERSING CONTROL
SE SPARK ELECTRODE
WIRE COLOR CODE
BK.....BLACK G.....GREEN PR.....PURPLE
BR.....BROWN G Y ....GRAY R.....RED
BL.....BLUE O.....ORANGE W .....WHITE
Y.....YELLOW
ELECTRICAL WIRING SCHEMATIC
GE DDC 1 STG 090/102/120
208/230/380/460V, 3PH, 60HZ
GE DDC 1 STG 072/090/102
380-415V, 3PH, 50HZ
APPROVED:
CHECKED:
ORIGINAL RELEASE NO.
MODELED BY: TEW
DATE: 10-24-17
R-10715108
PART NO: 90-106178-02
REV: 01
WIRING INFORMATION
LINE VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
LOW VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
REPLACEMENT WIRE MUST BE THE SAME SIZE AND TYPE OF INSULATION AS ORIGINAL (105°C MIN.)
WARNING
CABINET MUST BE PERMANENTLY GROUNDED AND CONFORM TO I.E.C., N.E.C., C.E.C., NATIONAL WIRING REGULATIONS, AND LOCAL CODES AS APPLICABLE.
NOTES
1. CONNECTORS SUITABLE FOR USE WITH COPPER CONDUCTORS ONLY.
2. CONNECT FIELD WIRING IN GROUNDED RAIN TIGHT CONDUIT TO FUSED DISCONNECT.
3. CONNECT FIELD WIRE TO COMPRESSOR CONTACTOR (CC1).
4. REMOVE J3 AT (CC1) TO INSTALL LOW AMBIENT ACCESSORY.
5. IF REQUIRED, ATTACH CRANKCASE HEATER ACCESSORY TO CC1 (L1) AND CC1 (L2).
6. COMPRESSOR MOTOR THERMALLY PROTECTED. ALL 3 PHASE MODELS ARE PROTECTED UNDER PRIMARY SINGLE PHASING CONDITIONS.
7. TRANSFORMER FACTORY WIRED AS SHOWN BELOW. CHANGE PRIMARY VOLTAGE CONNECTIONS FOR ALTERNATE VOLTAGES, IF REQUIRED.
TRANSFORMER TERM.
UNIT VOLTAGES - HZ
200-220 - 50HZ 200
208 - 60HZ 230
230 - 60HZ 230
380 - 60HZ 400
380-415 - 50HZ 400
460 - 60HZ 460
575 - 60HZ 230
8. LOW VOLTAGE CIRCUIT IS N.E.C. CLASS 2 WITH A CLASS 2 TRANSFORMER. 24VAC, 50/60 HZ SUPPLIED.
9. MOTOR FACTORY WIRED FOR CORRECT VOLTAGE.
10. REMOVE PL24 FOR ECONOMIZER ACCESSORY.
PL22 AND PL24 LOCATED IN RETURN AIR SECTION.

FIGURE 25

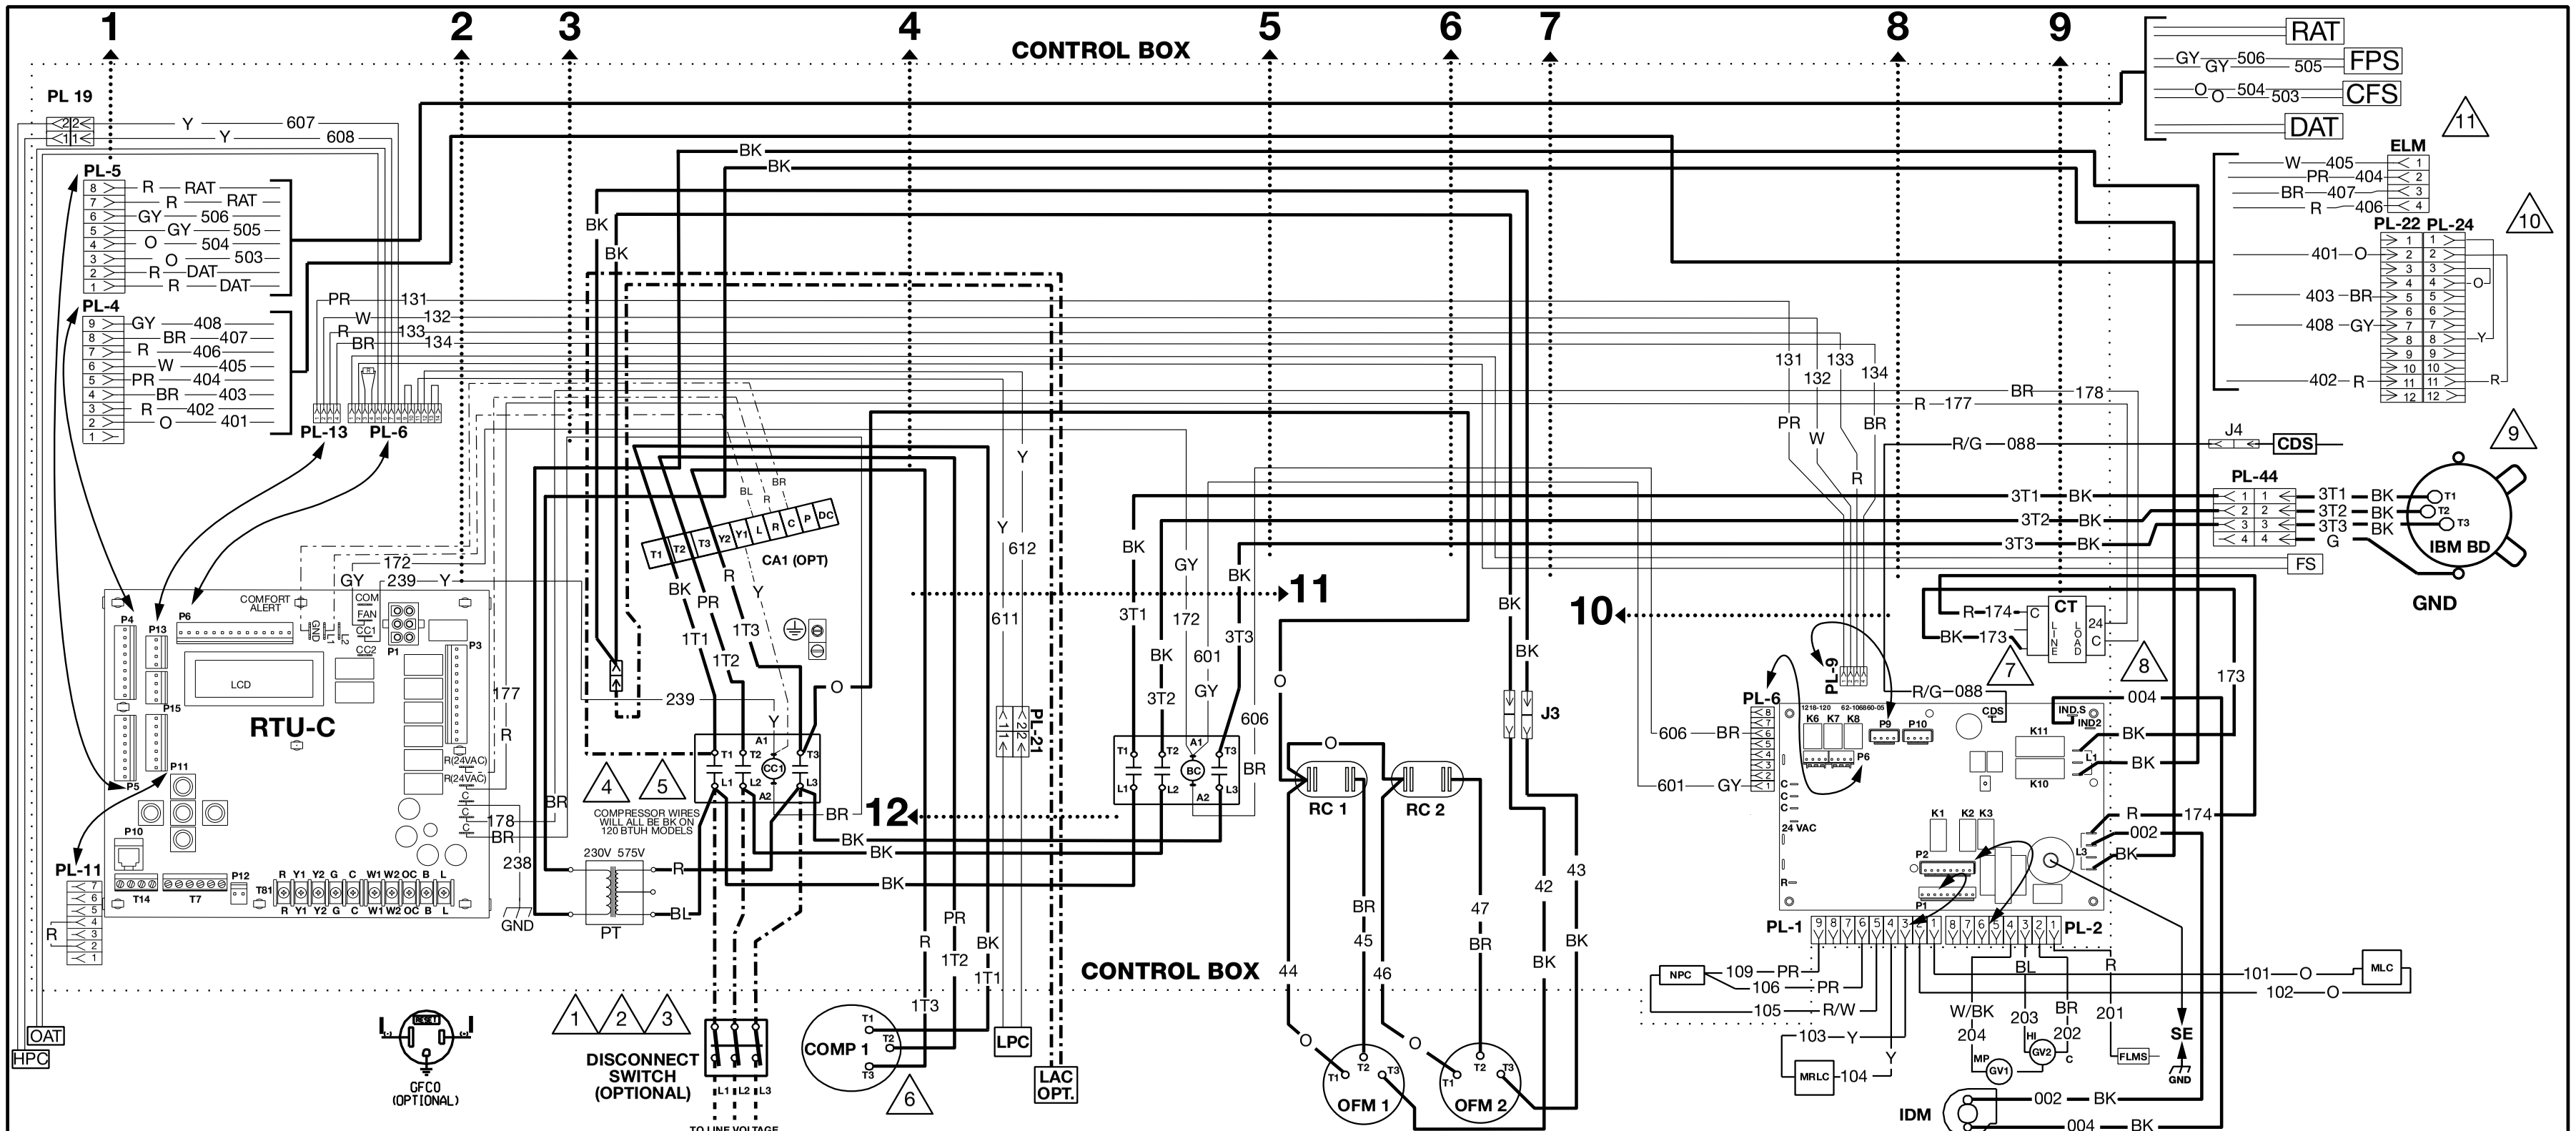

WIRING INFORMATION

LINE VOLTAGE
- -FACTORY STANDARD
- -FACTORY OPTION
- -FIELD INSTALLED

LOW VOLTAGE
- -FACTORY STANDARD
- -FACTORY OPTION
- -FIELD INSTALLED

REPLACEMENT WIRE
-MUST BE THE SAME SIZE AND TYPE OF INSULATION AS ORIGINAL (105ºC.MIN.)

WARNING
-CABINET MUST BE PERMANENTLY GROUNDED AND CONFORM TO I.E.C., N.E.C., C.E.C., NATIONAL WIRING REGULATIONS, AND LOCAL CODES AS APPLICABLE.

△ NOTES

1. CONNECTORS SUITABLE FOR USE WITH COPPER CONDUCTORS ONLY.
2. CONNECT FIELD WIRING IN GROUNDED RAIN TIGHT CONDUIT TO FUSED DISCONNECT.
3. CONNECT FIELD WIRE TO COMPRESSOR CONTACTOR (CC1).
4. REMOVE J3 AT (CC1) TO INSTALL LOW AMBIENT ACCESSORY.
5. IF REQUIRED, ATTACH CRANKCASE HEATER ACCESSORY TO CC1 (L1) AND CC1 (L2).
6. COMPRESSOR MOTOR THERMALLY PROTECTED. ALL 3 PHASE MODELS ARE PROTECTED UNDER PRIMARY SINGLE PHASE CONDITIONS.
7. TRANSFORMER FACTORY WIRED AS SHOWN BELOW. CHANGE PRIMARY VOLTAGE CONNECTION FOR ALTERNATE VOLTAGES, IF REQUIRED.

UNIT VOLTAGES –HZ	TRANSFORMER TERM.
200-220 –50 HZ	200
208 –60 HZ	230
230 –60 HZ	230
380 –60 HZ	400
380-415 -50 HZ	400
460 –60 HZ	460
575 –60 HZ	230

8. LOW VOLTAGE CIRCUIT IS N.E.C. CLASS 2 WITH A CLASS 2 TRANSFORMER, 24VAC 50/60 HZ SUPPLIED.
9. MOTOR FACTORY WIRED FOR CORRECT VOLTAGE.
10. REMOVE PL24 FOR ECONOMIZER ACCESSORY. PL22 AND PL24 LOCATED IN RETURN AIR SECTION.
11. CONNECT TO ECONOMIZER LOGIC MODULE.

COMPONENT CODES

BC	BLOWER CONTACTOR
CA	COMFORT ALERT MODULE
CC	COMPRESSOR CONTACTOR
CCH	CRANKCASE HEATER
CDS	CLOG DRAIN SENSOR
CFS	CLOGGED FILTER SWITCH
COMP	COMPRESSOR
CT	CONTROL TRANSFORMER
DAT	DISCHARGE AIR SENSOR
DISC	DISCONNECT SWITCH
ELM	ECONOMIZER LOGIC MODULE
FLMS	FLAME SENSOR
FP	FAN PROVING SWITCH
FS	FREEZE SENSOR
FT	FREEZE STAT
GFCO	GROUND FAULT CONVENIENCE OUTLET
GL	GROUND LUG
GND	GROUND
GV	GAS VALVE
HPC	HIGH PRESSURE CONTROL
IBM	INDOOR BLOWER MOTOR
IDM	INDUCED DRAFT MOTOR
IFC	INTEGRATED FURNACE CONTROL
J	JUMPER
LAC	LOW AMBIENT CONTROL
LPC	LOW PRESSURE CONTROL
MLC	MAIN LIMIT CONTROL
MRLC	MANUAL RESET LIMIT CONTROL
NPC	NEGATIVE PRESSURE SWITCH
OAT	OUTSIDE AIR SENSOR
OFM	OUTDOOR FAN MOTOR
PL	PLUG
PT	POWER TRANSFORMER
RAT	RETURN AIR SENSOR
RC	RUN CAPACITOR
RTU-C	ROOFTOP UNIT CONTROL
SE	SPARK ELECTRODE
##	WIRE TIES

WIRE COLOR CODE

BK......BLACK	G........GREEN	PR......PURPLE
BR......BROWN	GY......GRAY	R........RED
BL.......BLUE	O........ORANGE	W.......WHITE
		Y........YELLOW

ELECTRICAL WIRING DIAGRAM

GE DDC 1-STG 090/102/120

575V, 3PH, 60HZ

APPROVED:	CHECKED:	ORIGINAL RELEASE NO.:
MODELED BY: TCJW	DATE: 10-24-17	R-1071S108
PART NO.: 90-106177-03		REV: 01

FIGURE 26

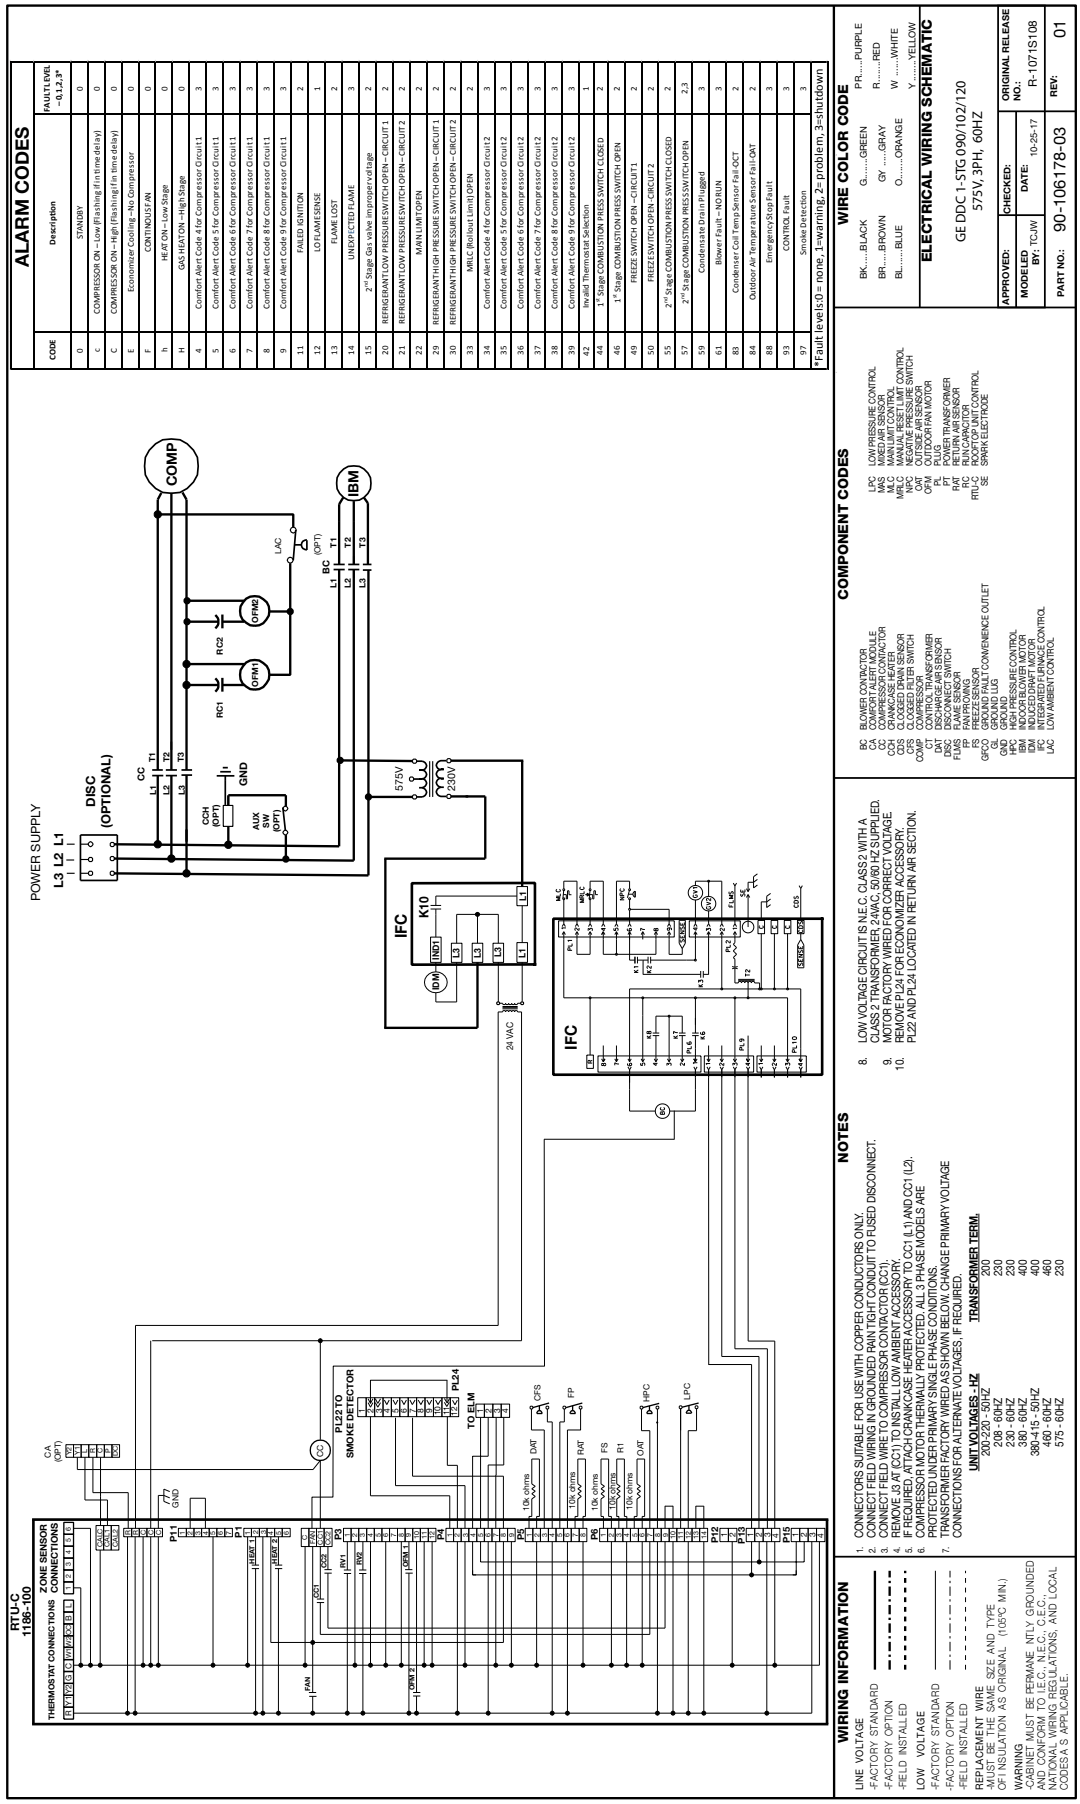

ALARM CODES
CODE
Description
FAULT LEVEL – 0,1,2,3*
0 STANDBY 0
c COMPRESSOR ON – Low (Flashing if in time delay) 0
C COMPRESSOR ON – High (Flashing if in time delay) 0
E Economizer Cooling – No Compressor 0
F CONTINUOUS FAN 0
h HEAT ON – Low Stage 0
H GAS HEATON – High Stage 0
4 Comfort Alert Code 4 for Compressor Circuit 1 3
5 Comfort Alert Code 5 for Compressor Circuit 1 3
6 Comfort Alert Code 6 for Compressor Circuit 1 3
7 Comfort Alert Code 7 for Compressor Circuit 1 3
8 Comfort Alert Code 8 for Compressor Circuit 1 3
9 Comfort Alert Code 9 for Compressor Circuit 1 3
11 FAILED IGNITION 2
12 LOT FLAME SENSE 1
13 FLAME LOST 2
14 UNEXPECTED FLAME 3
15 2nd Stage Gas valve improper voltage 2
20 REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 1 2
21 REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 2 2
22 MAIN LIMIT OPEN 2
29 REFRIGERANT HIGH PRESSURE SWITCH OPEN – CIRCUIT 1 2
30 REFRIGERANT HIGH PRESSURE SWITCH OPEN – CIRCUIT 2 2
33 MRLC (Rollout Limit) OPEN 2
34 Comfort Alert Code 4 for Compressor Circuit 2 3
35 Comfort Alert Code 5 for Compressor Circuit 2 3
36 Comfort Alert Code 6 for Compressor Circuit 2 3
37 Comfort Alert Code 7 for Compressor Circuit 2 3
38 Comfort Alert Code 8 for Compressor Circuit 2 3
39 Comfort Alert Code 9 for Compressor Circuit 2 3
42 Invalid Thermostat Selection 1
44 1° Stage COMBUSTION PRESS SWITCH CLOSED 2
46 1° Stage COMBUSTION PRESS SWITCH OPEN 2
49 FREEZE SWITCH OPEN – CIRCUIT1 2
50 FREEZE SWITCH OPEN- CIRCUIT 2 2
55 2nd Stage COMBUSTION PRESS SWITCH CLOSED 2
57 2nd Stage COMBUSTION PRESS SWITCH OPEN 2,3
59 Condensate Drain Plugged 3
61 Blower Fault – NO RUN 3
83 Condenser Coil Temp Sensor Fail-OCT 2
84 Outdoor Air Temperature Sensor Fail-OAT 2
88 Emergency Stop Fault 3
93 CONTROL Fault 3
Smoke Detection 3
*Fault levels:0 = none, 1=warning, 2= problem, 3=shutdown
POWER SUPPLY
L3 L2 L1
DISC (OPTIONAL)
CC
CCH (OPT)
AUX SW (OPT)
GND
COMP
RC1
RC2
OFM1
OFM2
LAC
IBM
BC
575V
230V
IFC
K10
24 VAC
RTU-C 1186-100
THERMOSTAT CONNECTIONS
ZONE SENSOR CONNECTIONS
P11
P1
P3
P4
P5
P6
P12
P13
P15
HEAT 1
HEAT 2
FAN
OFM 1
OFM 2
CA (OPT)
P122 TO SMOKE DETECTOR
P124
TO ELM
10k ohms
DAT
CFS
FP
RAT
FS
R1
OAT
HPC
LPC
WIRING INFORMATION
LINE VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
LOW VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
REPLACEMENT WIRE
MUST BE THE SAME SIZE AND TYPE
OR INSULATION AS ORIGINAL (105°C MIN.)
WARNING
CABINET MUST BE PERMANENTLY GROUNDED
AND CONFORM TO I.E.C., N.E.C., C.E.C.,
NATIONAL WIRING REGULATIONS, AND LOCAL
CODES AS APPLICABLE.
NOTES
1. CONNECTORS SUITABLE FOR USE WITH COPPER CONDUCTORS ONLY.
2. CONNECT FIELD WIRING IN GROUNDED PAIN TIGHT CONDUIT TO FUSED DISCONNECT.
3. CONNECT FIELD WIRE TO COMPRESSOR CONTACTOR (CC1).
4. REMOVE J3 AT (CC1) TO INSTALL LOW AMBIENT ACCESSORY.
5. IF REQUIRED, ATTACH CRANKCASE HEATER ACCESSORY TO CC1 (L1) AND CC1 (L2).
6. COMPRESSOR MOTOR THERMALLY PROTECTED. ALL 3 PHASE MODELS ARE PROTECTED AGAINST PRIMARY SINGLE PHASE CONDITIONS.
7. TRANSFORMER FACTORY WIRED AS SHOWN BELOW. CHANGE PRIMARY VOLTAGE CONNECTIONS FOR ALTERNATE VOLTAGES, IF REQUIRED.
UNIT VOLTAGES - HZ | TRANSFORMER TERM.
200-230 - 50HZ | 200
208 - 60HZ | 230
230 - 60HZ | 230
380 - 60HZ | 400
380-415 - 50HZ | 400
460 - 60HZ | 460
575 - 60HZ | 230
8. LOW VOLTAGE CIRCUIT IS N.E.C. CLASS 2 WITH A CLASS 2 TRANSFORMER, 24VAC, 50/60 HZ SUPPLIED.
9. MOTOR FACTORY WIRED FOR CORRECT VOLTAGE
10. REMOVE PL24 FOR ECONOMIZER ACCESSORY. PL22 AND PL24 LOCATED IN RETURN AIR SECTION.
COMPONENT CODES
BC BLOWER CONTACTOR
CA COMFORT ALERT MODULE
CC COMPRESSOR CONTACTOR
CCH CRANKCASE HEATER
CDS CLOGGED DRAIN SENSOR
CFS CLOGGED FILTER SWITCH
CC1 COMPRESSOR
CT CONTROL TRANSFORMER
DAT DISCHARGE AIR SENSOR
DISC DISCONNECT SWITCH
FLMS FLAME SENSOR
FP FAN PROVING
FS FILTER STATUS SENSOR
GFCO GROUND FAULT CONVENIENCE OUTLET
GL GROUND LUG
GND GROUND
HPC HIGH PRESSURE CONTROL
IBM INDOOR BLOWER MOTOR
IFC INTEGRATED FURNACE CONTROL
LAC LOW AMBIENT CONTROL
LPC LOW PRESSURE CONTROL
MAS MIXED AIR SENSOR
MAT MIXED AIR TEMPERATURE
MRLC MANUAL RESET LIMIT CONTROL
NPC NEGATIVE PRESSURE SWITCH
OAT OUTDOOR AIR SENSOR
OFM OUTDOOR FAN MOTOR
PL PLUG
PT POWER TRANSFORMER
RAT RETURN AIR SENSOR
RC RUN CAPACITOR
RTU-C ROOFTOP UNIT CONTROL
SE SPARK ELECTRODE
WIRE COLOR CODE
BK.... BLACK G.....GREEN PR.....PURPLE
BR.... BROWN GY .....GRAY R.....RED
BL..... BLUE O.....ORANGE W .....WHITE
Y.....YELLOW
ELECTRICAL WIRING SCHEMATIC
GE DDC 1-STG 090/102/120
575V, 3PH, 60HZ
APPROVED:
CHECKED:
MODELED BY: TCJW
DATE: 10-25-17
ORIGINAL RELEASE NO.: R-1071S108
PART NO.: 90-106178-03
REV: 01

FIGURE 27

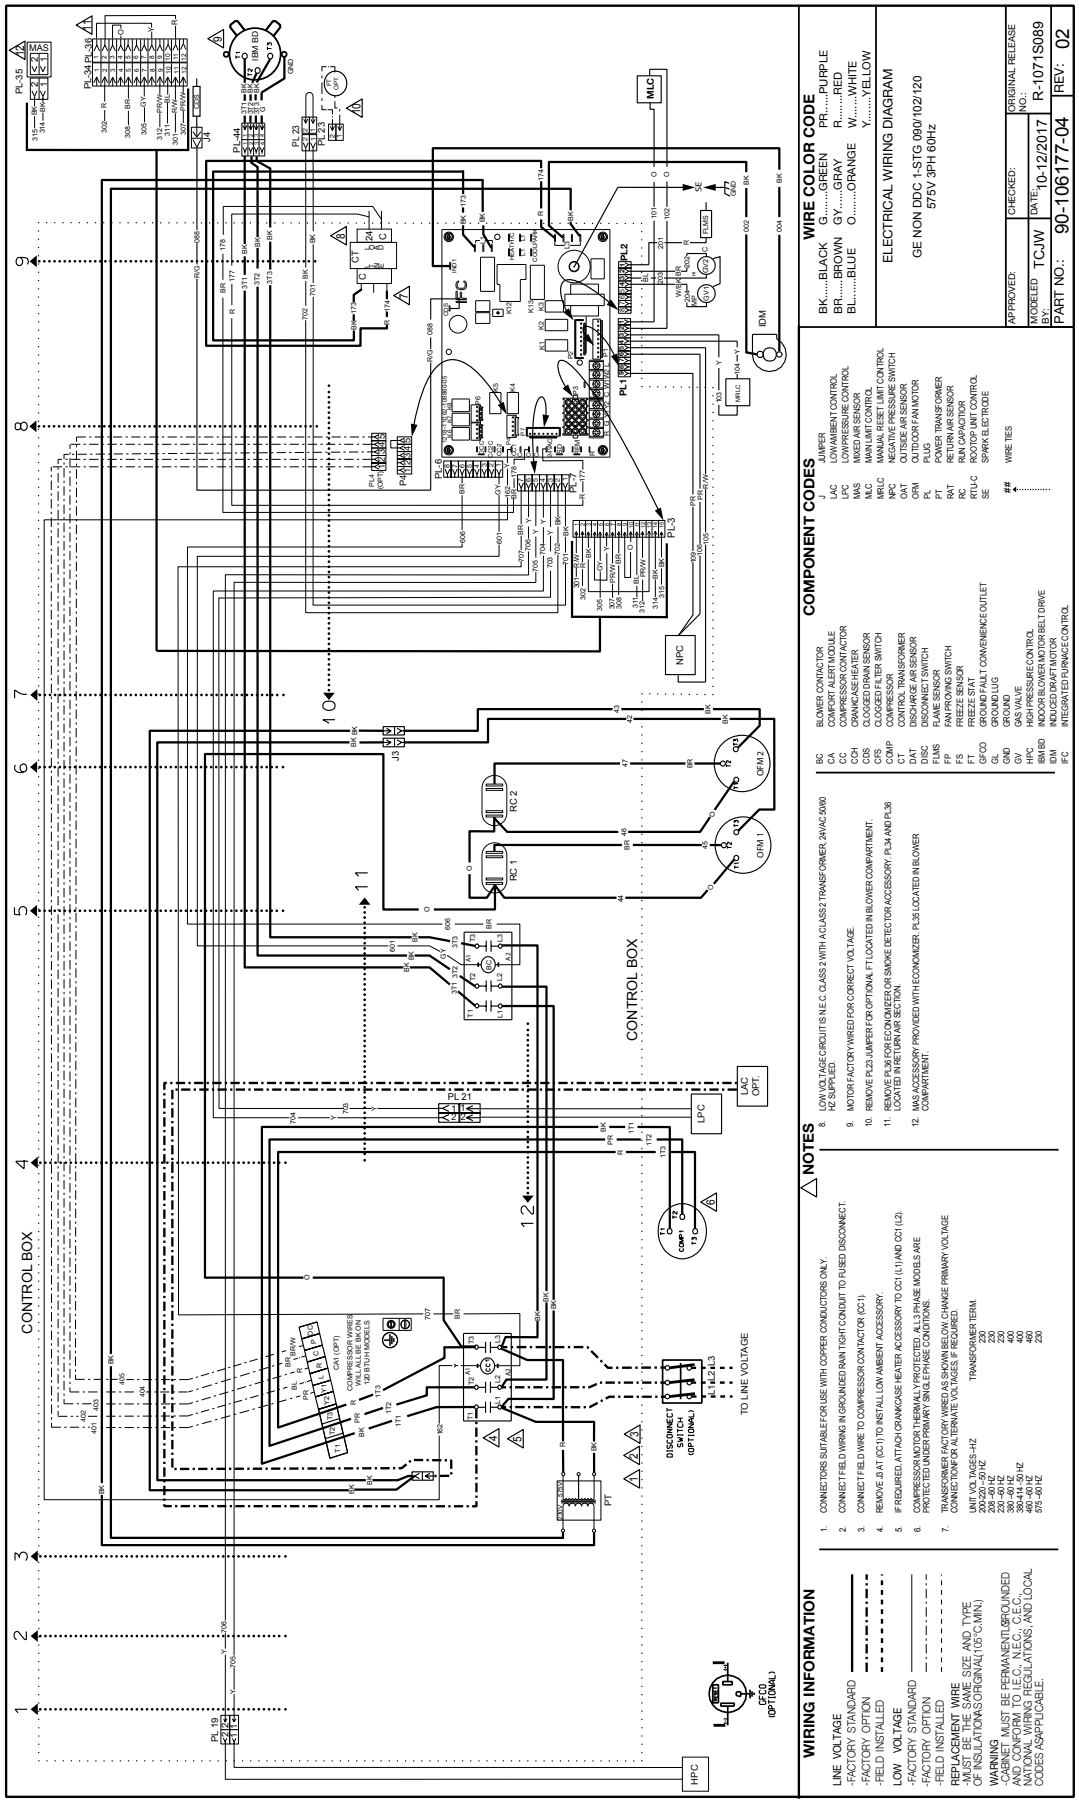

CONTROL BOX
WIRE COLOR CODE
BK.....BLACK G.....GREEN PR.....PURPLE
BR.....BROWN GY.....GRAY R.....RED
BL.....BLUE O.....ORANGE W.....WHITE
Y.....YELLOW
ELECTRICAL WIRING DIAGRAM
GE NON DDC 1-STG 090/102/120
575V 3PH 60Hz
COMPONENT CODES
WIRING INFORMATION
NOTES
APPROVED:
CHECKED:
ORIGINAL RELEASE NO:
MODELED BY: TCJW
DATE: 10-12/2017
R-1071S089
PART NO.: 90-106177-04
REV: 02

FIGURE 28

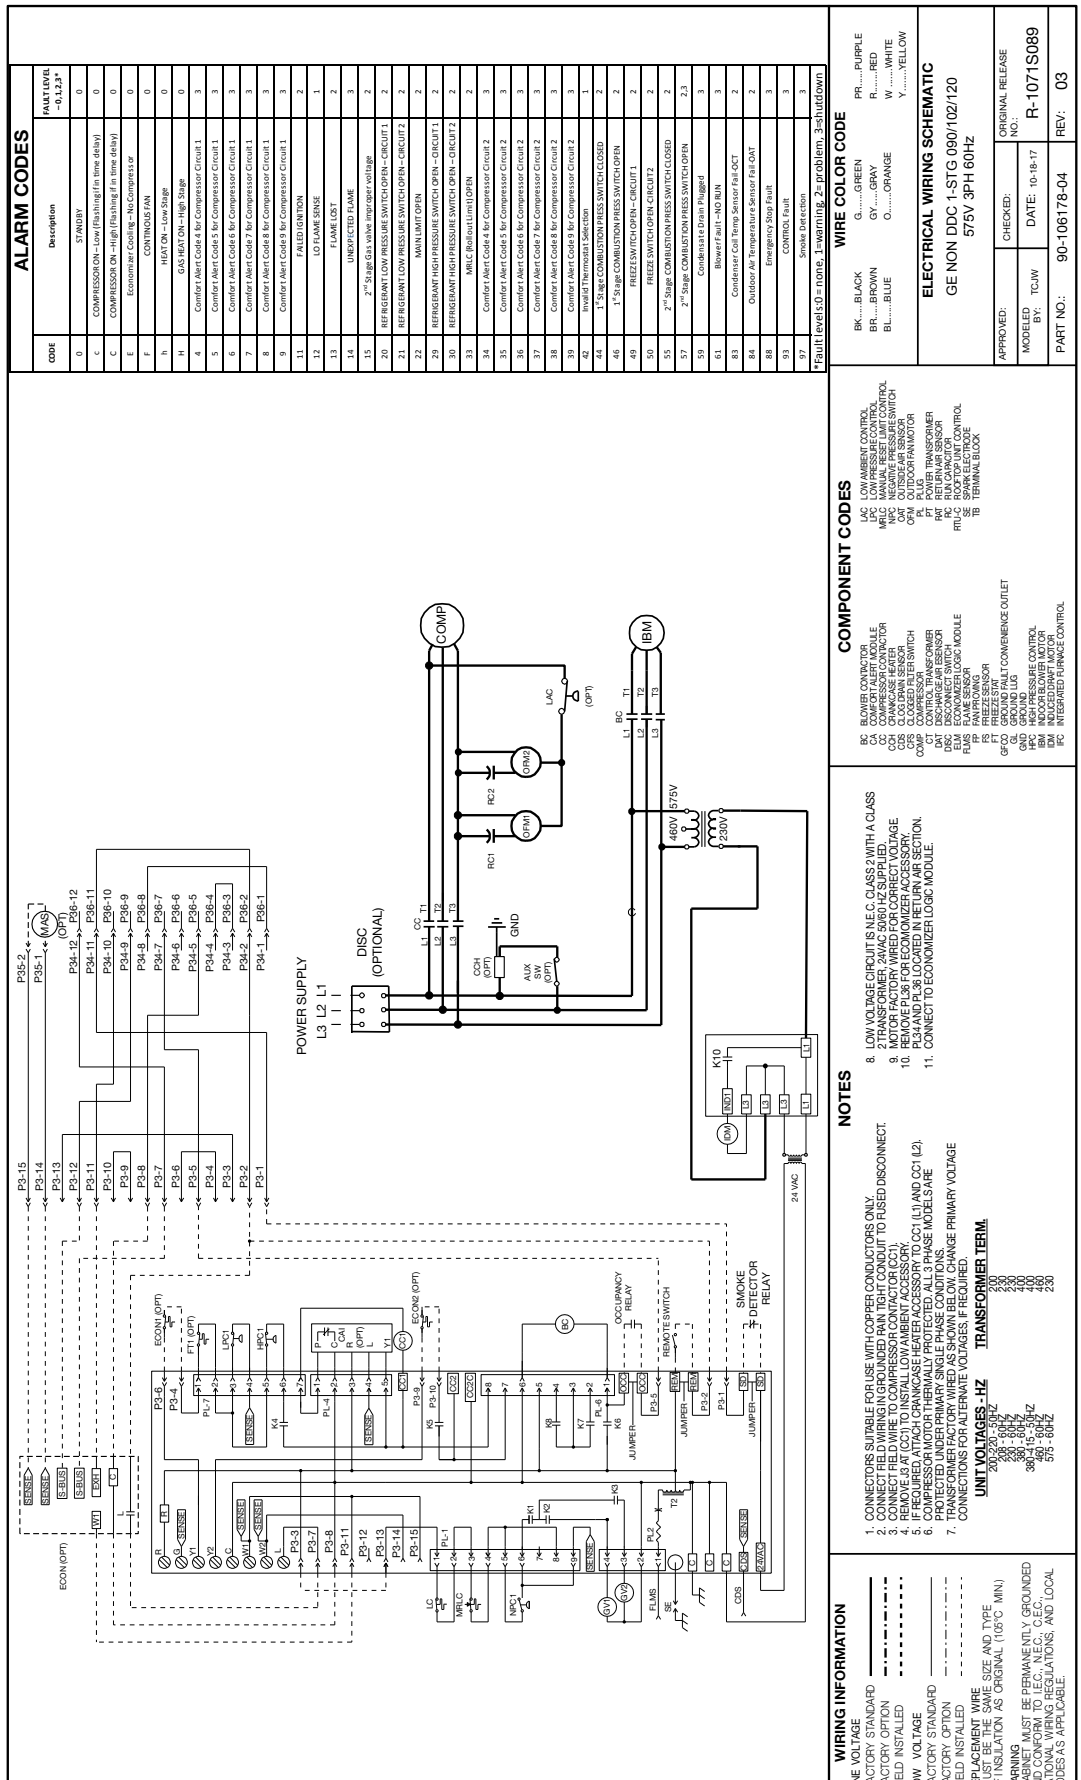

ALARM CODES
CODE
Description
FAULT LEVEL –0,1,2,3*
0 STANDBY 0
C COMPRESSOR ON – Low (Flashing if in time delay) 0
C COMPRESSOR ON – High (Flashing if in time delay) 0
E Economizer Cooling – No Compressor 0
F CONTINOUS FAN 0
h HEAT ON – Low Stage 0
H HEAT ON – High Stage 0
4 Comfort Alert Code 4 for Compressor Circuit 1 3
5 Comfort Alert Code 5 for Compressor Circuit 1 3
6 Comfort Alert Code 6 for Compressor Circuit 1 3
7 Comfort Alert Code 7 for Compressor Circuit 1 3
8 Comfort Alert Code 8 for Compressor Circuit 1 3
9 Comfort Alert Code 9 for Compressor Circuit 1 3
11 FAILED IGNITION 2
12 LO FLAME SENSE 1
13 FLAME LOST 2
14 UNEXPECTED FLAME 3
15 2nd Stage Gas valve improper voltage 2
20 REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 1 2
21 REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 2 2
22 MAIN LIMIT OPEN 2
29 REFRIGERANT HIGH PRESSURE SWITCH OPEN – CIRCUIT 1 2
30 REFRIGERANT HIGH PRESSURE SWITCH OPEN – CIRCUIT 2 2
33 MRLC (Rollout Limit) OPEN 2
34 Comfort Alert Code 4 for Compressor Circuit 2 3
35 Comfort Alert Code 5 for Compressor Circuit 2 3
36 Comfort Alert Code 6 for Compressor Circuit 2 3
37 Comfort Alert Code 7 for Compressor Circuit 2 3
38 Comfort Alert Code 8 for Compressor Circuit 2 3
39 Comfort Alert Code 9 for Compressor Circuit 2 3
42 Invalid Thermostat Selection 1
44 1st Stage COMBUSTION PRESS SWITCH CLOSED 2
46 1st Stage COMBUSTION PRESS SWITCH OPEN 2
49 FREEZE SWITCH OPEN – CIRCUIT 1 2
50 FREEZE SWITCH OPEN-CIRCUIT 2 2
55 2nd Stage COMBUSTION PRESS SWITCH CLOSED 2
57 2nd Stage COMBUSTION PRESS SWITCH OPEN 2,3
59 Condensate Drain Plugged 3
61 Blower Fault – NO RUN 3
83 Condenser Coil Temp Sensor Fail OCT 2
84 Outdoor Air Temperature Sensor Fail OAT 2
88 Emergency Stop Fault 3
93 CONTROL Fault 3
97 Smoke Detection 3
*Fault level: 0 = none, 1=warning, 2= problem, 3=shutdown
WIRE COLOR CODE
BK....BLACK G.....GREEN PR.....PURPLE
BR....BROWN GY.....GRAY R.....RED
BL.....BLUE O.....ORANGE W.....WHITE
Y.....YELLOW
ELECTRICAL WIRING SCHEMATIC
GE NON DDC 1-STG 090/102/120
575V 3PH 60Hz
APPROVED: CHECKED: ORIGINAL RELEASE NO.:
MODELED BY: TCJW DATE: 10-18-17 R-1071S089
PART NO.: 90-106178-04 REV: 03
COMPONENT CODES
BC BLOWER CONTACTOR
CA COMFORT ALERT MODULE
CC COMPRESSOR CONTACTOR
CCH CRANKCASE HEATER
CDS CLOG DRAIN SENSOR
CFS CLOGGED FILTER SWITCH
COMP COMPRESSOR
CT CONTROL TRANSFORMER
DAT DISCHARGE AIR SENSOR
DISC DISCONNECT SWITCH
ELM ECONOMIZER LOGIC MODULE
FLMS FLAME SENSOR
FM FAN MOTOR
FS FREEZE SENSOR
FT FREEZE STAT
GFCI GROUND FAULT CONVENIENCE OUTLET
GL GROUND LUG
GND GROUND
HPC HIGH PRESSURE CONTROL
IBM INDOOR BLOWER MOTOR
IDM INDUCED DRAFT MOTOR
IFC INTEGRATED FURNACE CONTROL
LAC LOW AMBIENT CONTROL
LPC LOW PRESSURE CONTROL
MRLC MANUAL RESET LIMIT CONTROL
MSC MODULE SERVICE SWITCH
OAT OUTSIDE AIR SENSOR
OFM OUTDOOR FAN MOTOR
PL PLUG
PT POWER TRANSFORMER
RAT RETURN AIR SENSOR
RC RUN CAPACITOR
RTU-C ROOFTOP UNIT CONTROL
SE SPARK ELECTRODE
TB TERMINAL BLOCK
NOTES
1. CONNECTORS SUITABLE FOR USE WITH COPPER CONDUCTORS ONLY.
2. CONNECT FIELD WIRING IN GROUNDED RAIN TIGHT CONDUIT TO FUSED DISCONNECT.
3. REMOVE JUMPER TO CONTROL COMPRESSOR CONTACTOR (CC).
4. REMOVE JUMPER TO CONTROL CRANKCASE HEATER ACCESSORY.
5. IF REQUIRED, ATTACH CRANKCASE HEATER ACCESSORY TO CC1 (L1) AND CC1 (L2).
6. COMPRESSOR MOTOR THERMALLY PROTECTED. ALL 3 PHASE MODELS ARE PROTECTED UNDER PRIMARY SINGLE PHASE CONDITIONS.
7. TRANSFORMER FACTORY WIRED AS SHOWN BELOW. CHANGE PRIMARY VOLTAGE CONNECTIONS FOR ALTERNATE VOLTAGES, IF REQUIRED.
UNIT VOLTAGES - HZ TRANSFORMER TERM.
200/230 - 50HZ 200
208/230 - 60HZ 208/230
380/415 - 50HZ 380/415
460 - 60HZ 460
575 - 60HZ 575
8. LOW VOLTAGE CIRCUIT IS N.E.C. CLASS 2 WITH A CLASS 2 TRANSFORMER, 24VAC 50/60 HZ SUPPLIED.
9. MOTOR FACTORY WIRED FOR CORRECT VOLTAGE
10. REMOVE PL36 TO DISABLE OPTIONAL ACCESSORY. PL34 AND PL36 LOCATED IN RETURN AIR SECTION.
11. CONNECT TO ECONOMIZER LOGIC MODULE.
WIRING INFORMATION
LINE VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
LOW VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
REPLACEMENT WIRE
-MUST BE THE SAME SIZE AND TYPE OF INSULATION AS ORIGINAL (105°C MIN.)
WARNING
-CABINET MUST BE PERMANENTLY GROUNDED AND CONFORM TO I.E.C., N.E.C., C.E.C., NATIONAL WIRING REGULATIONS, AND LOCAL CODES AS APPLICABLE.
POWER SUPPLY
L3 L2 L1
DISC (OPTIONAL)
COMP
IBM
OFM
RC1
RC2
CCH (OPT)
AUX SW (OPT)
GND
LAC (OPT)
460V 575V
230V
24 VAC
ECON (OPT)
ECON1 (OPT)
ECON2 (OPT)
FT1 (OPT)
LPC1
HPC1
OCCUPANCY RELAY
REMOTE SWITCH
SMOKE DETECTOR RELAY
JUMPER
ELMS
MRLC
LC
CDS
K10
T1
T2
T3
L1
L2
L3

FIGURE 29

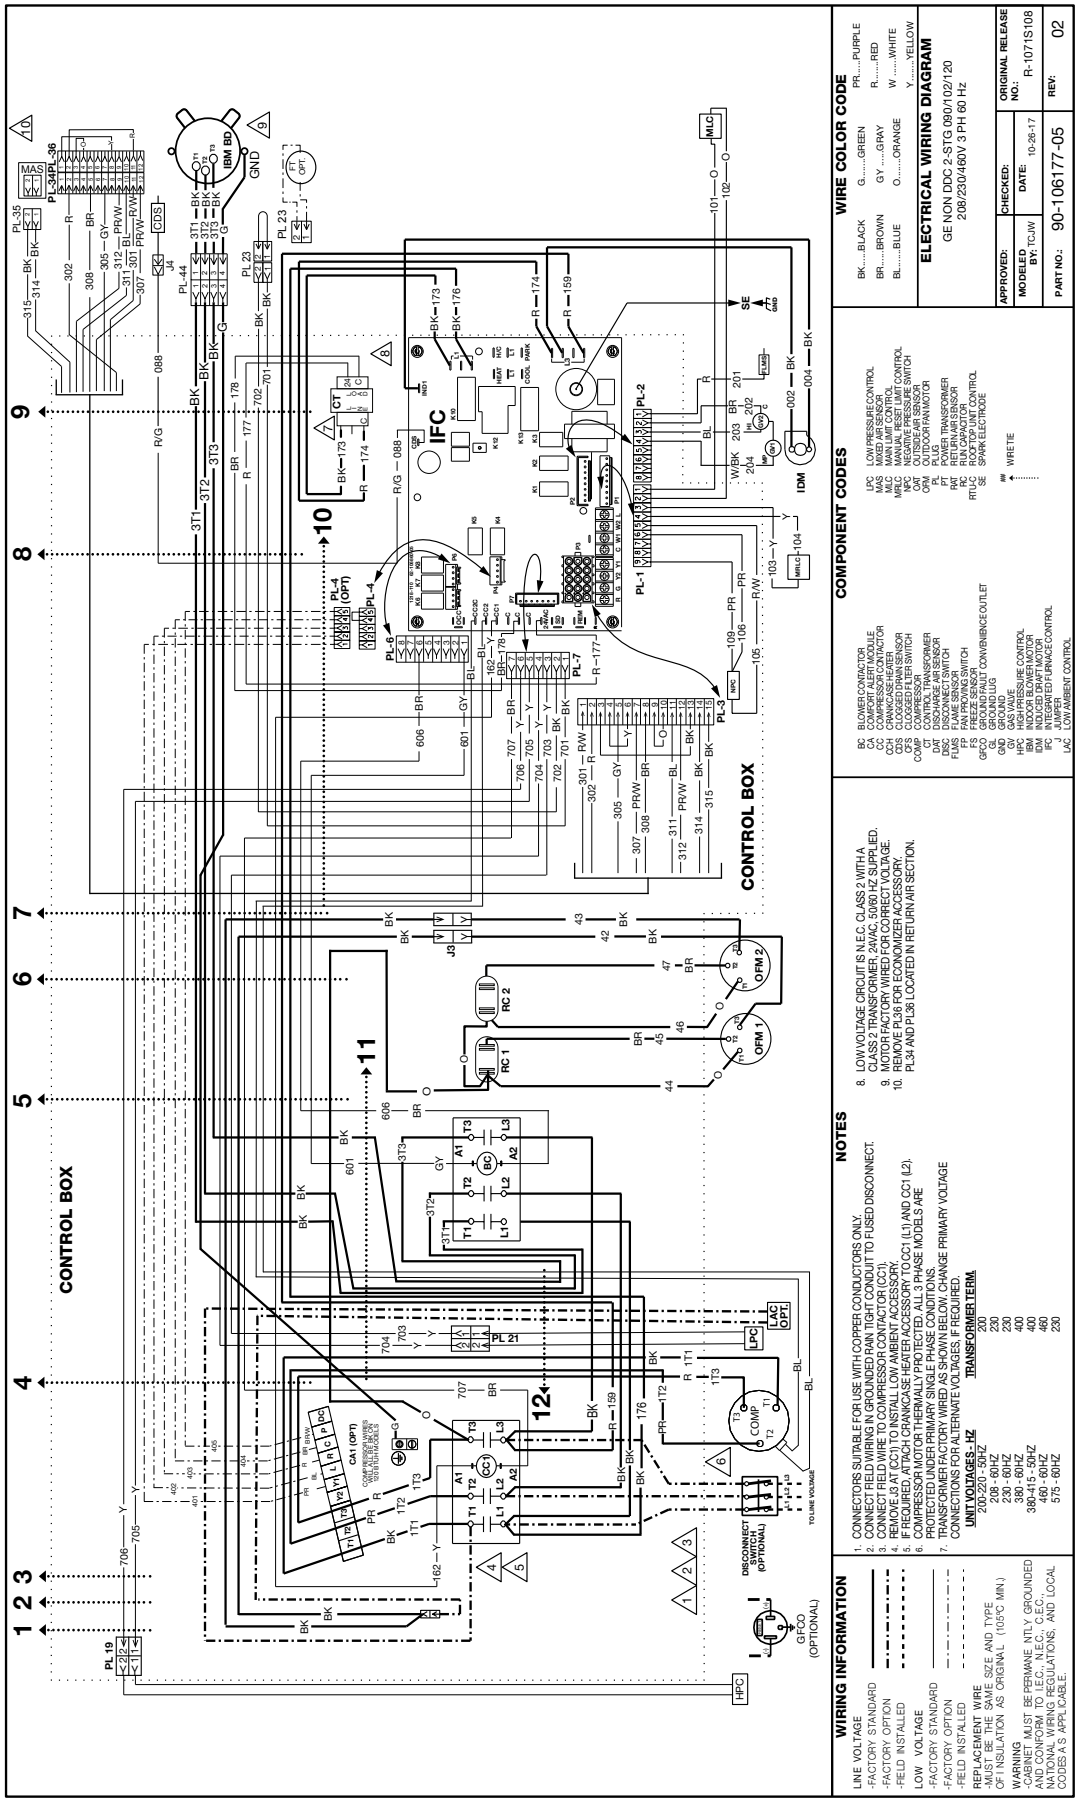

CONTROL BOX
IFC
IBM BD
GND
PL-34PL-36
PL 19
PL 23
PL 35
PL-44
PL-1
PL-2
PL-3
PL-4
PL-6
PL-7
PL 21
CONTROL BOX
RC 1
RC 2
OFM 1
OFM 2
CA1 (OPT)
COMPRESSOR WIRES
WITH INTERNAL BRAIDS
COMP
DISCONNECT SWITCH (OPTIONAL)
GFCO (OPTIONAL)
TO LINE VOLTAGE
HPC
LPC
LAC (OPT)
IDM
MLC
SE
GND
WIRING INFORMATION
LINE VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
LOW VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
REPLACEMENT WIRE
-MUST BE THE SAME SIZE AND TYPE
OR T1 INSULATION AS ORIGINAL (105°C MIN.)
WARNING
-CABINET MUST BE PERMANENTLY GROUNDED
AND CONFORM TO N.E.C. AND L.C.C.
NATIONAL WIRING REGULATIONS, AND LOCAL
CODES AS APPLICABLE.
NOTES
1. CONNECTORS SUITABLE FOR USE WITH COPPER CONDUCTORS ONLY.
2. CONNECT FIELD WIRING IN GROUNDED RAIN TIGHT CONDUIT TO FUSED DISCONNECT.
3. CONNECT FIELD WIRE TO COMPRESSOR CONTACTOR (CC1).
4. REMOVE J3 AT (CC1) TO INSTALL LOW AMBIENT ACCESSORY.
5. IF REQUIRED, ATTACH CRANKCASE HEATER ACCESSORY TO CC1 (L1) AND CC1 (L2).
6. COMPRESSOR MOTOR THERMALLY PROTECTED. ALL 3 PHASE MODELS ARE PROTECTED UNDER PRIMARY SINGLE PHASE CONDITIONS.
7. TRANSFORMER IS FACTORY WIRED FOR 230V. CHANGE PRIMARY VOLTAGE CONNECTIONS FOR ALTERNATE VOLTAGES, IF REQUIRED.
UNIT VOLTAGES - HZ / TRANSFORMER TERM.
200/221 - 50HZ 200
208 - 60HZ 230
230 - 60HZ 230
380 - 60HZ 400
380-415 - 50HZ 400
460 - 60HZ 460
575 - 60HZ 230
8. LOW VOLTAGE CIRCUIT IS N.E.C. CLASS 2 WITH A CLASS 2 TRANSFORMER SUPPLIED FROM 24VAC, 50/60 HZ SUPPLIED.
9. MOTOR FACTORY WIRED FOR CORRECT VOLTAGE.
10. REMOVE PL36 FOR ECONOMIZER ACCESSORY. PL34 AND PL36 LOCATED IN RETURN AIR SECTION.
COMPONENT CODES
BC BLOWER CONTACTOR
CAP CAPACITOR, RUN MODULE
CC COMPRESSOR CONTACTOR
CCH CRANKCASE HEATER
CDS CONDENSATE DRAIN SENSOR
CFS CLOGGED FILTER SWITCH
COMP COMPRESSOR
CT CONTROL TRANSFORMER
DAT DISCHARGE AIR SENSOR
DISC DISCONNECT SWITCH
FAN FAN CONTACTOR
FP FAN PROVING SWITCH
FS FREEZE SENSOR
GFCO GROUND FAULT CONVENIENCE OUTLET
GL GROUND LUG
GND GROUND
GV GAS VALVE
HPC HIGH PRESSURE CONTROL
IBM INDOOR BLOWER MOTOR
IDM INDOOR BLOWER MOTOR
IFC INTEGRATED FURNACE CONTROL
J JUMPER
LAC LOW AMBIENT CONTROL
LPC LOW PRESSURE CONTROL
MAS MIXED AIR SENSOR
MLC MAIN LIGHTS CONTACTOR
MLT MANUAL RESET LIMIT CONTROL
NPC NEGATIVE PRESSURE SWITCH
OAT OUTDOOR AIR SENSOR
OFM OUTDOOR FAN MOTOR
PL PLUG
POWER TRANSFORMER
RAT RETURN AIR SENSOR
RC RUN CAPACITOR
RTUC ROOFTOP UNIT CONTROL
SE SPARK ELECTRODE
WIRE TIE
WIRE COLOR CODE
BK....BLACK G.....GREEN PR.....PURPLE
BR....BROWN GY....GRAY R.....RED
BL.....BLUE O.....ORANGE W.....WHITE
Y.....YELLOW
ELECTRICAL WIRING DIAGRAM
GE NON DDC 2-STG 090/102/120
208/230/460V 3 PH 60 Hz
APPROVED: CHECKED: ORIGINAL RELEASE NO.: R-1071S108
MODELED BY: TCJW DATE: 10-26-17
PART NO.: 90-106177-05 REV: 02

FIGURE 30

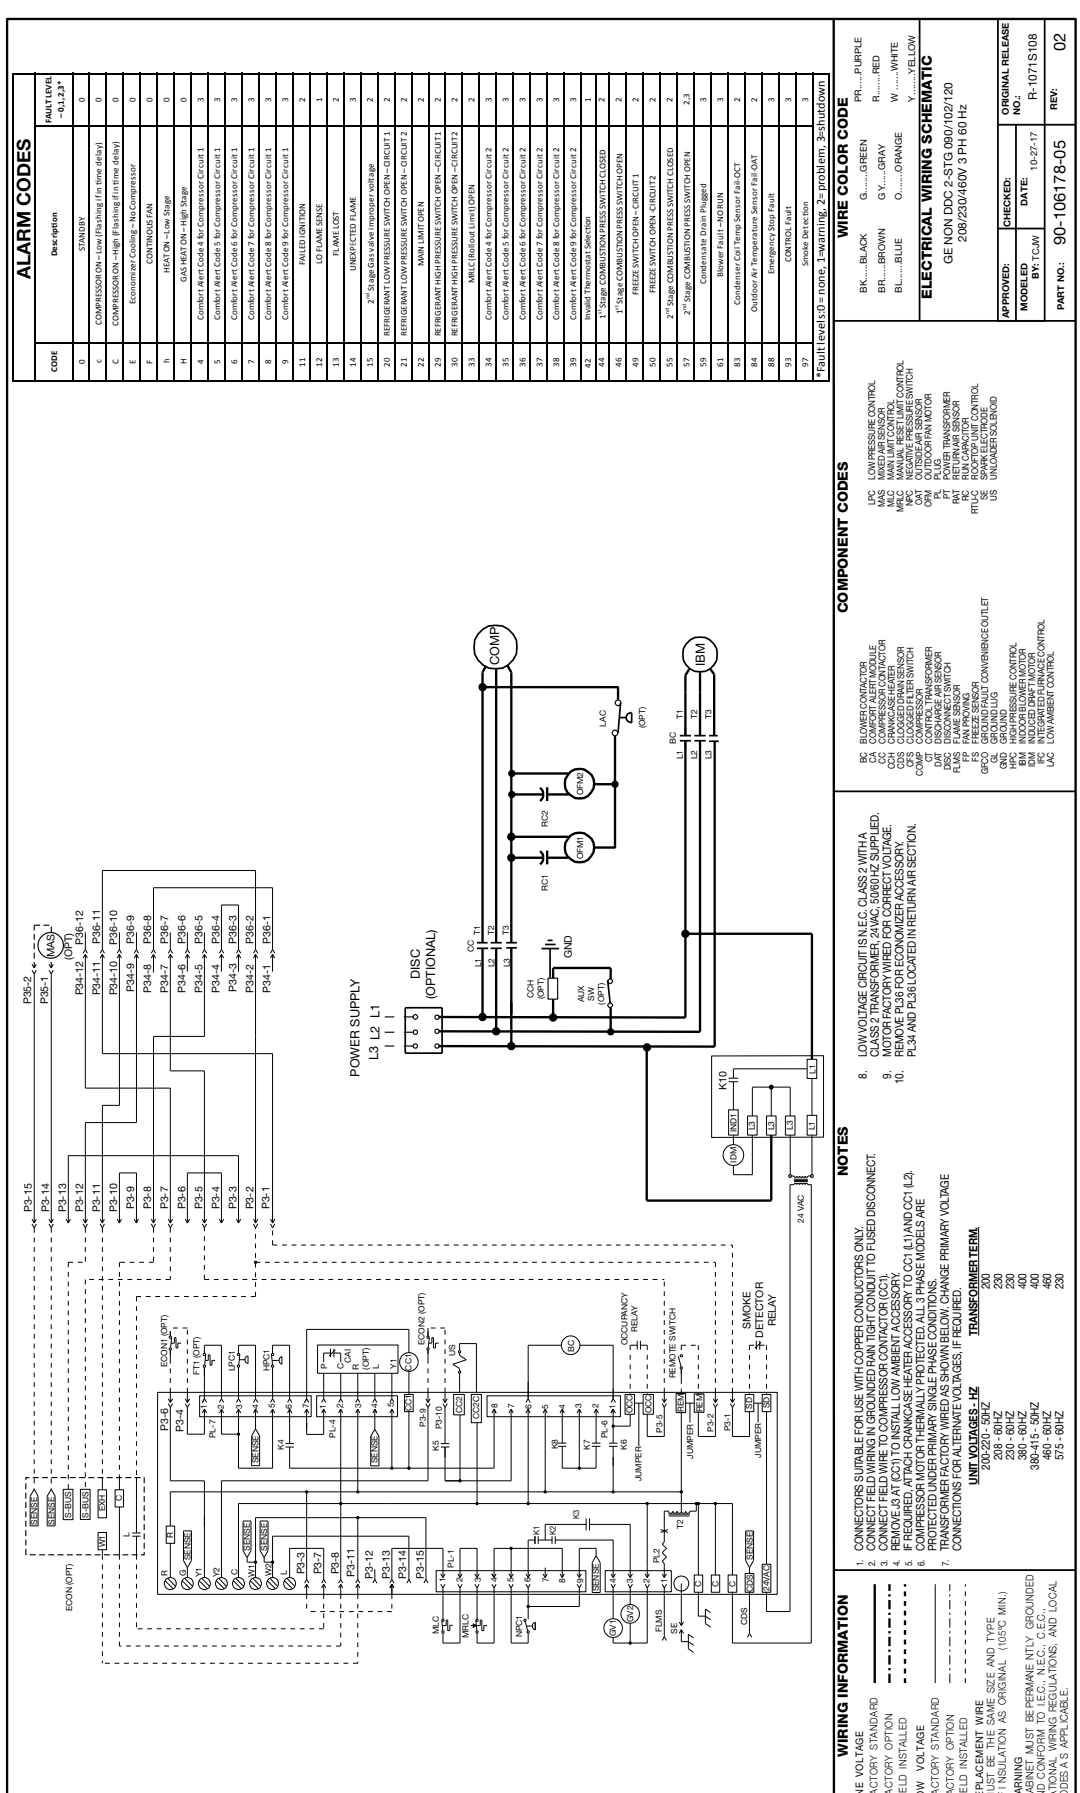

ALARM CODES
CODE
Description
FAULT LEVEL -0,1,2,3*
0 STANDBY 0
c COMPRESSOR – Low (Flashing if in time delay) 0
C COMPRESSOR –High (Flashing if in time delay) 0
E Economizer Cooling – No Compressor 0
F CONTINOUS FAN 0
h HEAT ON – Low Stage 0
H GAS HEAT ON – High Stage 0
4 Comfort Alert Code 4 for Compressor Circuit 1 3
5 Comfort Alert Code 5 for Compressor Circuit 1 3
6 Comfort Alert Code 6 for Compressor Circuit 1 3
7 Comfort Alert Code 7 for Compressor Circuit 1 3
8 Comfort Alert Code 8 for Compressor Circuit 1 3
9 Comfort Alert Code 9 for Compressor Circuit 1 3
11 FAILED IGNITION 2
12 LO FLAME SENSE 1
13 FLAME LOST 2
14 UNEXPECTED FLAME 3
15 2nd Stage Gas valve improper voltage 2
20 REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT1 2
21 REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT2 2
22 MAIN LIMIT OPEN 2
29 REFRIGERANT HIGH PRESSURE SWITCH OPEN – CIRCUIT1 2
30 REFRIGERANT HIGH PRESSURE SWITCH OPEN – CIRCUIT2 2
33 MRLC (Rollout Limit) OPEN 2
34 Comfort Alert Code 4 for Compressor Circuit 2 3
35 Comfort Alert Code 5 for Compressor Circuit 2 3
36 Comfort Alert Code 6 for Compressor Circuit 2 3
37 Comfort Alert Code 7 for Compressor Circuit 2 3
38 Comfort Alert Code 8 for Compressor Circuit 2 3
39 Comfort Alert Code 9 for Compressor Circuit 2 3
42 Invalid Thermostat Selection 1
44 1st Stage COMBUSTION PRESS SWITCH CLOSED 2
46 1st Stage COMBUSTION PRESS SWITCH OPEN 2
49 FREEZE SWITCH OPEN – CIRCUIT 1 2
50 FREEZE SWITCH OPEN – CIRCUIT 2 2
55 2nd Stage COMBUSTION PRESS SWITCH CLOSED 2
57 2nd Stage COMBUSTION PRESS SWITCH OPEN 2,3
59 Condensate Drain Plugged 3
61 Blower Fault – NO RUN 3
83 Condenser Coil Temp Sensor Fail-OCT 2
84 Outdoor Air Temperature Sensor Fail-OAT 2
88 Emergency Stop Fault 3
93 CONTROL Fault 3
97 Smoke Detection 3
*Fault level:0 – none, 1=warning, 2= problem, 3=shutdown
POWER SUPPLY
L3 L2 L1
DISC (OPTIONAL)
COMP
IBM
OFM1
OFM2
RC1
RC2
LAC
CCH (OPT)
AUX SW (OPT)
GND
K10
OM
24 VAC
SMOKE DETECTOR RELAY
OCCUPANCY RELAY
REMOTE SWITCH
JUMPER
ECON (OPT)
ECON2 (OPT)
FT1 (OPT)
MLC
MRLC
NPC1
FLMS
SE
COS
COMPONENT CODES
BC BLOWER CONTACTOR
CA COMFORT ALERT MODULE
CC COMPRESSOR CONTACTOR
CCH CRANKCASE HEATER
CDS CLOGGED DRAIN SENSOR
CFS CLOGGED FILTER SWITCH
COMP COMPRESSOR
CT CONTROL TRANSFORMER
DAT DISCHARGE AIR SENSOR
DPS DIFFERENTIAL PRESS SWITCH
FLMS FLAME SENSOR
FP FAN PROVING
FPS FAN PROVING SWITCH
GFCO GROUND FAULT CONVENIENCE OUTLET
GL GROUND LUG
GP GROUND PLATE
HPC HIGH PRESSURE CONTROL
IBM INDOOR BLOWER MOTOR
IFC INTEGRATED FURNACE CONTROL
LAC LOW AMBIENT CONTROL
LPC LOW PRESSURE CONTROL
MAS MIXED AIR SENSOR
MAT MAIN AUTO CONTROL
MRLC MANUAL RESET LIMIT CONTROL
NPC NEGATIVE PRESSURE SWITCH
OAT OUTDOOR AIR SENSOR
OFM OUTDOOR FAN MOTOR
PL PLUG
PT POWER TRANSFORMER
RAT RETURN AIR SENSOR
RC RUN CAPACITOR
RTLC ROOFTOP LOGIC CONTROL
SE SPARK ELECTRODE
US UNLOADER SOLENOID
WIRE COLOR CODE
BK....BLACK G.....GREEN PR....PURPLE
BR....BROWN G Y....GRAY R.....RED
BL.....BLUE O.....ORANGE W .....WHITE
Y.....YELLOW
ELECTRICAL WIRING SCHEMATIC
GE NON DDC 2-STG 090/102/120
208/230/460V 3 PH 60 Hz
APPROVED:
CHECKED:
ORIGINAL RELEASE NO.:
MODELED BY: TCJW
DATE: 10-27-17
R-1071S108
PART NO.: 90-106178-05
REV: 02
NOTES
1. CONNECTORS SUITABLE FOR USE WITH COPPER CONDUCTORS ONLY.
2. CONNECT FIELD WIRING IN GROUNDED RAIN TIGHT CONDUIT TO FUSED DISCONNECT.
3. CONNECT FIELD WIRE TO COMPRESSOR CONTACTOR (CC1).
4. REMOVE L3 AT (CC1) TO INSTALL LOW AMBIENT ACCESSORY.
5. IF REQUIRED, ATTACH CRANKCASE HEATER ACCESSORY TO CC1 (L1) AND CC1 (L2).
6. COMPRESSOR MOTOR THERMALLY PROTECTED. ALL 3 PHASE MODELS ARE PROTECTED UNDER PRIMARY SINGLE PHASE CONDITIONS.
7. TRANSFORMER FACTORY WIRED AS SHOWN BELOW. CHANGE PRIMARY VOLTAGE CONNECTIONS FOR ALTERNATE VOLTAGES, IF REQUIRED.
UNIT VOLTAGES - HZ / TRANSFORMER TERM.
200-220 - 50HZ 200
208 - 60HZ 230
230 - 60HZ 230
380 - 60HZ 400
380-415 - 50HZ 400
460 - 60HZ 460
575 - 60HZ 230
8. LOW VOLTAGE CIRCUIT IS N.E.C. CLASS 2 WITH A CLASS 2 TRANSFORMER, 24 VAC, 50/60 HZ, SUPPLIED.
9. MOTOR FACTORY WIRED FOR CORRECT VOLTAGE.
10. REMOVE PL36 FOR ECONOMIZER ACCESSORY. PL34 AND PL36 LOCATED IN RETURN AIR SECTION.
WIRING INFORMATION
LINE VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
LOW VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
REPLACEMENT WIRE MUST BE THE SAME SIZE AND TYPE OF INSULATION AS ORIGINAL (105°C MIN.)
WARNING
CABINET MUST BE PERMANENTLY GROUNDED AND CONFORM TO I.E.C., N.E.C., C.E.C., NATIONAL WIRING REGULATIONS, AND LOCAL CODES AS APPLICABLE.

FIGURE 31

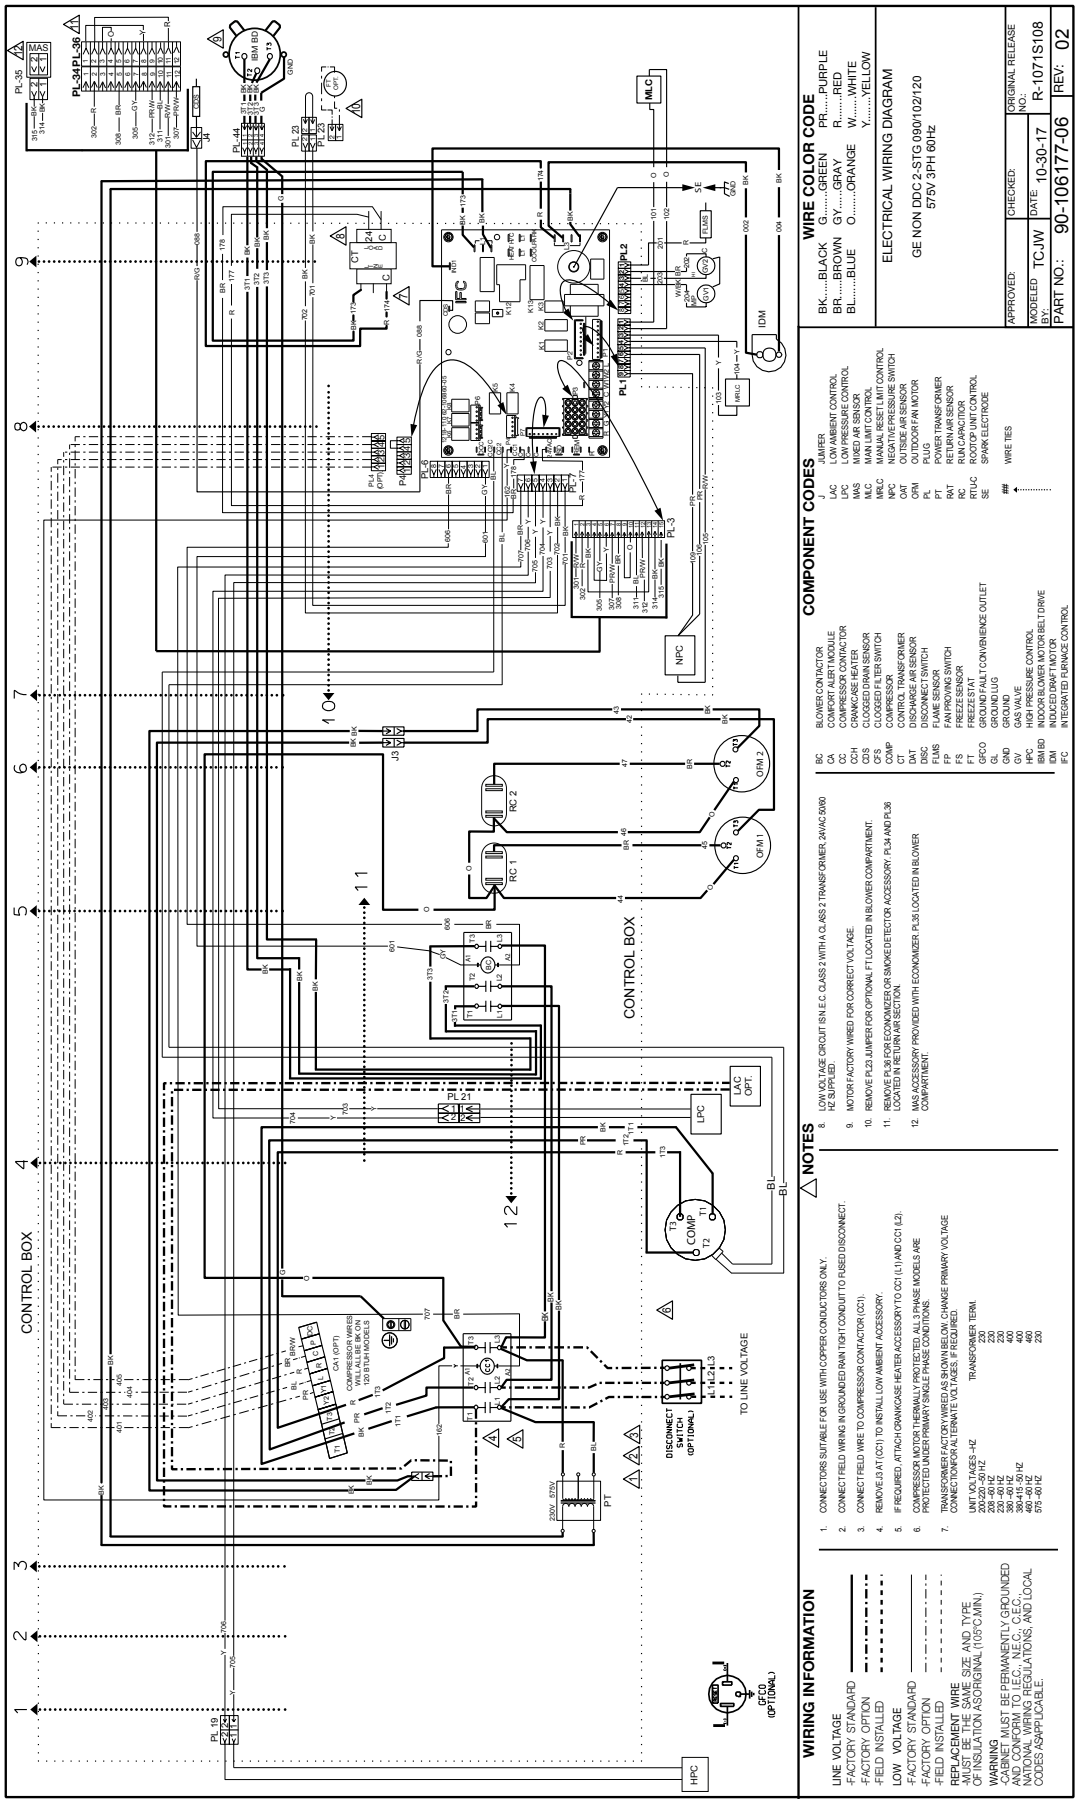

CONTROL BOX
CONTROL BOX
TO LINE VOLTAGE
DISCONNECT SWITCH (OPTIONAL)
WIRE COLOR CODE
BK.....BLACK G.....GREEN PR.....PURPLE
BR.....BROWN GY.....GRAY R.....RED
BL.....BLUE O.....ORANGE W.....WHITE
Y.....YELLOW
ELECTRICAL WIRING DIAGRAM
GE NON DDC 2-STG 090/102/120
575V 3PH 60Hz
APPROVED: CHECKED: ORIGINAL RELEASE NO:
MODELED BY: TCJW DATE: 10-30-17 R-1071S108
PART NO.: 90-106177-06 REV: 02
COMPONENT CODES
WIRING INFORMATION
NOTES

FIGURE 32

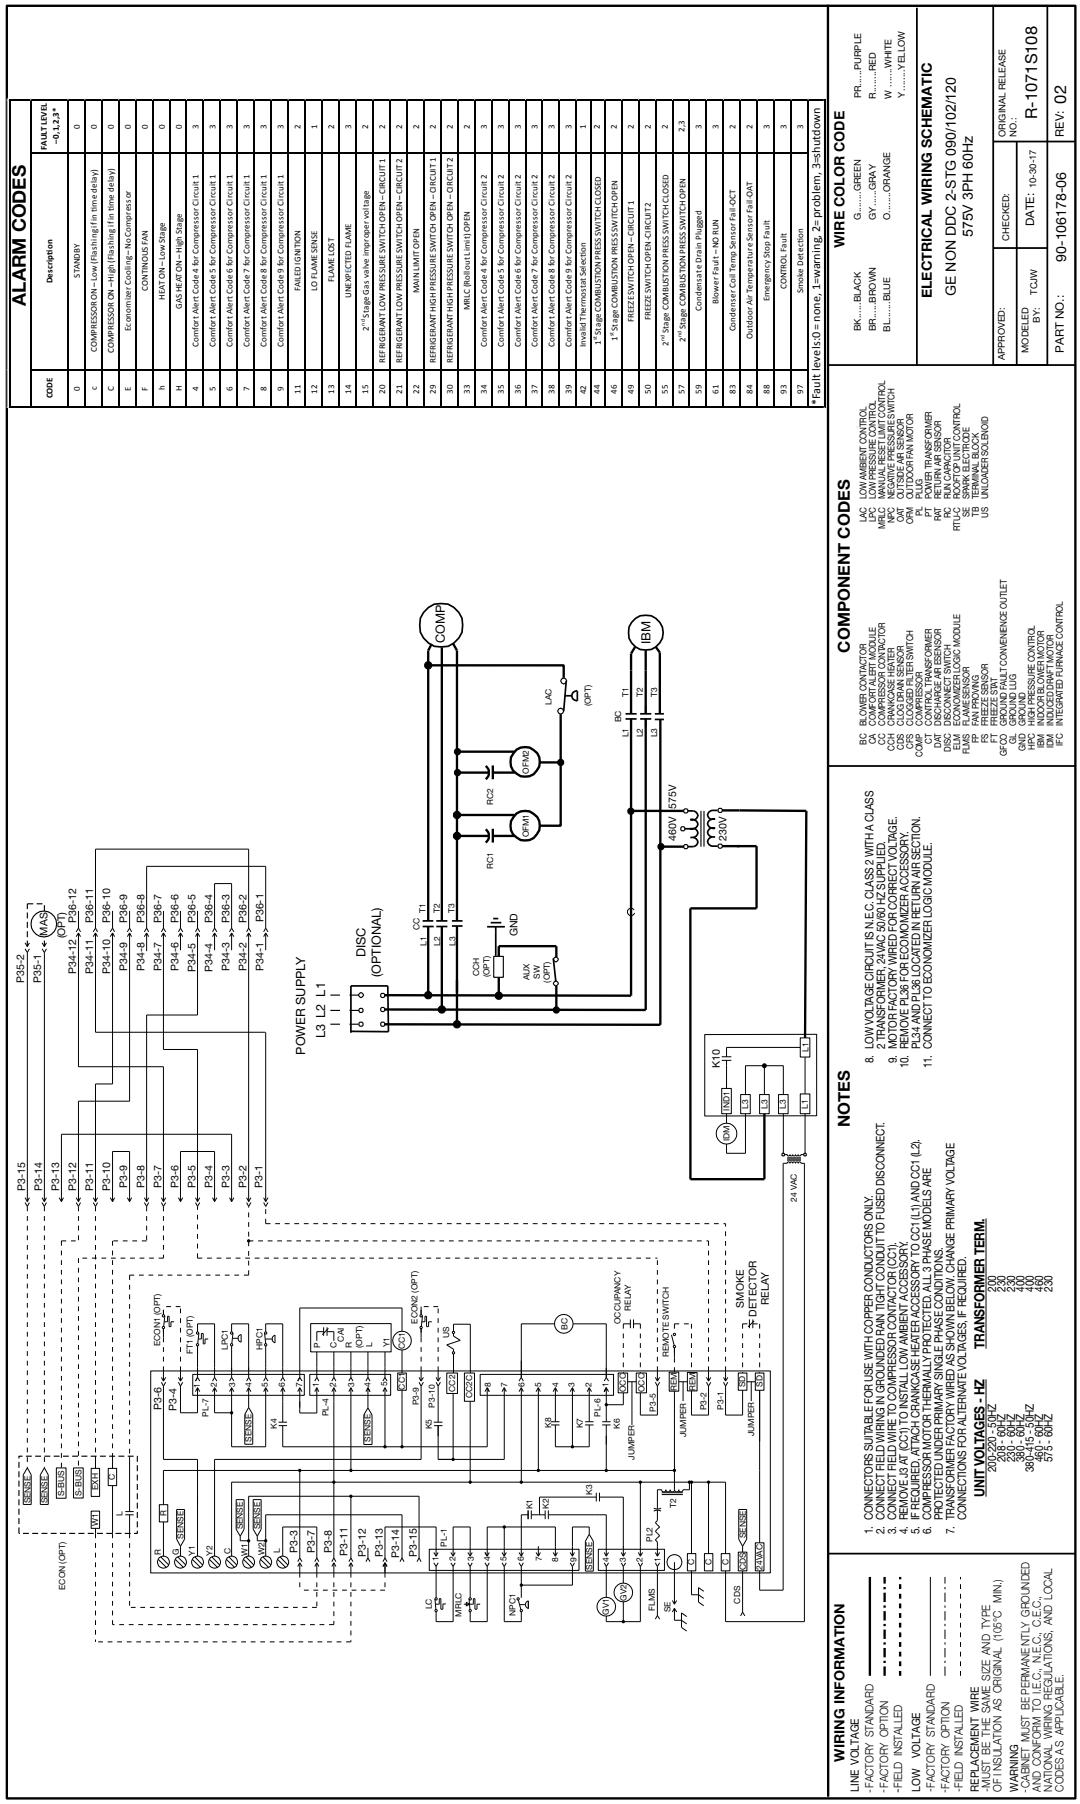

ALARM CODES
CODE
Description
FAULT LEVEL -0, 1,2,3*
0 STANDBY 0
C COMPRESSOR ON – Low (Flashing if in time delay) 0
C COMPRESSOR ON – High (Flashing if in time delay) 0
E Economizer Cooling – No Compress or 0
F CONTINOUS FAN 0
h HEAT ON – Low Stage 0
H HEAT ON – High Stage 0
4 Comfort Alert Code 4 for Compressor Circuit 1 3
5 Comfort Alert Code 5 for Compressor Circuit 1 3
6 Comfort Alert Code 6 for Compressor Circuit 1 3
7 Comfort Alert Code 7 for Compressor Circuit 1 3
8 Comfort Alert Code 8 for Compressor Circuit 1 3
9 Comfort Alert Code 9 for Compressor Circuit 1 3
11 FAILED IGNITION 2
12 LO FLAME SENSE 1
13 FLAME LOST 2
14 UNEXPECTED FLAME 3
15 2nd Stage Gas valve improper voltage 2
20 REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 1 2
21 REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 2 2
22 MAIN LIMIT OPEN 2
29 REFRIGERANT HIGH PRESSURE SWITCH OPEN – CIRCUIT 1 2
30 REFRIGERANT HIGH PRESSURE SWITCH OPEN – CIRCUIT 2 2
33 MRLC Rollout Limit OPEN 2
34 Comfort Alert Code 4 for Compressor Circuit 2 3
35 Comfort Alert Code 5 for Compressor Circuit 2 3
36 Comfort Alert Code 6 for Compressor Circuit 2 3
37 Comfort Alert Code 7 for Compressor Circuit 2 3
38 Comfort Alert Code 8 for Compressor Circuit 2 3
39 Comfort Alert Code 9 for Compressor Circuit 2 3
42 Invalid Thermostat Selection 1
44 1st Stage COMBUSTION PRESS SWITCH CLOSED 2
46 1st Stage COMBUSTION PRESS SWITCH OPEN 2
49 FREEZE SWITCH OPEN – CIRCUIT 1 2
50 FREEZE SWITCH OPEN -CIRCUIT 2 2
55 2nd Stage COMBUSTION PRESS SWITCH CLOSED 2
57 2nd Stage COMBUSTION PRESS SWITCH OPEN 2,3
59 Condensate Drain Plugged 3
61 Blower Fault – NO RUN 3
83 Condenser Coil Temp Sensor Fail-OCT 2
84 Outdoor Air Temperature Sensor Fail-OAT 2
88 Emergency Stop Fault 3
93 CONTROL Fault 3
97 Smoke Detection 3
*Fault levels: 0 = none, 1=warning, 2= problem, 3=shutdown
WIRE COLOR CODE
BK....BLACK G.....GREEN PR....PURPLE
BR....BROWN GY....GRAY R.....RED
BL.....BLUE O.....ORANGE W.....WHITE
Y.....YELLOW
ELECTRICAL WIRING SCHEMATIC
GE NON DDC 2-STG 090/102/120
575V 3PH 60Hz
APPROVED: CHECKED: ORIGINAL RELEASE NO.:
MODELED BY: TCJW DATE: 10-30-17 R-1071S108
PART NO.: 90-106178-06 REV: 02
COMPONENT CODES
BC BLOWER CONTACTOR
CA COMFORT ALERT MODULE
CC COMPRESSOR CONTACTOR
CCH CRANKCASE HEATER
CDS CLOG DRAIN SENSOR
CPS CLOGGED FILTER SWITCH
CRM CONDENSER FAN MOTOR
CT CONTROL TRANSFORMER
DAT DISCHARGE AIR SENSOR
EAC ELECTRONIC AIR CLEANER
ELM ECONOMIZER LOGIC MODULE
FLMS FLAME SENSOR
HPC HIGH PRESSURE
FS FREEZE SENSOR
FT FREEZE STAT
GFCI GROUND FAULT CONVENIENCE OUTLET
GL GROUND LUG
GND GROUND
HPC HIGH PRESSURE CONTROL
IBM INDOOR BLOWER MOTOR
IDM INDUCED DRAFT MOTOR
IFC INTEGRATED FURNACE CONTROL
LAC LOW AMBIENT CONTROL
LPC LOW PRESSURE CONTROL
MRLC MANUAL RESET LIMIT CONTROL
MRC MANUAL RESET RELAY SWITCH
OAT OUTSIDE AIR SENSOR
ORM OUTDOOR FAN MOTOR
PL PLUG
PT POWER TRANSFORMER
RAT RETURN AIR SENSOR
RC RUN CAPACITOR
RTUC ROOFTOP UNIT CONTROL
SE SPARK ELECTRODE
TB TERMINAL BLOCK
UA UNLOADER SOLENOID
NOTES
1. CONNECTORS SUITABLE FOR USE WITH COPPER CONDUCTORS ONLY.
2. CONNECT FIELD WIRING IN GROUNDED RAIN TIGHT CONDUIT TO FUSED DISCONNECT.
3. CONNECT FIELD WIRE TO COMPRESSOR CONTACTOR (CC).
4. REMOVE JUMPER WIRE TO INSTALL OPTIONAL ACCESSORY.
5. IF REQUIRED, ATTACH CRANKCASE HEATER ACCESSORY TO CC1 (L1) AND CC1 (L2).
6. COMPRESSOR MOTOR THERMALLY PROTECTED. ALL 3 PHASE MODELS ARE PROTECTED UNDER PRIMARY SINGLE PHASE CONDITIONS.
7. TRANSFORMER FACTORY WIRED AS SHOWN BELOW. CHANGE PRIMARY VOLTAGE CONNECTIONS FOR ALTERNATE VOLTAGES, IF REQUIRED.
UNIT VOLTAGES - HZ TRANSFORMER TERM.
200/220/230 - 50HZ 200
200/208/230 - 60HZ 208
230 - 60HZ 230
380/415 - 50HZ 400
460 - 60HZ 460
575 - 60HZ 575
8. LOW VOLTAGE CIRCUIT IS N.E.C. CLASS 2 WITH A CLASS 2 TRANSFORMER, 24 VAC 50/60 HZ SUPPLIED.
9. MOTOR FACTORY WIRED FOR CORRECT VOLTAGE.
10. REMOVE JUMPER WIRE TO INSTALL OPTIONAL ACCESSORY. PL3-4 AND PL3-6 LOCATED IN RETURN AIR SECTION.
11. CONNECT TO ECONOMIZER LOGIC MODULE.
WIRING INFORMATION
LINE VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
LOW VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
REPLACEMENT WIRE
-MUST BE THE SAME SIZE AND TYPE OF INSULATION AS ORIGINAL (105°C MIN.)
WARNING
-CABINET MUST BE PERMANENTLY GROUNDED AND CONFORM TO I.E.C., N.E.C., C.E.C., NATIONAL WIRING REGULATIONS, AND LOCAL CODES AS APPLICABLE.
POWER SUPPLY
L3 L2 L1
DISC (OPTIONAL)
COMP
IBM
CRM
OFAN
LAC
460V 575V
230V
24 VAC
ECON (OPT)
SMOKE DETECTOR RELAY
OCCUPANCY RELAY
REMOTE SWITCH
JUMPER
ECON1 (OPT)
ECON2 (OPT)
FT1 (OPT)
LPC1
HPC1
LC
MRLC
ELMS
SE
CDS
K1
K2
K3
K4
K5
K6
K7
K8
K10
PL1
PL2
PL3
PL4
PL5
PL6
T1
T2
BC
CC
CCH (OPT)
AUX SW (OPT)
GND
RC1
RC2
CC1
CC2
CC3
CC4
CC5
CC6
CC7
CC8
CC9
CC10
CC11
CC12
CC13
CC14
CC15
CC16
CC17
CC18
CC19
CC20
CC21
CC22
CC23
CC24
CC25
CC26
CC27
CC28
CC29
CC30
CC31
CC32
CC33
CC34
CC35
CC36
CC37
CC38
CC39
CC40
CC41
CC42
CC43
CC44
CC45
CC46
CC47
CC48
CC49
CC50
CC51
CC52
CC53
CC54
CC55
CC56
CC57
CC58
CC59
CC60
CC61
CC62
CC63
CC64
CC65
CC66
CC67
CC68
CC69
CC70
CC71
CC72
CC73
CC74
CC75
CC76
CC77
CC78
CC79
CC80
CC81
CC82
CC83
CC84
CC85
CC86
CC87
CC88
CC89
CC90
CC91
CC92
CC93
CC94
CC95
CC96
CC97
CC98
CC99
CC100
CC101
CC102
CC103
CC104
CC105
CC106
CC107
CC108
CC109
CC110
CC111
CC112
CC113
CC114
CC115
CC116
CC117
CC118
CC119
CC120
CC121
CC122
CC123
CC124
CC125
CC126
CC127
CC128
CC129
CC130
CC131
CC132
CC133
CC134
CC135
CC136
CC137
CC138
CC139
CC140
CC141
CC142
CC143
CC144
CC145
CC146
CC147
CC148
CC149
CC150
CC151
CC152
CC153
CC154
CC155
CC156
CC157
CC158
CC159
CC160
CC161
CC162
CC163
CC164
CC165
CC166
CC167
CC168
CC169
CC170
CC171
CC172
CC173
CC174
CC175
CC176
CC177
CC178
CC179
CC180
CC181
CC182
CC183
CC184
CC185
CC186
CC187
CC188
CC189
CC190
CC191
CC192
CC193
CC194
CC195
CC196
CC197
CC198
CC199
CC200
CC201
CC202
CC203
CC204
CC205
CC206
CC207
CC208
CC209
CC210
CC211
CC212
CC213
CC214
CC215
CC216
CC217
CC218
CC219
CC220
CC221
CC222
CC223
CC224
CC225
CC226
CC227
CC228
CC229
CC230
CC231
CC232
CC233
CC234
CC235
CC236
CC237
CC238
CC239
CC240
CC241
CC242
CC243
CC244
CC245
CC246
CC247
CC248
CC249
CC250
CC251
CC252
CC253
CC254
CC255
CC256
CC257
CC258
CC259
CC260
CC261
CC262
CC263
CC264
CC265
CC266
CC267
CC268
CC269
CC270
CC271
CC272
CC273
CC274
CC275
CC276
CC277
CC278
CC279
CC280
CC281
CC282
CC283
CC284
CC285
CC286
CC287
CC288
CC289
CC290
CC291
CC292
CC293
CC294
CC295
CC296
CC297
CC298
CC299
CC300
CC301
CC302
CC303
CC304
CC305
CC306
CC307
CC308
CC309
CC310
CC311
CC312
CC313
CC314
CC315
CC316
CC317
CC318
CC319
CC320
CC321
CC322
CC323
CC324
CC325
CC326
CC327
CC328
CC329
CC330
CC331
CC332
CC333
CC334
CC335
CC336
CC337
CC338
CC339
CC340
CC341
CC342
CC343
CC344
CC345
CC346
CC347
CC348
CC349
CC350
CC351
CC352
CC353
CC354
CC355
CC356
CC357
CC358
CC359
CC360
CC361
CC362
CC363
CC364
CC365
CC366
CC367
CC368
CC369
CC370
CC371
CC372
CC373
CC374
CC375
CC376
CC377
CC378
CC379
CC380
CC381
CC382
CC383
CC384
CC385
CC386
CC387
CC388
CC389
CC390
CC391
CC392
CC393
CC394
CC395
CC396
CC397
CC398
CC399
CC400
CC401
CC402
CC403
CC404
CC405
CC406
CC407
CC408
CC409
CC410
CC411
CC412
CC413
CC414
CC415
CC416
CC417
CC418
CC419
CC420
CC421
CC422
CC423
CC424
CC425
CC426
CC427
CC428
CC429
CC430
CC431
CC432
CC433
CC434
CC435
CC436
CC437
CC438
CC439
CC440
CC441
CC442
CC443
CC444
CC445
CC446
CC447
CC448
CC449
CC450
CC451
CC452
CC453
CC454
CC455
CC456
CC457
CC458
CC459
CC460
CC461
CC462
CC463
CC464
CC465
CC466
CC467
CC468
CC469
CC470
CC471
CC472
CC473
CC474
CC475
CC476
CC477
CC478
CC479
CC480
CC481
CC482
CC483
CC484
CC485
CC486
CC487
CC488
CC489
CC490
CC491
CC492
CC493
CC494
CC495
CC496
CC497
CC498
CC499
CC500
CC501
CC502
CC503
CC504
CC505
CC506
CC507
CC508
CC509
CC510
CC511
CC512
CC513
CC514
CC515
CC516
CC517
CC518
CC519
CC520
CC521
CC522
CC523
CC524
CC525
CC526
CC527
CC528
CC529
CC530
CC531
CC532
CC533
CC534
CC535
CC536
CC537
CC538
CC539
CC540
CC541
CC542
CC543
CC544
CC545
CC546
CC547
CC548
CC549
CC550
CC551
CC552
CC553
CC554
CC555
CC556
CC557
CC558
CC559
CC560
CC561
CC562
CC563
CC564
CC565
CC566
CC567
CC568
CC569
CC570
CC571
CC572
CC573
CC574
CC575
CC576
CC577
CC578
CC579
CC580
CC581
CC582
CC583
CC584
CC585
CC586
CC587
CC588
CC589
CC590
CC591
CC592
CC593
CC594
CC595
CC596
CC597
CC598
CC599
CC600
CC601
CC602
CC603
CC604
CC605
CC606
CC607
CC608
CC609
CC610
CC611
CC612
CC613
CC614
CC615
CC616
CC617
CC618
CC619
CC620
CC621
CC622
CC623
CC624
CC625
CC626
CC627
CC628
CC629
CC630
CC631
CC632
CC633
CC634
CC635
CC636
CC637
CC638
CC639
CC640
CC641
CC642
CC643
CC644
CC645
CC646
CC647
CC648
CC649
CC650
CC651
CC652
CC653
CC654
CC655
CC656
CC657
CC658
CC659
CC660
CC661
CC662
CC663
CC664
CC665
CC666
CC667
CC668
CC669
CC670
CC671
CC672
CC673
CC674
CC675
CC676
CC677
CC678
CC679
CC680
CC681
CC682
CC683
CC684
CC685
CC686
CC687
CC688
CC689
CC690
CC691
CC692
CC693
CC694
CC695
CC696
CC697
CC698
CC699
CC700
CC701
CC702
CC703
CC704
CC705
CC706
CC707
CC708
CC709
CC710
CC711
CC712
CC713
CC714
CC715
CC716
CC717
CC718
CC719
CC720
CC721
CC722
CC723
CC724
CC725
CC726
CC727
CC728
CC729
CC730
CC731
CC732
CC733
CC734
CC735
CC736
CC737
CC738
CC739
CC740
CC741
CC742
CC743
CC744
CC745
CC746
CC747
CC748
CC749
CC750
CC751
CC752
CC753
CC754
CC755
CC756
CC757
CC758
CC759
CC760
CC761
CC762
CC763
CC764
CC765
CC766
CC767
CC768
CC769
CC770
CC771
CC772
CC773
CC774
CC775
CC776
CC777
CC778
CC779
CC780
CC781
CC782
CC783
CC784
CC785
CC786
CC787
CC788
CC789
CC790
CC791
CC792
CC793
CC794
CC795
CC796
CC797
CC798
CC799
CC800
CC801
CC802
CC803
CC804
CC805
CC806
CC807
CC808
CC809
CC810
CC811
CC812
CC813
CC814
CC815
CC816
CC817
CC818
CC819
CC820
CC821
CC822
CC823
CC824
CC825
CC826
CC827
CC828
CC829
CC830
CC831
CC832
CC833
CC834
CC835
CC836
CC837
CC838
CC839
CC840
CC841
CC842
CC843
CC844
CC845
CC846
CC847
CC848
CC849
CC850
CC851
CC852
CC853
CC854
CC855
CC856
CC857
CC858
CC859
CC860
CC861
CC862
CC863
CC864
CC865
CC866
CC867
CC868
CC869
CC870
CC871
CC872
CC873
CC874
CC875
CC876
CC877
CC878
CC879
CC880
CC881
CC882
CC883
CC884
CC885
CC886
CC887
CC888
CC889
CC890
CC891
CC892
CC893
CC894
CC895
CC896
CC897
CC898
CC899
CC900
CC901
CC902
CC903
CC904
CC905
CC906
CC907
CC908
CC909
CC910
CC911
CC912
CC913
CC914
CC915
CC916
CC917
CC918
CC919
CC920
CC921
CC922
CC923
CC924
CC925
CC926
CC927
CC928
CC929
CC930
CC931
CC932
CC933
CC934
CC935
CC936
CC937
CC938
CC939
CC940
CC941
CC942
CC943
CC944
CC945
CC946
CC947
CC948
CC949
CC950
CC951
CC952
CC953
CC954
CC955
CC956
CC957
CC958
CC959
CC960
CC961
CC962
CC963
CC964
CC965
CC966
CC967
CC968
CC969
CC970
CC971
CC972
CC973
CC974
CC975
CC976
CC977
CC978
CC979
CC980
CC981
CC982
CC983
CC984
CC985
CC986
CC987
CC988
CC989
CC990
CC991
CC992
CC993
CC994
CC995
CC996
CC997
CC998
CC999
CC1000

FIGURE 33



CONTROL BOX
IFC
IDM
IBM BD
GND
VFD
OFM 1
OFM 2
RC 1
RC 2
COMP
CA1 (OPT)
DISCONNECT SWITCH (OPTIONAL)
GFCO (OPTIONAL)
HPC
LPC
LAC OPT
WIRING INFORMATION
LINE VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
LOW VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
REPLACEMENT WIRE
-MUST BE THE SAME SIZE AND TYPE OF I NSULATION AS ORIGINAL (105°C MIN.)
WARNING
-CABINET MUST BE PERMANE NTLY GROUNDED AND CONFORM TO N.E.C. AND LOCAL NATIONAL WIRING REGULATIONS, AND LOCAL CODES A S APPLICABLE
NOTES
1. CONNECTORS SUITABLE FOR USE WITH COPPER CONDUCTORS ONLY.
2. CONNECT FIELD WIRING IN GROUNDED RAN TIGHT CONDUIT TO FUSED DISCONNECT.
3. CONNECT FIELD WIRE TO COMPRESSOR CONTACTOR (CC1).
4. REMOVE J3 AT (CC1) TO INSTALL LOW AMBIENT ACCESSORY.
5. IF REQUIRED, ATTACH CRANKCASE HEATER ACCESSORY TO CC1 (L1) AND CC1 (L2).
6. COMPRESSOR MOTOR THERMALLY PROTECTED. ALL 3 PHASE MODELS ARE PROTECTED UNDER PRIMARY SINGLE PHASE CONDITIONS.
7. TRANSFORMER FACTORY WIRED AS SHOWN BELOW. CHANGE PRIMARY VOLTAGE CONNECTIONS FOR ALTERNATE VOLTAGES IF REQUIRED.
UNIT VOLTAGE - 50/60 HZ TRANSFORMER TERM.
200-220 - 50HZ 200
208 - 60HZ 230
230 - 60HZ 230
380 - 60HZ 400
380-415 - 50HZ 400
460 - 60HZ 460
575 - 60HZ 230
8. LOW VOLTAGE CIRCUIT IS N.E.C. CLASS 2 WITH A CLASS 2 TRANSFORMER, 24VAC, 50/60 HZ SUPPLIED.
9. MOTOR PROTECTION MUST BE PROVIDED IN FIELD.
10. REMOVE PL36 FOR ECONOMIZER ACCESSORY. PL34 AND PL36 LOCATED IN RETURN AIR SECTION.
COMPONENT CODES
BC BLOWER CONTACTOR
CB CIRCUIT BREAKER MODULE
CC COMPRESSOR CONTACTOR
CCH CRANKCASE HEATER
CDS CLOGGED DRAIN SENSOR
CFS CLOGGED FILTER SWITCH
COMP COMPRESSOR
CTX CONTROL TRANSFORMER
DAT DISCHARGE AIR SENSOR
DISC DISCONNECT SWITCH
FAS FAN ASSY SENSOR
FP FAN PROVING
FS FREEZE SENSOR
GFCO GROUND FAULT CIRCUIT CONVENIENCE OUTLET
GL GROUND LUG
GND GROUND
HPC HIGH PRESSURE CONTROL
IBM INDOOR BLOWER MOTOR
IDM INDUCED DRAFT MOTOR
IFC INTEGRATED FURNACE CONTROL
LAC LOW AMBIENT CONTROL
LPC LOW PRESSURE CONTROL
MAS MIXED AIR SENSOR
MLC MANUAL LIMIT CONTROL
MRLC MANUAL RESET LIMIT CONTROL
NPC NEGATIVE PRESSURE SWITCH
OAT OUTSIDE AIR SENSOR
OFM OUTDOOR FAN MOTOR
PL PLUG
PT POWER TRANSFORMER
RAT RETURN AIR SENSOR
RC RUN CAPACITOR
RTU C ROOFTOP UNIT CONTROL
SE SPACE SENSOR
VFD VARIABLE FREQUENCY DRIVE
WIRE NUT
WIRE TIE
WIRE COLOR CODE
BK....BLACK G.....GREEN PR.....PURPLE
BR....BROWN GY.....GRAY R.....RED
BL.....BLUE O.....ORANGE W .....WHITE
Y.....YELLOW
ELECTRICAL WIRING DIAGRAM
GE NON DDC 2-STG VFD 090/102/120
208/230/460V 3 PH 60 Hz
APPROVED:
MODEL ED BY: TCJW
CHECKED:
DATE: 12-05-17
ORIGINAL RELEASE NO.: R-1071S126
PART NO.: 90-106177-09
REV: 01

FIGURE 34





ALARM CODES
CODE
Description
FAULT LEVEL - 0,1,2,3*
0 STANDBY 0
C COMPRESSOR ON – Low (Flashing fin time delay) 0
C COMPRESSOR ON – High (Flashing fin time delay) 0
E Economizer Cooling – No Compressor 0
F CONTINUOUS FAN 0
h HEATON – Low Stage 0
H GAS HEATON – High Stage 0
4 Comfort Alert Code 4 for Compressor Circuit 1 3
5 Comfort Alert Code 5 for Compressor Circuit 1 3
6 Comfort Alert Code 6 for Compressor Circuit 1 3
7 Comfort Alert Code 7 for Compressor Circuit 1 3
8 Comfort Alert Code 8 for Compressor Circuit 1 3
9 Comfort Alert Code 9 for Compressor Circuit 1 3
11 FAILED IGNITION 2
12 LO FLAME SENSE 1
13 FLAME LOST 2
14 UNEXPICTED FLAME 3
15 2nd Stage Gas valve improper voltage 2
20 REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 1 2
21 REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 2 2
22 MAIN LIMIT OPEN 2
29 REFRIGERANT HIGH PRESSURE SWITCH OPEN – CIRCUIT 1 2
30 REFRIGERANT HIGH PRESSURE SWITCH OPEN – CIRCUIT 2 2
33 MRLC Ballout Limit OPEN 2
34 Comfort Alert Code 4 for Compressor Circuit 2 3
35 Comfort Alert Code 5 for Compressor Circuit 2 3
36 Comfort Alert Code 6 for Compressor Circuit 2 3
37 Comfort Alert Code 7 for Compressor Circuit 2 3
38 Comfort Alert Code 8 for Compressor Circuit 2 3
39 Comfort Alert Code 9 for Compressor Circuit 2 3
42 Invalid Thermostat selection 1
44 1st Stage COMBUSTION PRESS SWITCH CLOSED 2
46 1st Stage COMBUSTION PRESS SWITCH OPEN 2
49 FREEZE SWITCH OPEN – CIRCUIT 1 2
50 FREEZE SWITCH OPEN - CIRCUIT 2 2
55 2nd Stage COMBUSTION PRESS SWITCH CLOSED 2
57 2nd Stage COMBUSTION PRESS SWITCH OPEN 2,3
59 Condensate Drain Plugged 3
61 Blower Fault – NO RUN 3
83 Condenser Coil Temp Sensor Fail-OCT 2
84 Outdoor Air Temperature Sensor Fail-OAT 2
88 Emergency Stop Fault 3
93 CONTROL Fault 3
97 Smoke Detection 3
*Fault level:0 – none, 1=warning, 2= problem, 3=shutdown
POWER SUPPLY
L3 L2 L1
DISC (OPTIONAL)
COMP
IBM
OFM1
OFM2
RC1
RC2
LAC
(OPT)
CCH (OPT)
AUX SW (OPT)
GND
VFD
K10
IND1
24 VAC
SMOKE DETECTOR RELAY
OCCUPANCY RELAY
REMOTE SWITCH
JUMPER
ECON (OPT)
ECON1 (OPT)
ECON2 (OPT)
FT1 (OPT)
MLC
MRLC
NPC1
FLMS
SE
COS
LPC1
HPC1
LPC
HPC
VFD
P24
K1
K2
K3
K4
K5
K6
K7
K8
US
PL-1
PL-2
PL-3
PL-4
PL-5
PL-6
PL-7
P3-1
P3-2
P3-3
P3-4
P3-5
P3-6
P3-7
P3-8
P3-9
P3-10
P3-11
P3-12
P3-13
P3-14
P3-15
P9-12
P9-13
P9-14
P34-1
P34-2
P34-3
P34-4
P34-5
P34-6
P34-7
P34-8
P34-9
P34-10
P34-11
P34-12
P35-1
P35-2
P36-1
P36-2
P36-3
P36-4
P36-5
P36-6
P36-7
P36-8
P36-9
P36-10
P36-11
P36-12
(MAS)
(OPT)
SENSE
S-BUS
EXV1
Y1
Y2
W1
W2
L
R
C
NOTES
1. CONNECTORS SUITABLE FOR USE WITH COPPER CONDUCTORS ONLY.
2. CONNECT FIELD WIRING IN GROUNDED RAIN TIGHT CONDUIT TO FUSED DISCONNECT.
3. CONNECT FIELD WIRE TO COMPRESSOR CONTACTOR (CC1).
4. REMOVE L3 AT (CC1) TO INSTALL LOW AMBIENT ACCESSORY.
5. IF REQUIRED, ATTACH CRANKCASE HEATER ACCESSORY TO CC1 (L1) AND CC1 (L2).
6. COMPRESSOR MOTOR THERMALLY PROTECTED. ALL 3 PHASE MODELS ARE PROTECTED AGAINST PRIMARY SINGLE PHASING CONDITIONS.
7. TRANSFORMER FACTORY WIRED AS SHOWN BELOW. CHANGE PRIMARY VOLTAGE CONNECTIONS FOR ALTERNATE VOLTAGES, IF REQUIRED.
8. LOW VOLTAGE CIRCUIT IS N.E.C. CLASS 2 WITH A CLASS 2 TRANSFORMER, 24VAC, 50/60 HZ SUPPLIED.
9. MOTOR FACTORY WIRED FOR CORRECT VOLTAGE.
10. REMOVE PL36 FOR ECONOMIZER ACCESSORY; PL34 AND PL36 LOCATED IN RETURN AIR SECTION.
UNIT VOLTAGES - HZ
200/201 - 50HZ
208 - 60HZ
230 - 60HZ
380 - 60HZ
380-415 - 50HZ
460 - 60HZ
575 - 60HZ
TRANSFORMER TERM.
200
230
230
400
400
460
230
WIRING INFORMATION
LINE VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
LOW VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
REPLACEMENT WIRE MUST BE THE SAME SIZE AND TYPE OF INSULATION AS ORIGINAL (105°C MIN.)
WARNING CABINET MUST BE PERMANENTLY GROUNDED AND CONFORM TO I.E.C., N.E.C., C.E.C., NATIONAL WIRING REGULATIONS, AND LOCAL CODES AS APPLICABLE.
COMPONENT CODES
CA COMFORT ALERT MODULE
CC COMPRESSOR CONTACTOR
CCH CRANKCASE HEATER
CCT CONDITIONED AIR SENSOR
CFS CLOGGED FILTER SWITCH
COMP COMPRESSOR
CPC CONTROL TRANSFORMER
DPT DISCHARGE AIR SENSOR
DSC DISCONNECT SWITCH
FLMS FLAME SENSOR
FP FAN PROVING
FS FREEZE SENSOR
GFCI GROUND FAULT CONVENIENCE OUTLET
GL GROUND LUG
GND GROUND
HPC HIGH PRESSURE CONTROL
IBM INDOOR BLOWER MOTOR
IDM INDUCED DRAFT MOTOR
IFC INTEGRATED FURNACE CONTROL
LAC LOW AMBIENT CONTROL
LPC LOW PRESSURE CONTROL
MAS MIXED AIR SENSOR
MLC MANUAL LOCKOUT
MRLC MANUAL RESET LIMIT CONTROL
NPC NEGATIVE PRESSURE SWITCH
OAT OUTDOOR AIR SENSOR
OFM OUTDOOR FAN MOTOR
PL PLUG
PT POWER TRANSFORMER
RAT RETURN AIR SENSOR
RC RUN CAPACITOR
RTLC ROOFTOP UNIT CONTROL
SE SPARK ELECTRODE
US UNLOADER SOLENOID
VFD VARIABLE FREQUENCY DRIVE
WIRE COLOR CODE
BK....BLACK G.....GREEN PR.....PURPLE
BR....BROWN G Y.....GRAY R.....RED
BL.....BLUE O.....ORANGE W .....WHITE
Y.....YELLOW
ELECTRICAL WIRING SCHEMATIC
GE NON DDC 2-STG VFD 090/102/120
208/230/460V 3 PH 60 Hz
APPROVED:
CHECKED:
ORIGINAL RELEASE NO.:
MODELED BY: TEW
DATE: 12-06-17
R-1071S126
PART NO: 90-106178-09
REV: 02

FIGURE 35


CONTROL BOX
RTU-C
WIRING INFORMATION
NOTES
COMPONENT CODES
WIRE COLOR CODE
ELECTRICAL WIRING DIAGRAM
GE DDC 2-STG 090/102/120
208/230/380/460V, 3PH, 60HZ
GE DDC 2-STG 072/090/102
380-415V, 3PH, 50HZ
PART NO.: 90-106177-13
REV: 00

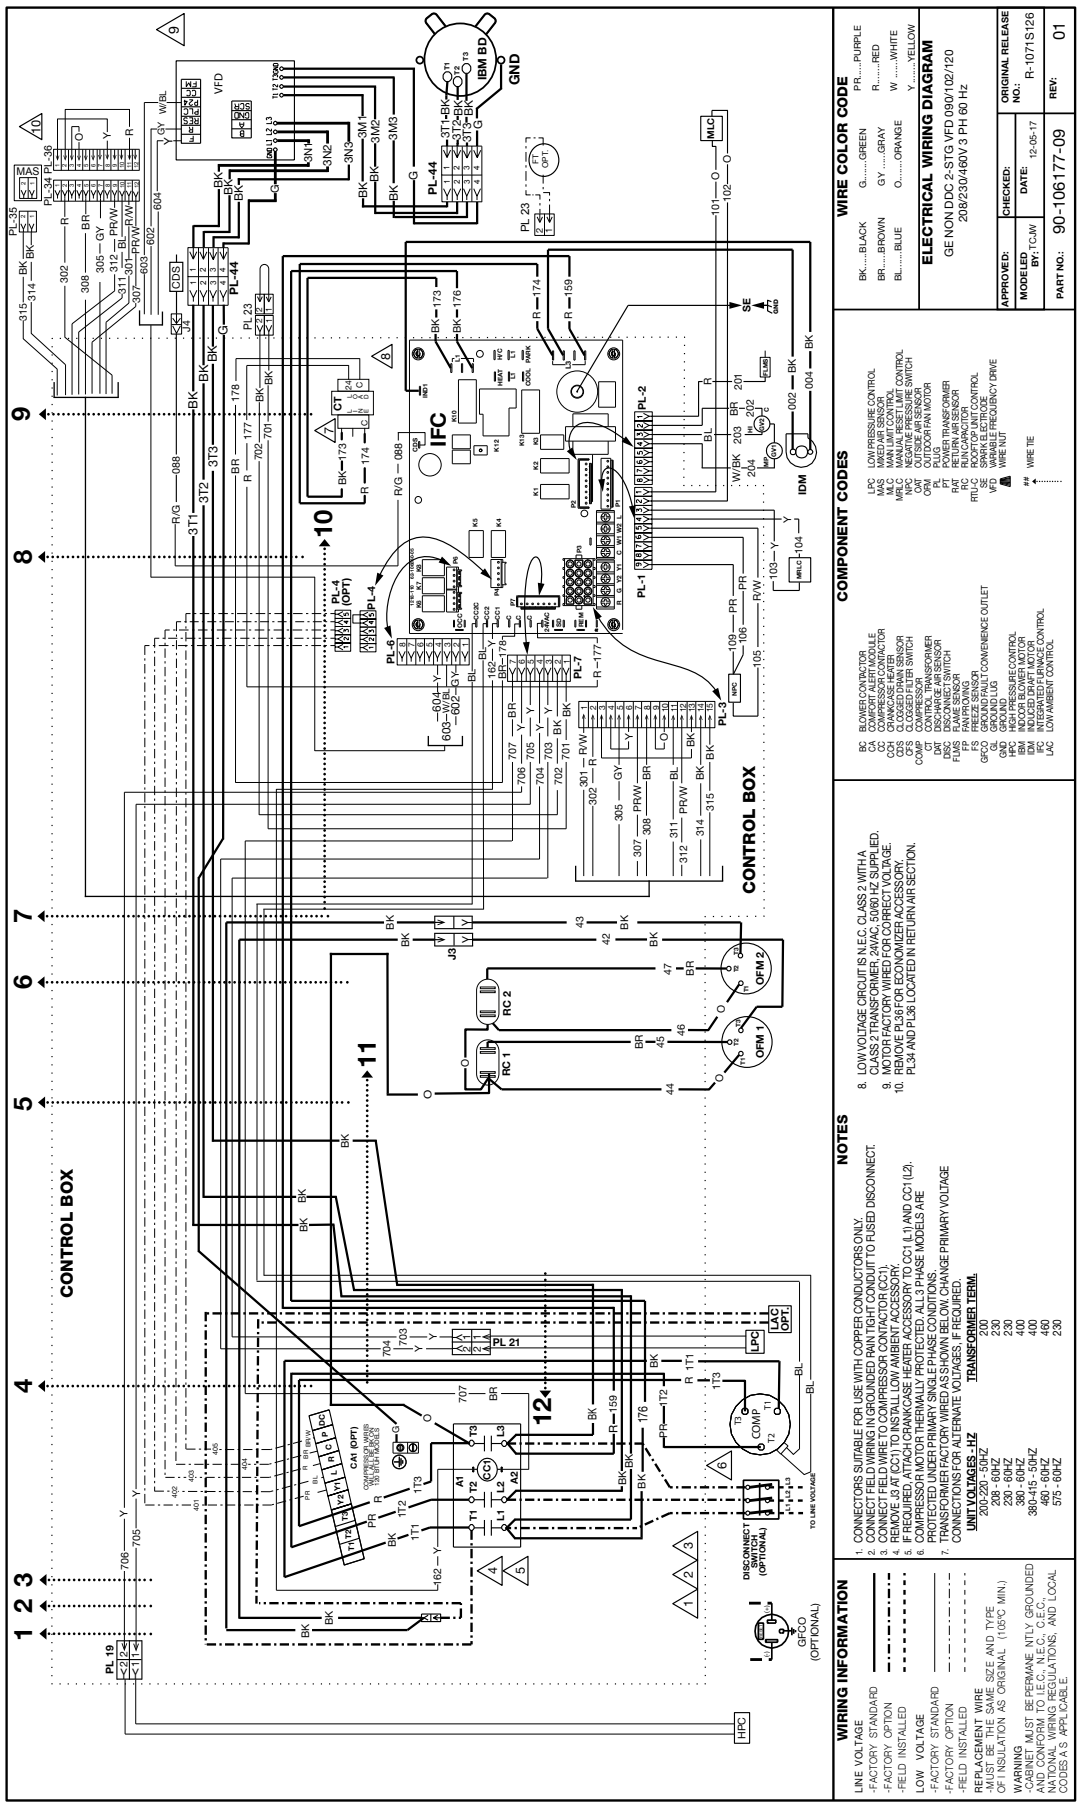

ALARM CODES

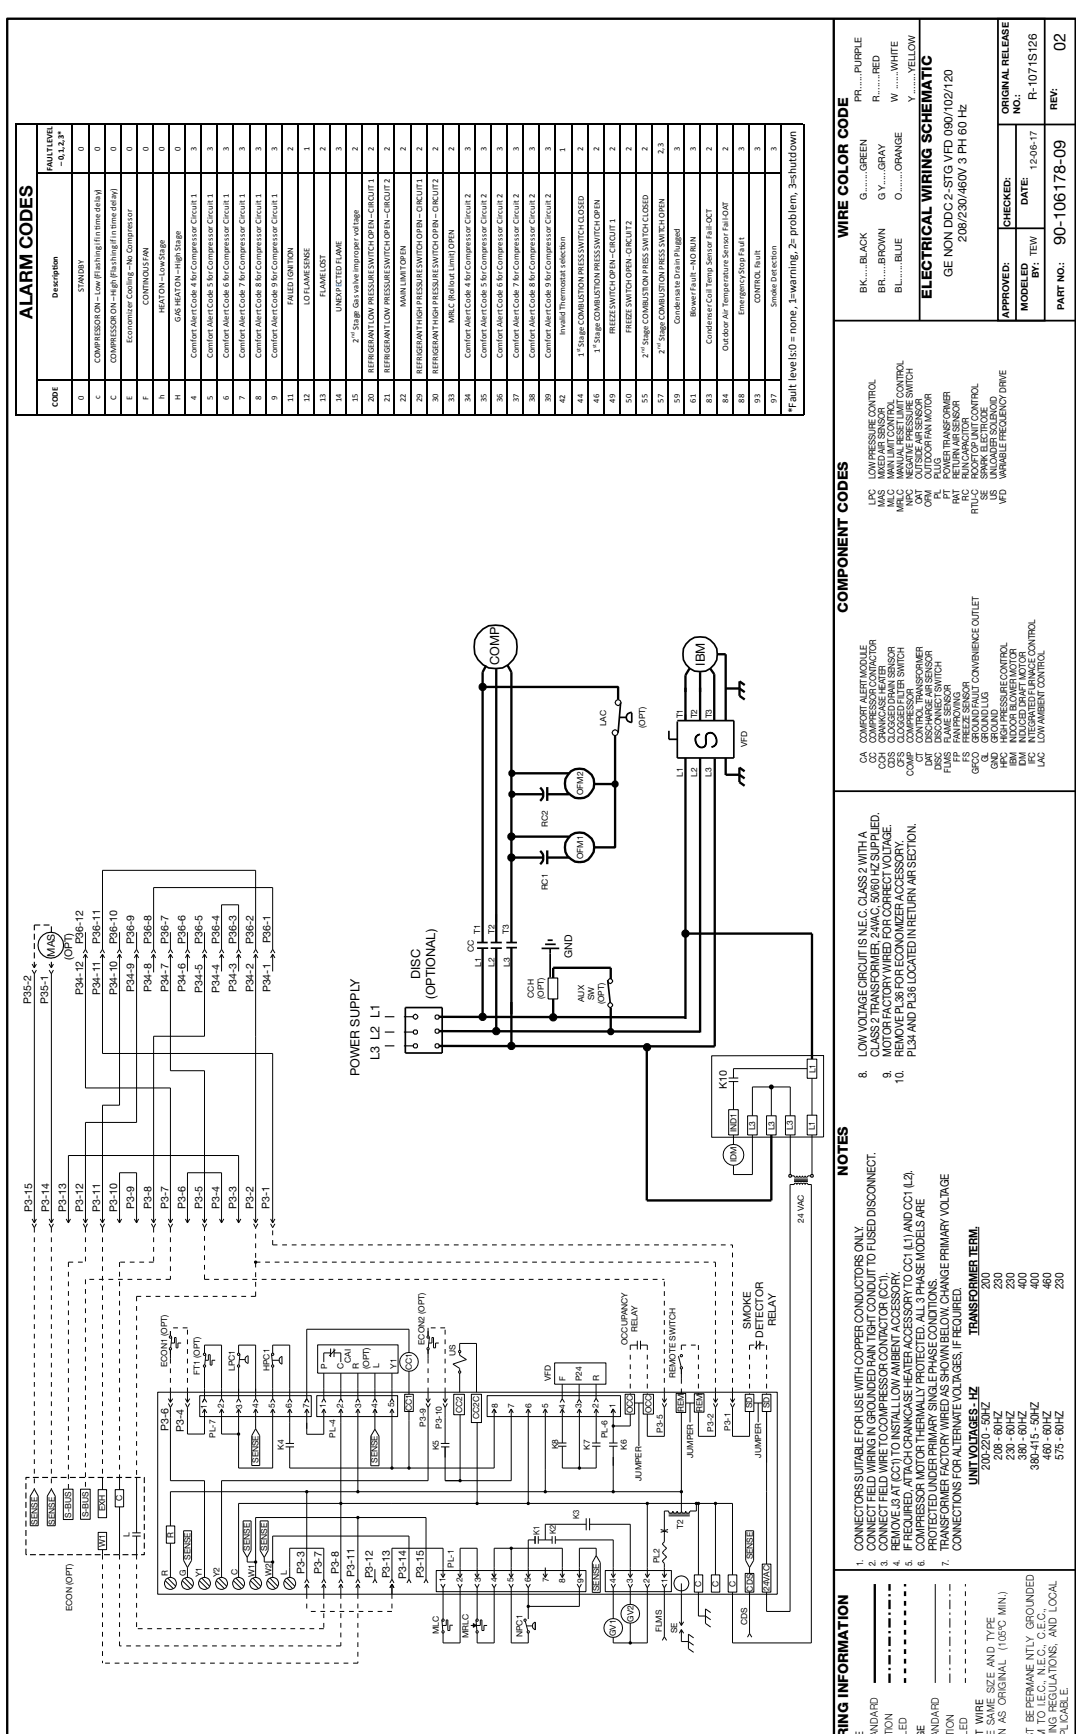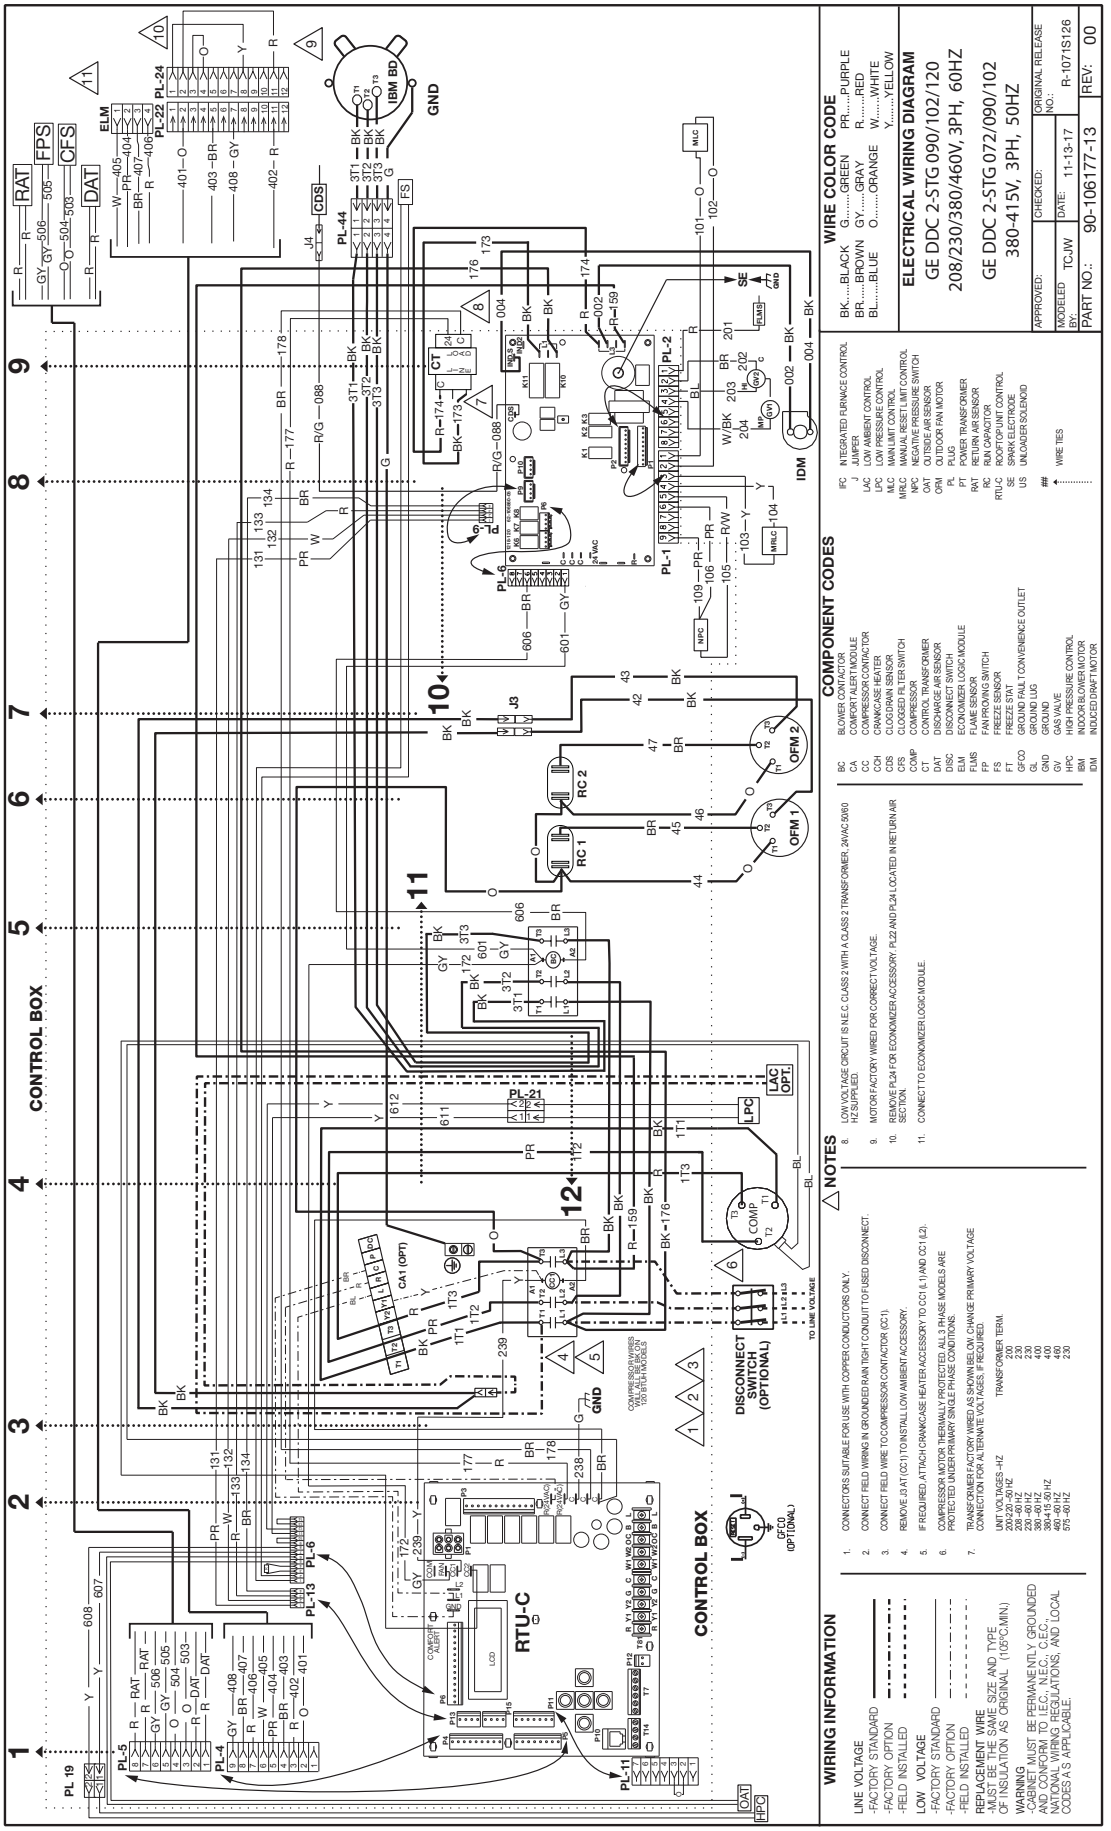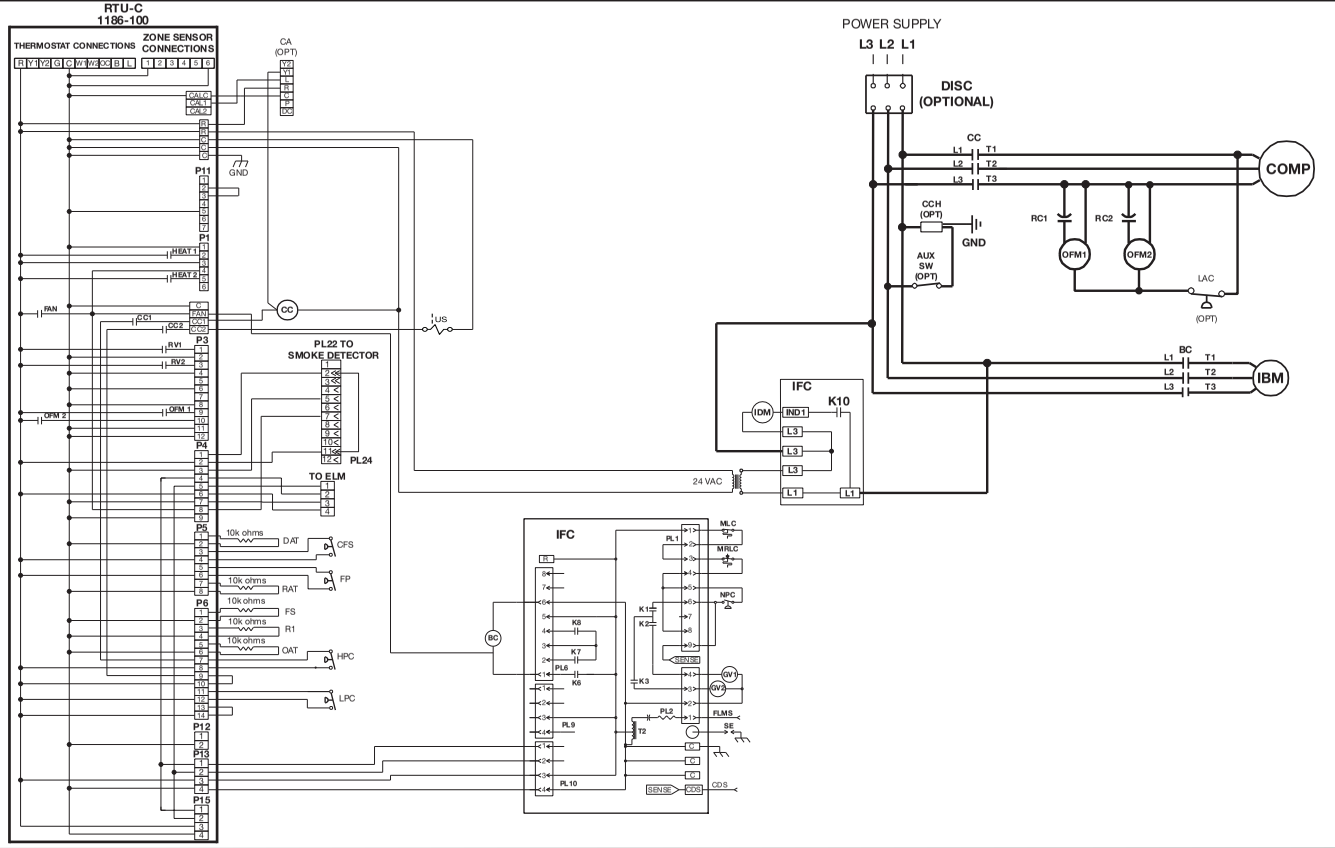CODE	Description	FAULT LEVEL -0,1,2,3*
0	STANDBY	0
c	COMPRESSOR ON – Low (Flashing if in time delay)	0
C	COMPRESSOR ON – High (Flashing if in time delay)	0
E	Economizer Cooling – No Compressor	0
F	CONTINOUS FAN	0
h	HEAT ON – Low Stage	0
H	GAS HEAT ON – High Stage	0
4	Comfort Alert Code 4 for Compressor Circuit 1	3
5	Comfort Alert Code 5 for Compressor Circuit 1	3
6	Comfort Alert Code 6 for Compressor Circuit 1	3
7	Comfort Alert Code 7 for Compressor Circuit 1	3
8	Comfort Alert Code 8 for Compressor Circuit 1	3
9	Comfort Alert Code 9 for Compressor Circuit 1	3
11	FAILED IGNITION	2
12	LO FLAME SENSE	1
13	FLAME LOST	2
14	UNEXPECTED FLAME	3
15	2ND Stage Gas valve improper voltage	2
20	REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 1	2
21	REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 2	2
22	MAIN LIMIT OPEN	2
29	REFRIGERANT HIGH PRESSURE SWITCH OPEN – CIRCUIT 1	2
30	REFRIGERANT HIGH PRESSURE SWITCH OPEN – CIRCUIT 2	2
33	MRLC (Rollout Limit) OPEN	2
34	Comfort Alert Code 4 for Compressor Circuit 2	3
35	Comfort Alert Code 5 for Compressor Circuit 2	3
36	Comfort Alert Code 6 for Compressor Circuit 2	3
37	Comfort Alert Code 7 for Compressor Circuit 2	3
38	Comfort Alert Code 8 for Compressor Circuit 2	3
39	Comfort Alert Code 9 for Compressor Circuit 2	3
42	Invalid Thermostat Selection	1
44	1ST Stage COMBUSTION PRESS SWITCH CLOSED	2
46	1ST Stage COMBUSTION PRESS SWITCH OPEN	2
49	FREEZE SWITCH OPEN – CIRCUIT 1	2
50	FREEZE SWITCH OPEN -CIRCUIT 2	2
55	2ND Stage COMBUSTION PRESSS SWITCH CLOSED	2
57	2ND Stage COMBUSTION PRESS SWITCH OPEN	2,3
59	Condensate Drain Plugged	3
61	Blower Fault – NO RUN	3
83	Condenser Coil Temp Sensor Fail-OCT	2
84	Outdoor Air Temperature Sensor Fail-OAT	2
88	Emergency Stop Fault	3
93	CONTROL Fault	3
97	Smoke Detection	3

*Fault levels:0 = none, 1=warning, 2= problem, 3=shutdown

WIRING INFORMATION

LINE VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED

LOW VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED

REPLACEMENT WIRE
-MUST BE THE SAME SIZE AND TYPE OF INSULATION AS ORIGINAL (105°C MIN.)

WARNING
-CABINET MUST BE PERMANENTLY GROUNDED AND CONFORM TO I.E.C., N.E.C., C.E.C., NATIONAL WIRING REGULATIONS, AND LOCAL CODES AS APPLICABLE.

NOTES

1. CONNECTORS SUITABLE FOR USE WITH COPPER CONDUCTORS ONLY.
2. CONNECT FIELD WIRING IN GROUNDED RAIN TIGHT CONDUIT TO FUSED DISCONNECT.
3. CONNECT FIELD WIRE TO COMPRESSOR CONTACTOR (CC1).
4. REMOVE J3 AT (CC1) TO INSTALL LOW AMBIENT ACCESSORY.
5. IF REQUIRED, ATTACH CRANKCASE HEATER ACCESSORY TO CC1 (L1) AND CC1 (L2).
6. COMPRESSOR MOTOR THERMALLY PROTECTED. ALL 3 PHASE MODELS ARE PROTECTED UNDER PRIMARY SINGLE PHASE CONDITIONS.
7. TRANSFORMER FACTORY WIRED AS SHOWN BELOW. CHANGE PRIMARY VOLTAGE CONNECTIONS FOR ALTERNATE VOLTAGES, IF REQUIRED.

UNIT VOLTAGES - HZ	TRANSFORMER TERM.
200-220 - 50HZ	200
208 - 60HZ	230
230 - 60HZ	230
380 - 60HZ	400
380-415 - 50HZ	400
460 - 60HZ	460
575 - 60HZ	575

8. LOW VOLTAGE CIRCUIT IS N.E.C. CLASS 2 WITH A CLASS 2 TRANSFORMER, 24VAC, 50/60 HZ SUPPLIED.
9. MOTOR FACTORY WIRED FOR CORRECT VOLTAGE.
10. REMOVE PL24 FOR ECONOMIZER ACCESSORY. PL22 AND PL24 LOCATED IN RETURN AIR SECTION.

COMPONENT CODES

BC	BLOWER CONTACTOR
CA	COMFORT ALERT MODULE
CC	COMPRESSOR CONTACTOR
CCH	CRANKCASE HEATER
CDS	CLOGGED DRAIN SENSOR
CFS	CLOGGED FILTER SWITCH
COMP	COMPRESSOR
CT	CONTROL TRANSFORMER
DAT	DISCHARGE AIR SENSOR
DISC	DISCONNECT SWITCH
FLMS	FLAME SENSOR
FP	FAN PROVING
FS	FREEZE SENSOR
GFCO	GROUND FAULT CONVENIENCE OUTLET
GL	GROUND LUG
GND	GROUND
GV	GAS VALVE
HPC	HIGH PRESSURE CONTROL
IBM	INDOOR BLOWER MOTOR
IDM	INDUCED DRAFT MOTOR
IFC	INTEGRATED FURNACE CONTROL
LAC	LOW AMBIENT CONTROL
LPC	LOW PRESSURE CONTROL
MAS	MIXED AIR SENSOR
MLC	MAIN LIMIT CONTROL
MRLC	MANUAL RESET LIMIT CONTROL
NPC	NEGATIVE PRESSURE SWITCH
OAT	OUTSIDE AIR SENSOR
OFM	OUTDOOR FAN MOTOR
PL	PLUG
PT	POWER TRANSFORMER
RAT	RETURN AIR SENSOR
RC	RUN CAPACITOR
RTU-C	ROOFTOP UNIT CONTROL
SE	SPARK ELECTRODE
US	UNLOADER SOLENOID

WIRE COLOR CODE

BK.....BLACK	G.....GREEN	PR.....PURPLE
BR.....BROWN	G Y .....GRAY	R.....RED
BL.....BLUE	O.....ORANGE	W .....WHITE
		Y.....YELLOW


ELECTRICAL WIRING SCHEMATIC


GE DDC 2 STG 090/102/120
208/230/380/460V, 3PH, 60HZ

GE DDC 2 STG 072/090/102
380-415V, 3PH, 50HZ

APPROVED:	CHECKED:	ORIGINAL RELEASE NO.: R-1071S126
MODELED BY: TCJW	DATE: 11-14-17	
PART NO.: 90-106178-13		REV: 01

FIGURE 37

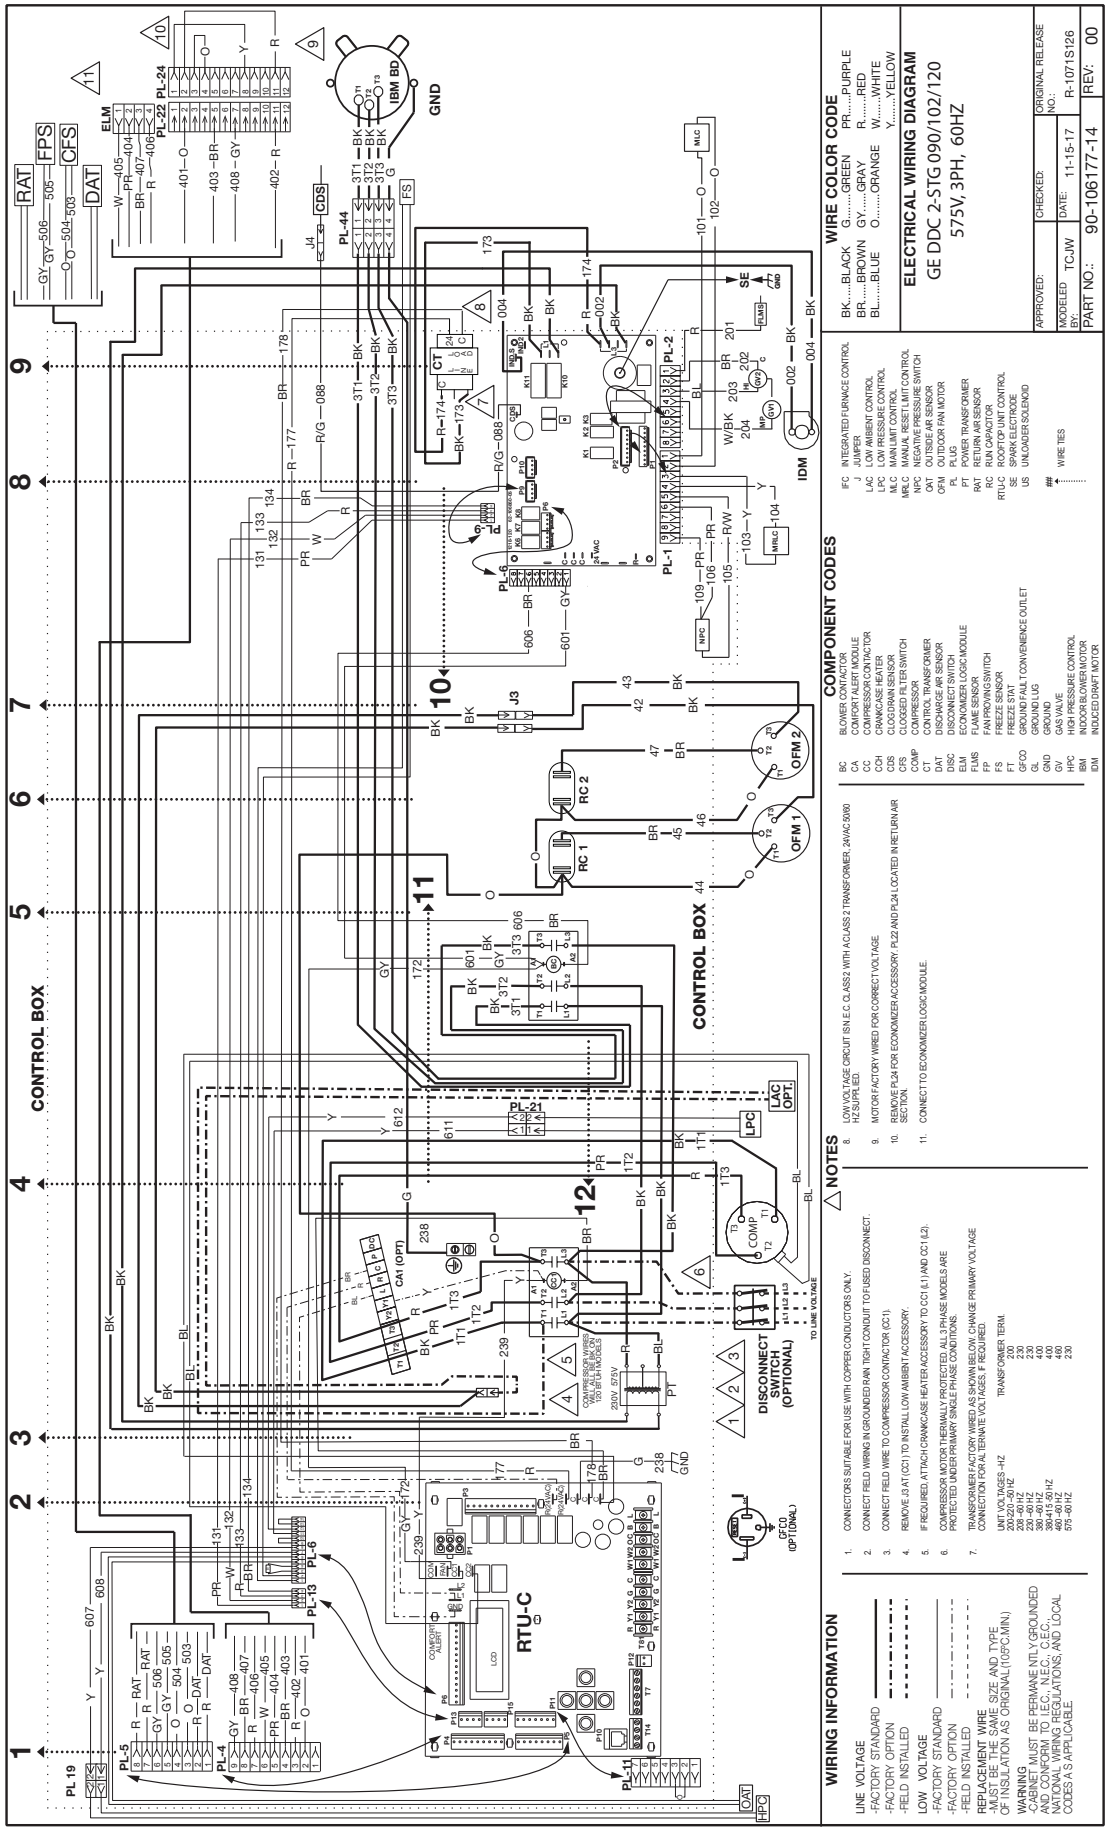
ELECTRICAL WIRING DIAGRAM
GE DDC 2-STG 090/102/120
575V, 3PH, 60HZ
PART NO.: 90-106177-14
REV: 00
DATE: 11-15-17
R-1071S126
WIRE COLOR CODE
BK.....BLACK
BR.....BROWN
BL.....BLUE
G.....GREEN
GY.....GRAY
O.....ORANGE
PR.....PURPLE
R.....RED
W.....WHITE
Y.....YELLOW
COMPONENT CODES
NOTES
WIRING INFORMATION
CONTROL BOX
RTU-C
DISCONNECT SWITCH (OPTIONAL)
GFCO (OPTIONAL)
IDM
IBM
OFM 1
OFM 2
RC 1
RC 2
COMP
CAI (OPT)
GND
FPS
CFS
DAT
RAT
ELM
IBM BD
CDS
FS
SE
LPC
LAC OPT.
OAT
HPC

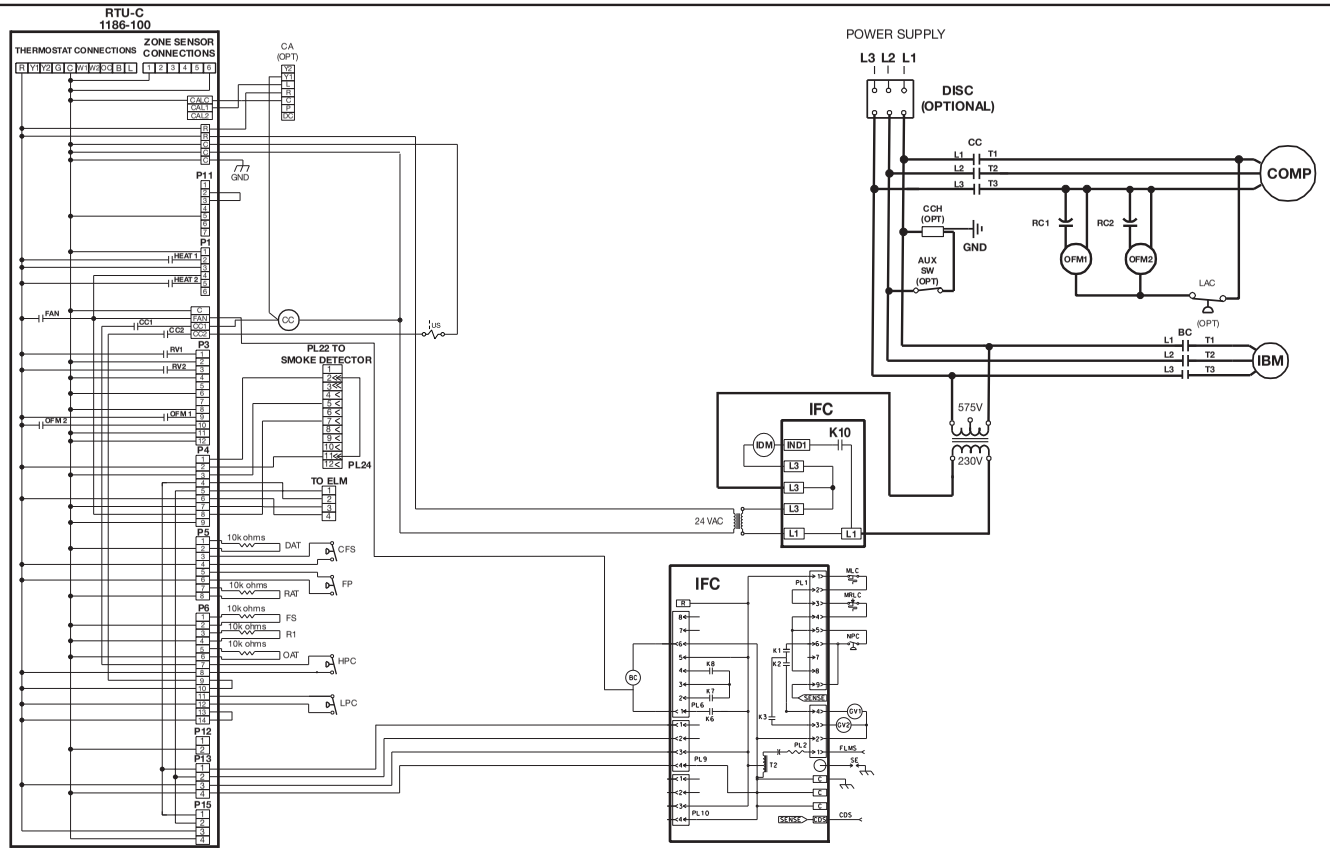

ALARM CODES

CODE	Description	FAULT LEVEL ~0,1,2,3*
0	STANDBY	0
c	COMPRESSOR ON – Low (Flashing if in time delay)	0
C	COMPRESSOR ON – High (Flashing if in time delay)	0
E	Economizer Cooling – No Compressor	0
F	CONTINOUS FAN	0
h	HEATON – Low Stage	0
H	GAS HEAT ON – High Stage	0
4	Comfort Alert Code 4 for Compressor Circuit 1	3
5	Comfort Alert Code 5 for Compressor Circuit 1	3
6	Comfort Alert Code 6 for Compressor Circuit 1	3
7	Comfort Alert Code 7 for Compressor Circuit 1	3
8	Comfort Alert Code 8 for Compressor Circuit 1	3
9	Comfort Alert Code 9 for Compressor Circuit 1	3
11	FAILED IGNITION	2
12	LO FLAME SENSE	1
13	FLAME LOST	2
14	UNEXPECTED FLAME	3
15	2nd Stage Gas valve improper voltage	2
20	REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 1	2
21	REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 2	2
22	MAIN LIMIT OPEN	2
29	REFRIGERANT HIGH PRESSURES WITCH OPEN – CIRCUIT 1	2
30	REFRIGERANT HIGH PRESSURES WITCH OPEN – CIRCUIT 2	2
33	MRLC (Rollout Limit) OPEN	2
34	Comfort Alert Code 4 for Compressor Circuit 2	3
35	Comfort Alert Code 5 for Compressor Circuit 2	3
36	Comfort Alert Code 6 for Compressor Circuit 2	3
37	Comfort Alert Code 7 for Compressor Circuit 2	3
38	Comfort Alert Code 8 for Compressor Circuit 2	3
39	Comfort Alert Code 9 for Compressor Circuit 2	3
42	Invalid Thermostat selection	1
44	1st Stage COMBUSTION PRESS SWITCH CLOSED	2
46	1st Stage COMBUSTION PRESS SWITCH OPEN	2
49	FREEZE SWITCH OPEN – CIRCUIT 1	2
50	FREEZE SWITCH OPEN -CIRCUIT 2	2
55	2nd Stage COMBUSTION PRESS SWITCH CLOSED	2
57	2nd Stage COMBUSTION PRESS SWITCH OPEN	2,3
59	Condensate Drain Plugged	3
61	Blower Fault – NO RUN	3
83	Condenser Coil Temp Sens or Fail-OCT	2
84	Outdoor Air Temperature Sensor Fail-OAT	2
88	Emergency Stop Fault	3
93	CONTROL Fault	3
97	Smoke Detection	3

*Fault levels: 0 = none, 1=warning, 2= problem, 3=shutdown

WIRING INFORMATION

LINE VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED

LOW VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED

REPLACEMENT WIRE
-MUST BE THE SAME SIZE AND TYPE OF INSULATION AS ORIGINAL (105°C MIN.)

WARNING
-CABINET MUST BE PERMANENTLY GROUNDED AND CONFORM TO I.E.C., N.E.C., C.E.C., NATIONAL WIRING REGULATIONS, AND LOCAL CODES AS APPLICABLE.

NOTES

1. CONNECTORS SUITABLE FOR USE WITH COPPER CONDUCTORS ONLY.
2. CONNECT FIELD WIRING IN GROUNDED RAIN TIGHT CONDUIT TO FUSED DISCONNECT.
3. CONNECT FIELD WIRE TO COMPRESSOR CONTACTOR (CC1).
4. REMOVE J3 AT (CC1) TO INSTALL LOW AMBIENT ACCESSORY.
5. IF REQUIRED, ATTACH CRANKCASE HEATER ACCESSORY TO CC1 (L1) AND CC1 (L2).
6. COMPRESSOR MOTOR THERMALLY PROTECTED. ALL 3 PHASE MODELS ARE PROTECTED UNDER PRIMARY SINGLE PHASE CONDITIONS.
7. TRANSFORMER FACTORY WIRED AS SHOWN BELOW. CHANGE PRIMARY VOLTAGE CONNECTIONS FOR ALTERNATE VOLTAGES, IF REQUIRED.

UNIT VOLTAGES - HZ	TRANSFORMER TERM.
200-220 - 50HZ	200
208 - 60HZ	230
230 - 60HZ	230
380 - 60HZ	400
380-415 - 50HZ	400
460 - 60HZ	460
575 - 60HZ	230

8. LOW VOLTAGE CIRCUIT IS N.E.C. CLASS 2 WITH A CLASS 2 TRANSFORMER, 24VAC, 50/60 HZ SUPPLIED.
9. MOTOR FACTORY WIRED FOR CORRECT VOLTAGE.
10. REMOVE PL24 FOR ECONOMIZER ACCESSORY. PL22 AND PL24 LOCATED IN RETURN AIR SECTION.

COMPONENT CODES

BC	BLOWER CONTACTOR	LPC	LOW PRESSURE CONTROL
CA	COMFORT ALERT MODULE	MAS	MIXED AIR SENSOR
CC	COMPRESSOR CONTACTOR	MLC	MAIN LIMIT CONTROL
CCH	CRANKCASE HEATER	MRLC	MANUAL RESET LIMIT CONTROL
CDS	CLOGGED DRAIN SENSOR	NPC	NEGATIVE PRESSURE SWITCH
CFS	CLOGGED FILTER SWITCH	OAT	OUTSIDE AIR SENSOR
COMP	COMPRESSOR	OFM	OUTDOOR FAN MOTOR
CT	CONTROL TRANSFORMER	PL	PLUG
DAT	DISCHARGE AIR SENSOR	PT	POWER TRANSFORMER
DISC	DISCONNECT SWITCH	RAT	RETURN AIR SENSOR
FLMS	FLAME SENSOR	RC	RUN CAPACITOR
FP	FAN PROVING	RTU-C	ROOFTOP UNIT CONTROL
FS	FREEZE SENSOR	SE	SPARK ELECTRODE
GFCO	GROUND FAULT CONVENIENCE OUTLET	US	UNLOADER SOLENOID
GL	GROUND LUG		
GND	GROUND		
GV	GAS VALVE		
HPC	HIGH PRESSURE CONTROL		
IBM	INDOOR BLOWER MOTOR		
IDM	INDUCED DRAFT MOTOR		
IFC	INTEGRATED FURNACE CONTROL		
LAC	LOW AMBIENT CONTROL		

WIRE COLOR CODE


BK.....BLACK	G.....GREEN	PR.....PURPLE
BR.....BROWN	GY .....GRAY	R.....RED
BL.....BLUE	O.....ORANGE	W .....WHITE
		Y .....YELLOW


ELECTRICAL WIRING SCHEMATIC

GE DDC 2-STG 090/102/120
575V, 3PH, 60HZ

APPROVED:	CHECKED:	ORIGINAL RELEASE NO.:
MODELED BY: TCJW	DATE: 11-20-17	R-1071S126
PART NO.: 90-106178-14		REV: 01

FIGURE 39

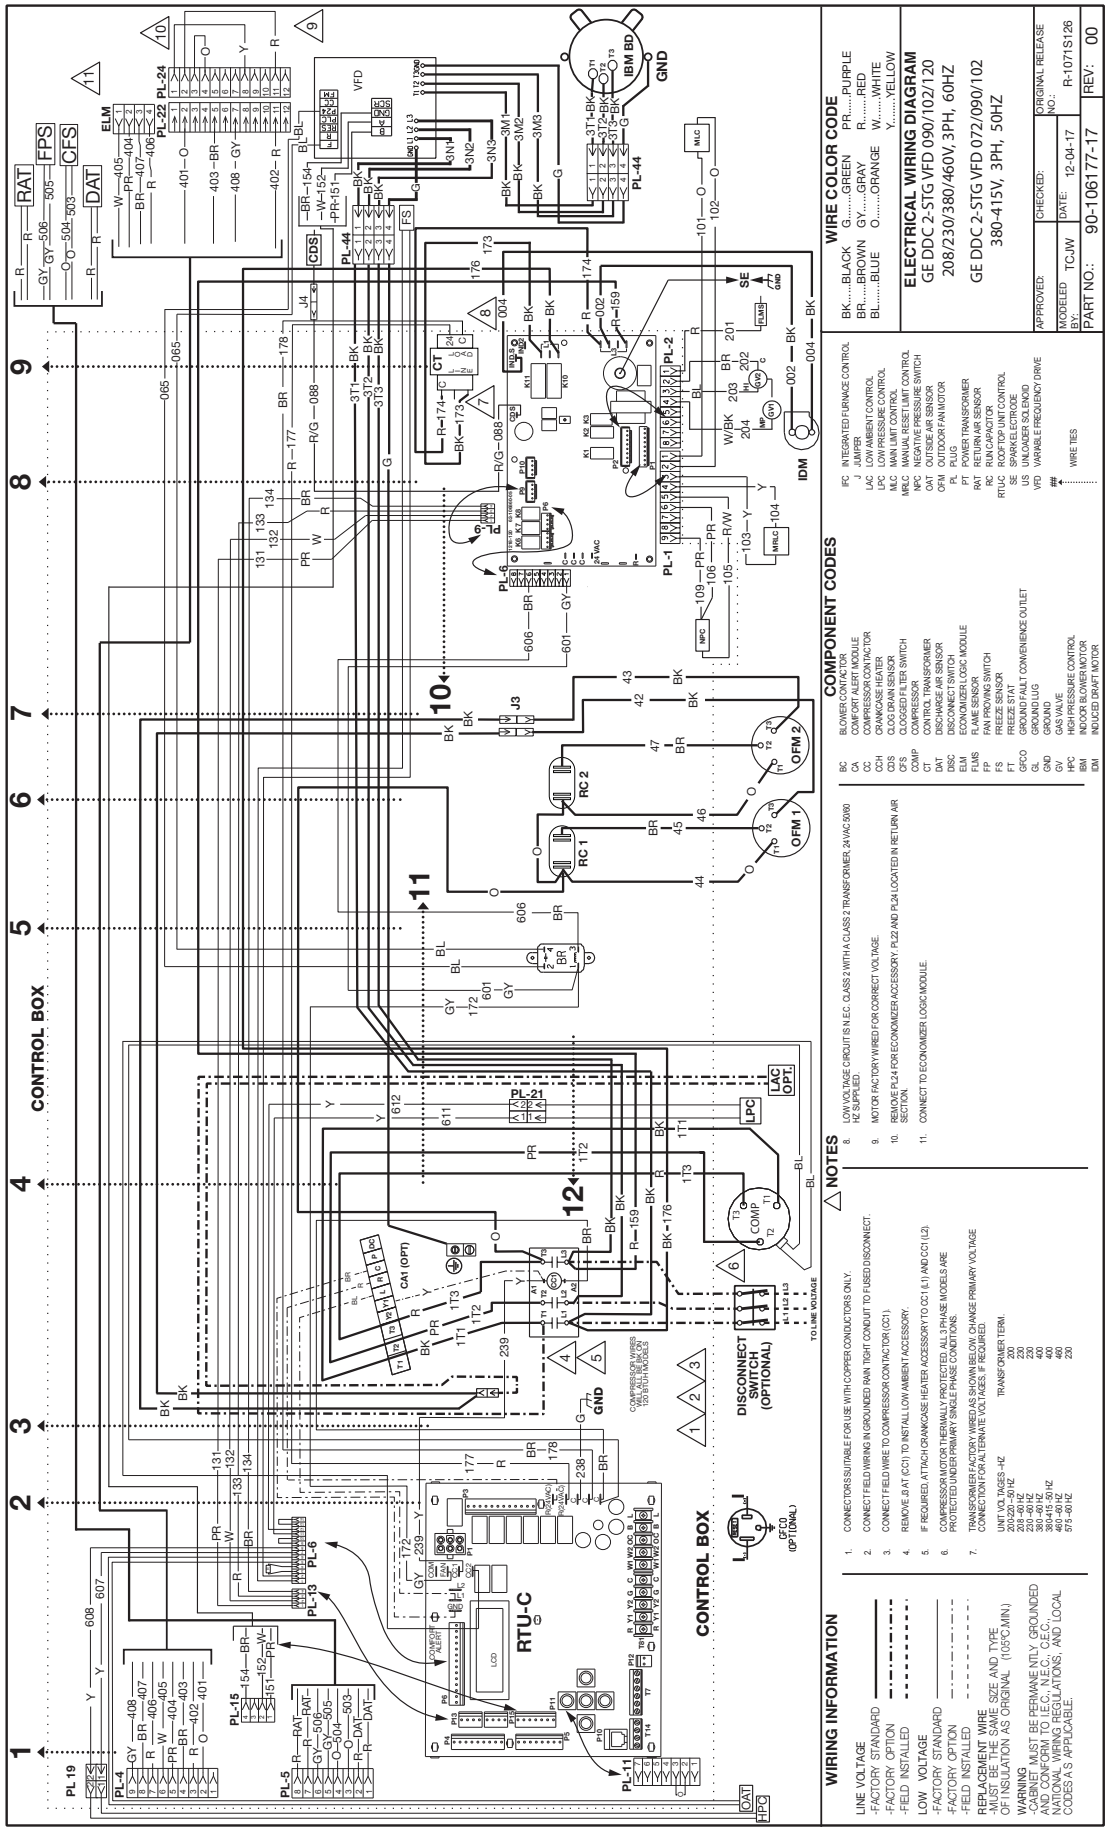
CONTROL BOX
RTU-C
WIRING INFORMATION
LINE VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
LOW VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED
REPLACEMENT WIRE
-MUST BE THE SAME SIZE AND TYPE OF INSULATION AS ORIGINAL (105°C MIN.)
WARNING
-CABINET MUST BE PERMANENTLY GROUNDED AND CONFORM TO I.E.C., N.E.C., C.E.C., NATIONAL AND LOCAL ELECTRICAL REGULATIONS, AND LOCAL CODES AS APPLICABLE.
NOTES
COMPONENT CODES
WIRE COLOR CODE
BK.....BLACK
BR.....BROWN
BL.....BLUE
G.....GREEN
GY.....GRAY
O.....ORANGE
PR.....PURPLE
R.....RED
W.....WHITE
Y.....YELLOW
ELECTRICAL WIRING DIAGRAM
GE DDC 2-STG VFD 090/102/120
208/230/380/460V, 3PH, 60HZ
GE DDC 2-STG VFD 072/090/102
380-415V, 3PH, 50HZ
APPROVED:
CHECKED:
ORIGINAL RELEASE NO.: R-1071S126
MODELED BY: TC,JW
DATE: 12-04-17
PART NO.: 90-106177-17
REV: 00

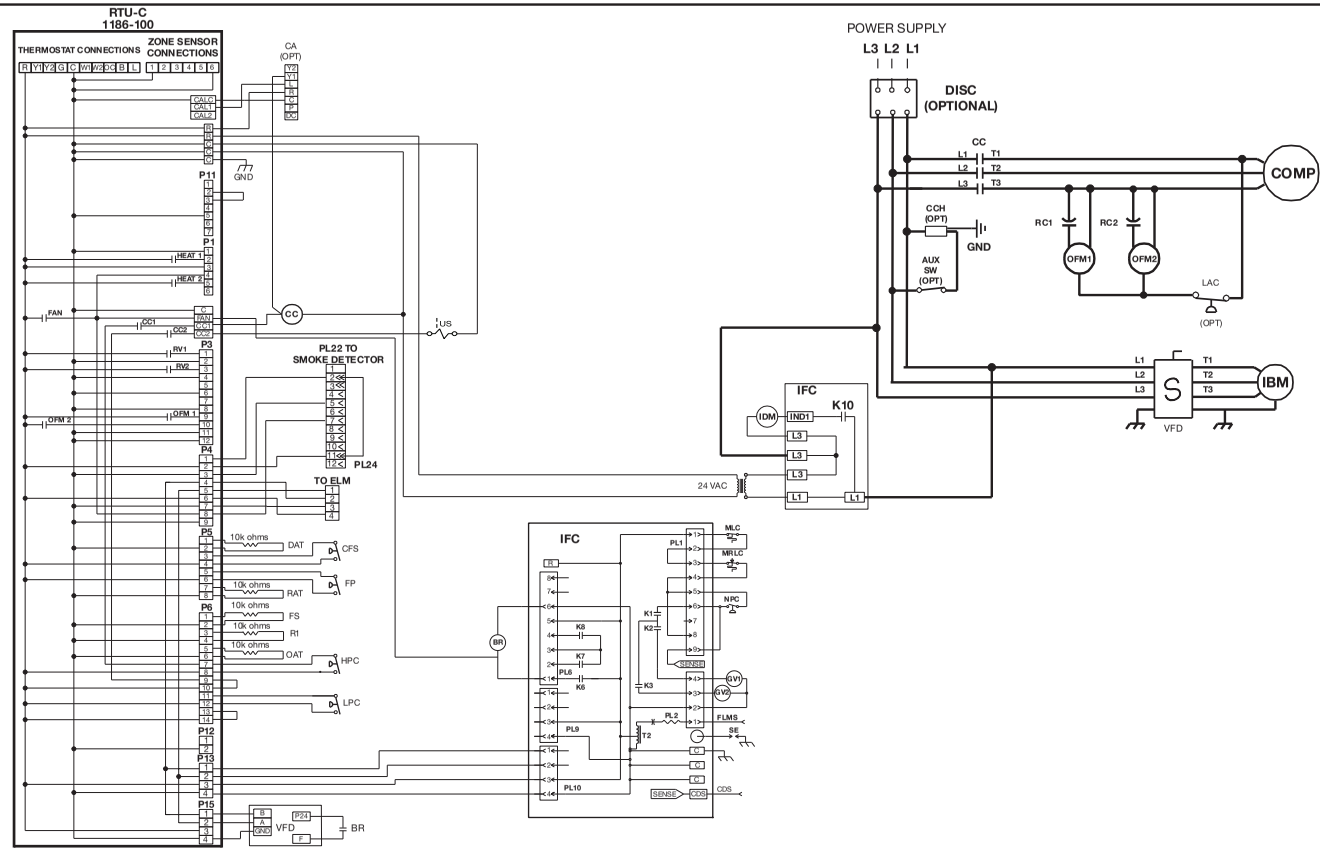

ALARM CODES

CODE	Description	FAULT LEVEL – 0,1, 2, 3 *
0	STANDBY	0
c	COMPRESSOR ON – Low (Flashing if in time delay)	0
C	COMPRESSOR ON – High (Flashing if in time delay)	0
E	Economizer Cooling – No Compressor	0
F	CONTINOUS FAN	0
h	HEAT ON – Low Stage	0
H	GAS HEATON – High Stage	0
4	Comfort Alert Code 4 for Compress or Circuit 1	3
5	Comfort Alert Code 5 for Compress or Circuit 1	3
6	Comfort Alert Code 6 for Compress or Circuit 1	3
7	Comfort Alert Code 7 for Compress or Circuit 1	3
8	Comfort Alert Code 8 for Compress or Circuit 1	3
9	Comfort Alert Code 9 for Compress or Circuit 1	3
11	FAILED IGNITION	2
12	LO FLAME SENSE	1
13	FLAME LOST	2
14	UNEXPECTED FLAME	3
15	2nd Stage Gas valve improper voltage	2
20	REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 1	2
21	REFRIGERANT LOW PRESSURE SWITCH OPEN – CIRCUIT 2	2
22	MAIN LIMIT OPEN	2
29	REFRIGERANT HIGH PRESSURES WITCH OPEN – CIRCUIT 1	2
30	REFRIGERANT HIGH PRESSURES WITCH OPEN – CIRCUIT 2	2
33	MRLC (Rollout Limit) OPEN	2
34	Comfort Alert Code 4 for Compress or Circuit 2	3
35	Comfort Alert Code 5 for Compress or Circuit 2	3
36	Comfort Alert Code 6 for Compress or Circuit 2	3
37	Comfort Alert Code 7 for Compress or Circuit 2	3
38	Comfort Alert Code 8 for Compress or Circuit 2	3
39	Comfort Alert Code 9 for Compress or Circuit 2	3
42	Invalid Thermostat Selection	1
44	1st Stage COMBUSTION PRESS SWITCH CLOSED	2
46	1st Stage COMBUSTION PRESS SWITCH OPEN	2
49	FREEZE SWITCH OPEN – CIRCUIT1	2
50	FREEZE SWITCH OPEN -CIRCUIT 2	2
55	2nd Stage COMBUSTION PRESS SWITCH CLOSED	2
57	2nd Stage COMBUSTION PRESS SWITCH OPEN	2,3
59	Condensate Drain Plugged	3
61	Blower Fault – NO RUN	3
83	Condenser Coil Temp Sensor Fail-OCT	2
84	Outdoor Air Temperature Sensor Fail-OAT	2
88	Emergency Stop Fault	3
93	CONTROL Fault	3
97	Smoke Detection	3

*Fault levels:0 = none, 1=warning, 2= problem, 3=shutdown

WIRING INFORMATION

LINE VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED

LOW VOLTAGE
-FACTORY STANDARD
-FACTORY OPTION
-FIELD INSTALLED

REPLACEMENT WIRE
-MUST BE THE SAME SIZE AND TYPE OF I NSULATION AS ORIGINAL (105ºC MIN.)

WARNING
-CABINET MUST BE PERMANE NTLY GROUNDED AND CONFORM TO I.E.C., N.E.C., C.E.C., NATIONAL WIRING REGULATIONS, AND LOCAL CODES A S APPLICABLE.

NOTES

1. CONNECTORS SUITABLE FOR USE WITH COPPER CONDUCTORS ONLY.
2. CONNECT FIELD WIRING IN GROUNDED RAIN TIGHT CONDUIT TO FUSED DISCONNECT.
3. CONNECT FIELD WIRE TO COMPRESSOR CONTACTOR (CC1).
4. REMOVE J3 AT (CC1) TO INSTALL LOW AMBIENT ACCESSORY.
5. IF REQUIRED, ATTACH CRANKCASE HEATER ACCESSORY TO CC1 (L1) AND CC1 (L2).
6. COMPRESSOR MOTOR THERMALLY PROTECTED. ALL 3 PHASE MODELS ARE PROTECTED UNDER PRIMARY SINGLE PHASE CONDITIONS.
7. TRANSFORMER FACTORY WIRED AS SHOWN BELOW. CHANGE PRIMARY VOLTAGE CONNECTIONS FOR ALTERNATE VOLTAGES, IF REQUIRED.

UNIT VOLTAGES - HZ	TRANSFORMER TERM.
200-220 - 50HZ	200
208 - 60HZ	230
230 - 60HZ	230
380 - 60HZ	400
380-415 - 50HZ	400
460 - 60HZ	460
575 - 60HZ	230

8. LOW VOLTAGE CIRCUIT IS N.E.C. CLASS 2 WITH A CLASS 2 TRANSFORMER, 24VAC, 50/60 HZ SUPPLIED.
9. MOTOR FACTORY WIRED FOR CORRECT VOLTAGE.
10. REMOVE PL24 FOR ECONOMIZER ACCESSORY. PL22 AND PL24 LOCATED IN RETURN AIR SECTION.

COMPONENT CODES

BR	BLOWER RELAY
CA	COMFORT ALERT MODULE
CC	COMPRESSOR CONTACTOR
CCH	CRANKCASE HEATER
CDS	CLOGGED DRAIN SENSOR
CFS	CLOGGED FILTER SWITCH
COMP	COMPRESSOR
CT	CONTROL TRANSFORMER
DAT	DISCHARGE AIR SENSOR
DISC	DISCONNECT SWITCH
FLMS	FLAME SENSOR
FP	FAN PROVING
FS	FREEZE SENSOR
GFCO	GROUND FAULT CONVENIENCE OUTLET
GL	GROUND LUG
GND	GROUND
GV	GAS VALVE
HPC	HIGH PRESSURE CONTROL
IBM	INDOOR BLOWER MOTOR
IDM	INDUCED DRAFT MOTOR
IFC	INTEGRATED FURNACE CONTROL
LAC	LOW AMBIENT CONTROL
LPC	LOW PRESSURE CONTROL
MAS	MIXED AIR SENSOR
MLC	MAIN LIMIT CONTROL
MRLC	MANUAL RESET LIMIT CONTROL
NPC	NEGATIVE PRESSURE SWITCH
OAT	OUTSIDE AIR SENSOR
OFM	OUTDOOR FAN MOTOR
PL	PLUG
PT	POWER TRANSFORMER
RAT	RETURN AIR SENSOR
RC	RUN CAPACITOR
RTU-C	ROOFTOP UNIT CONTROL
SE	SPARK ELECTRODE
UL	UNLOADER SOLENOID
VFD	VARIABLE FREQUENCY DRIVE

WIRE COLOR CODE

BK.....BLACK	G.....GREEN	PR.....PURPLE
BR.....BROWN	GY.....GRAY	R.....RED
BL.....BLUE	O.....ORANGE	W .....WHITE
		Y .....YELLOW

ELECTRICAL WIRING SCHEMATIC

GE DDC 2 STG VFD 090/102/120
208/230/380/460V, 3PH, 60HZ

GE DDC 2 STG 072/090/102
380-415V, 3PH, 50HZ

APPROVED:	CHECKED:	ORIGINAL RELEASE NO.:
MODELED BY: TEW	DATE: 12-06-17	R-1071S126
PART NO.: 90-106178-17		REV: 01

In keeping with its policy of continuous progress and product improvement, Rheem reserves the right to make changes without notice.

Rheem Heating, Cooling & Water Heating • P.O. Box 17010
Fort Smith, Arkansas 72917 • www.rheem.com

Rheem Canada Ltd./Ltée • 125 Edgeware Road, Unit 1
Brampton, Ontario L6Y 0P5