INSTALLATION INSTRUCTIONS

(-)XRX-AAD01L LOUVER PANEL KIT

For -JNL/-KNL/-LNL-B180/240/300

⚠ WARNING

THESE INSTRUCTIONS ARE INTENDED AS AN AID TO QUALIFIED SERVICE PERSONNEL FOR PROPER INSTALLATION, ADJUSTMENT, AND OPERATION OF THIS KIT. READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING INSTALLATION, ADJUSTMENT, OR OPERATION. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN IMPROPER INSTALLATION, ADJUSTMENT, SERVICE OR MAINTENANCE, POSSIBLY RESULTING IN FIRE, ELECTRICAL SHOCK, PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH.

⚠ WARNING

BEFORE BEGINNING ANY MODIFICATION, BE SURE MAIN DISCONNECT SWITCH IS IN THE "OFF" POSITION. FAILURE TO DO SO CAN CAUSE ELECTRICAL SHOCK RESULTING IN PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH. TAG DISCONNECT WITH A SUITABLE WARNING LABEL.

PARTS LIST

DESCRIPTION	PART NUMBER	QUANTITY
LEFT LOUVER PANEL ASSEMBLY	AS-90789-09	1
RIGHT LOUVER PANEL ASSEMBLY	AS-90789-10	1
MOUNTING SCREWS	63-22159-07	24

REQUIRED TOOLS

- ► Knife or box cutter to open packaging.
- ► 5/16" nut driver.
- ► Scratch awl to aide screw hole alignment.


LOUVER PANEL INSTALLATION PROCEDURE

A. Remove louver panels and screw packet from carton. Note that self-drilling screws are provided to allow easier installation on products originally manufactured without screw holes in the coil corner posts and top rail.

B. Facing the unit outdoor coil, position the left louver panel first and insert several screws to hold it in position.

C. Position the right louver panel. Note that it overlaps the left louver panel at the center of the coil.

D. Secure the center of both louver panels to each other, the unit corner posts, and the top rail, aligning all 24 holes as required. See illustration. It may be helpful to get all the screws started before fully tightening them.

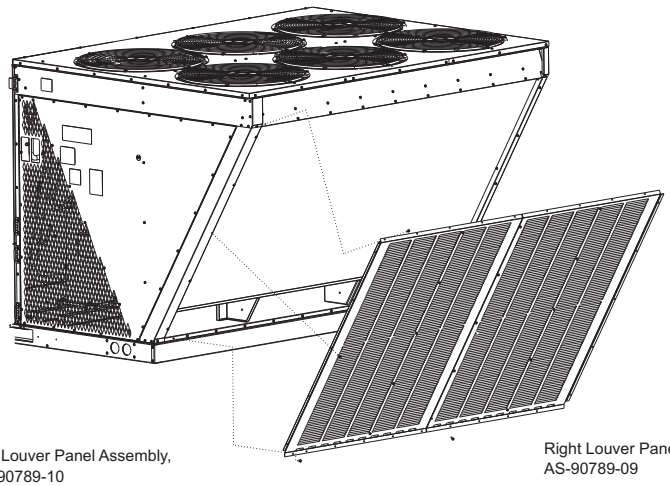

Left Louver Panel Assembly, AS-90789-10

Right Louver Panel Assembly, AS-90789-09