RXHF-A7

FILTER RACK ACCESSORY
FOR
HOT WATER AND STEAM COIL ACCESSORY
DUCT COIL ACCESSORY
AIR CONDITIONING AND HEAT PUMP AIR HANDLER

WARNING: THIS ACCESSORY IS INTENDED TO BE INSTALLED BY A QUALIFIED, LICENSED SERVICE PERSON. TO AVOID UNSATISFACTORY OPERATION OR DAMAGE TO THE ACCESSORY AND POSSIBLE UNSAFE CONDITIONS. INCLUDING ELECTRICAL SHOCK, REFRIGERANT LEAKS, AND FIRE, THESE INSTRUCTIONS MUST BE STRICTLY FOLLOWED AND THE PARTS SUPPLIED USED WITHOUTSUBSTITUTION. DAMAGE TO THEACCESSORY OR PROPERTY RESULTING FROM NOT FOLLOWING THE INSTRUCTIONS OR USING UNAUTHORIZED PARTS MAY BE EXCLUDED FROM MANUFACTURERS WARRANTY COVERAGE.

The filter accessory is installed on the entering air side of the hot water and steam coil accessory, the duct coil or the air conditioning or heat pump air handler.

When installing the filter rack in the return air duct of an air handler, the filters in the air handler cabinet should be removed.

Dimensional Data

See Exhibit I.

installation

See Exhibit II.


The filter rack accessory can be connected directly to the hot water/steam coil accessory. When connected to the duct coil or air handler, an intermediate connection is required.

secure filter rack to equipment or duct work and seal with duct tape.

FILTER PRESSURE DROP:

A/C Models Nominal Tons	CFM x 1000								
	2	3	4	5	6	7	8	9	10
7½-10-15 *	.01	.02	03		.07	10	15	—	—	—
20	—	—	—	—	05	06	10	12	16

* 15 and 20 Ton Heal Pump models have the same cabinet dimensions and use the larger (item 2) Filter Rack.

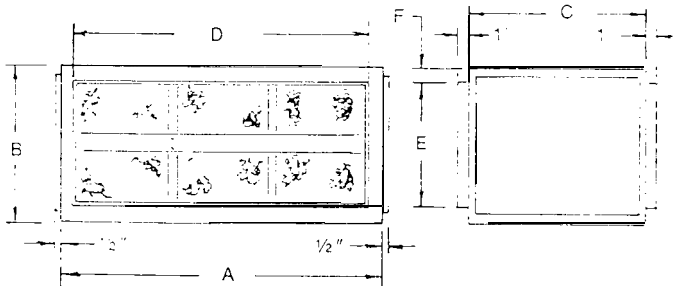

Item	A/C Models (Nom. Tons)	A	B	C	D	E	F
1	7½-10-15 *	51';	24		25⅛	47⅜	19⅞	2'15
2	20	59':	34½	27	55½	30'½	2

* 15 and 20 Ton Heat Pump models have the same cabinet dimensions and use the larger (item 2) Filter Rack.

EXHIBIT I

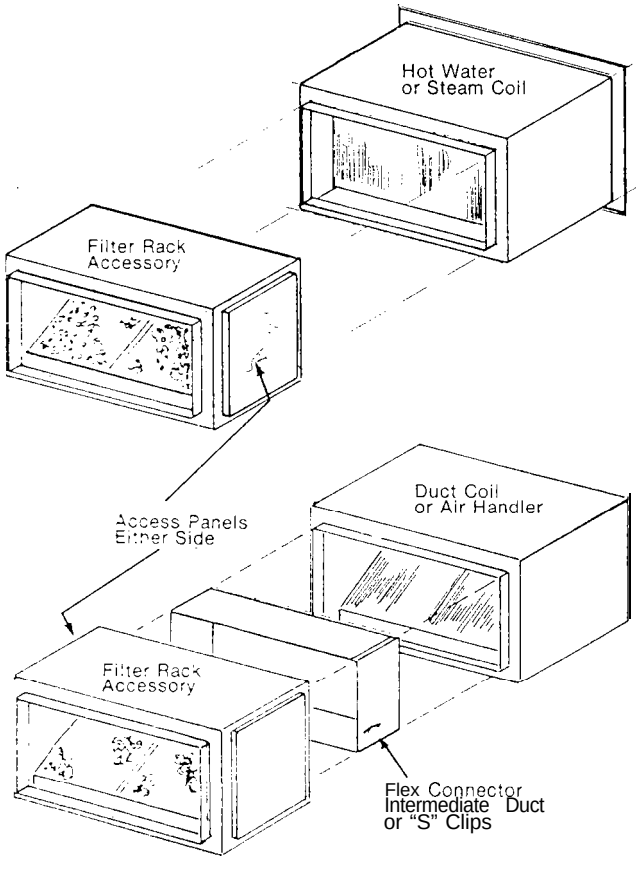


EXHIBIT II

92-41601-01-01
SUPERSEDES 92-41601-01-00