INSTALLATION INSTRUCTIONS
MODEL RXMC-DD01
CONCENTRIC CURB TRANSITION

The Concentric Curb Transition is designed to drop into the curb and convert the square duct unit connections to round duct. For use with both RXKG-DD14 and RXKG-DD24 roof curbs.

RXMC	RETURN	SUPPLY
DD01	20” ROUND	20” ROUND

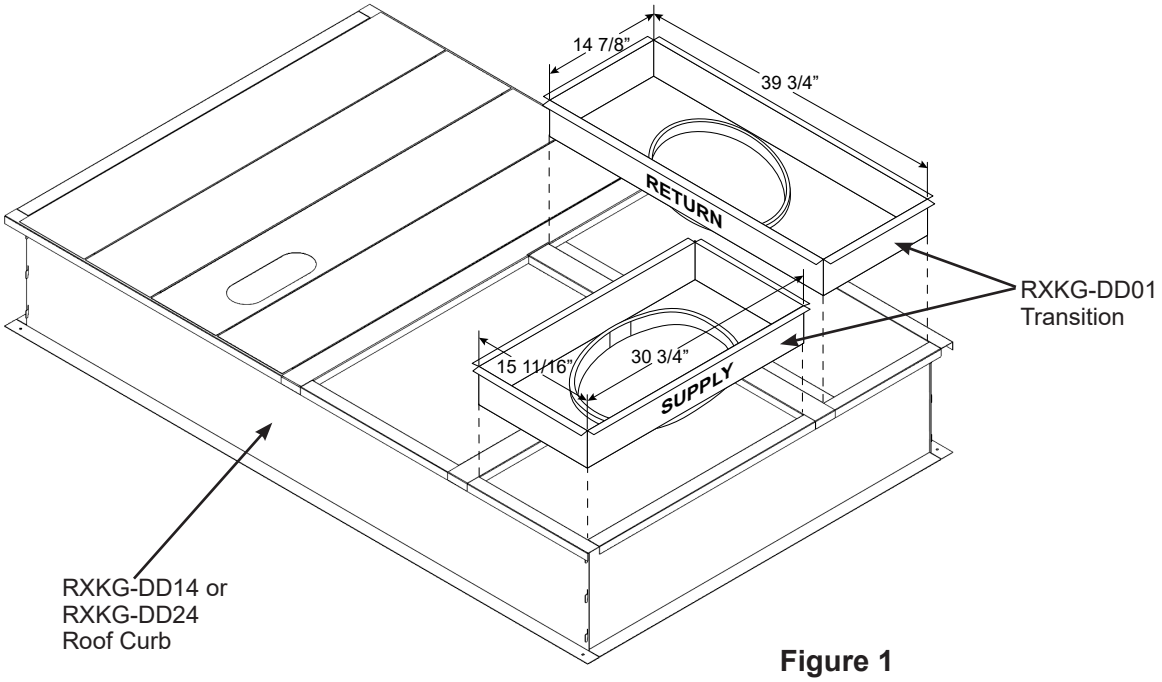


Figure 1

STEP 1:

Immediately upon receipt the concentric transition package should be checked for transit damage. If damage is detected, it should be noted on the delivery papers and a damage claim filed with the last carrier. Compare concentric transition contents to Figure 1 to note any missing parts.

Step 2:

Assemble curb per the instructions provided. Note: the duct supports will remain in their standard positions for use with this concentric transition package.

Step 3:

Attach duct to concentric transition collars. Secure in place.

Step 4:

Install concentric transitions in the supply and return openings in the curb as shown in Figure 1.

Step 5:

Connect duct to concentric diffuser or other duct system.

STEP 6:

Finish installation of unit per unit instructions.