
ADDENDUM TO INSTALLATION INSTRUCTIONS

FOR RXCP-G21 & -G24 GAS FURNACE DRAIN PAN KITS

For proper installation of this kit, foam tape (PART # AE-57899-34) must be installed on the left and right side of the drain pan. All other installation instructions included with the kit are to be followed.

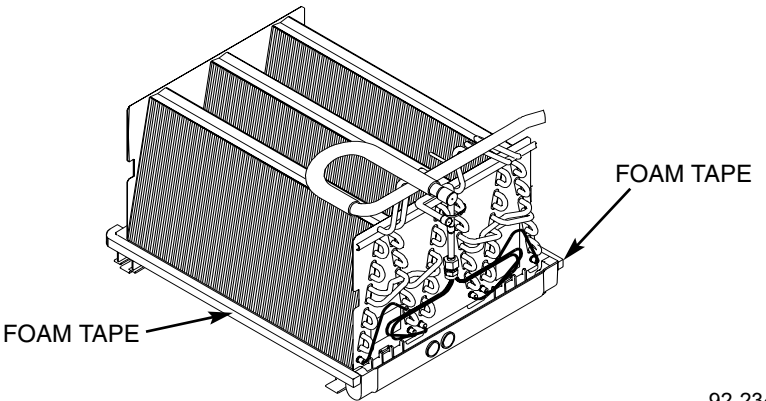

92-23425-60-00