
INSTALLATION INSTRUCTIONS FOR MODEL RXRX-AS01 HORIZONTAL ECONOMIZER ADAPTER


⚠ WARNING

THIS ACCESSORY IS TO BE INSTALLED BY A QUALIFIED, LICENSED SERVICE PERSON. TO AVOID UNSATISFACTORY OPERATION OR DAMAGE TO THE PRODUCT AND POSSIBLE UNSAFE CONDITIONS, INCLUDING ELECTRICAL SHOCK, REFRIGERANT LEAKAGE AND FIRE, THE INSTALLATION INSTRUCTIONS PROVIDED WITH THIS ACCESSORY MUST BE STRICTLY FOLLOWED AND THE PARTS SUPPLIED USED WITHOUT SUBSTITUTION. DAMAGE TO THE PRODUCT RESULTING FROM NOT FOLLOWING THE INSTRUCTIONS OR USING UNAUTHORIZED PARTS MAY BE EXCLUDED FROM THE MANUFACTURER'S WARRANTY COVERAGE.

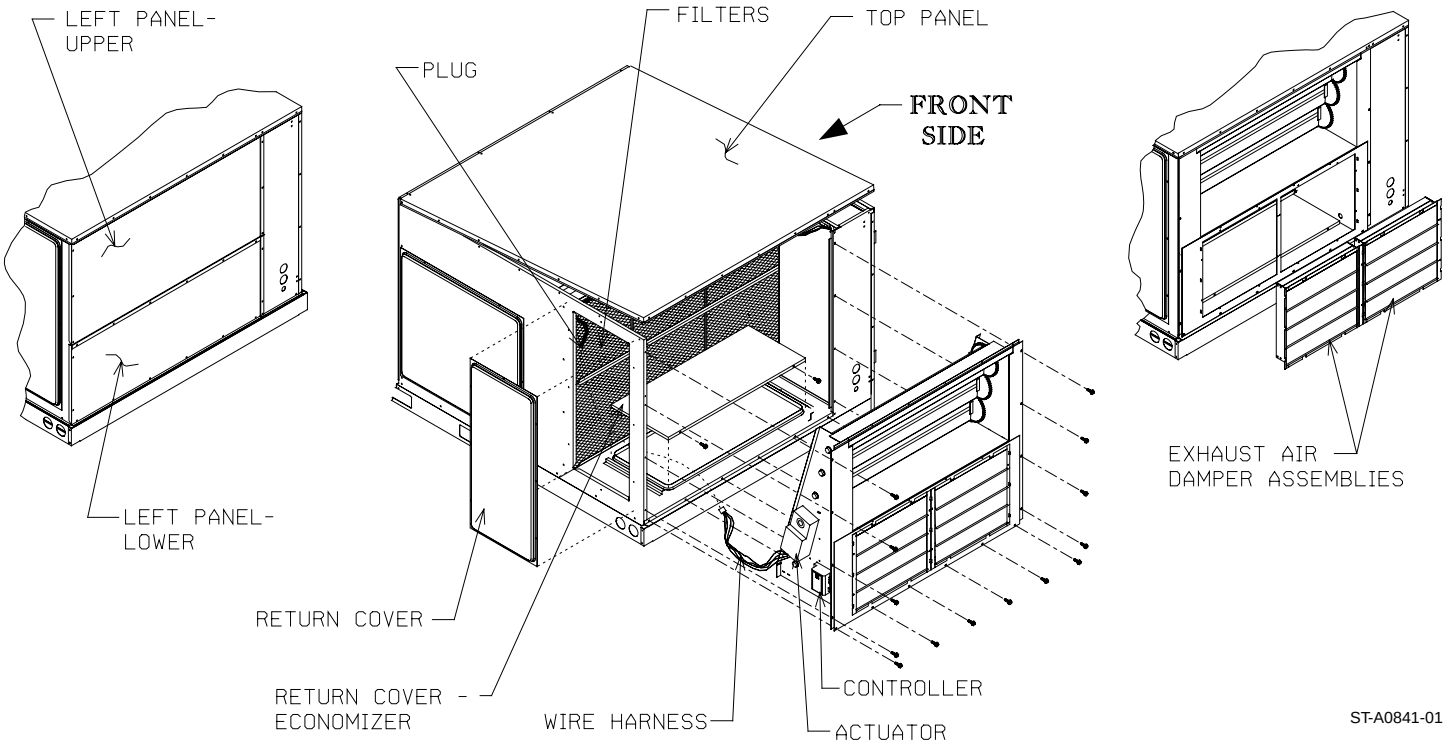

ECONOMIZER INSTALLATION


1. Remove left panel-upper and left panel-lower, and save for reuse.
2. Remove return cover and remove screws from front, left, and rear of top panel.
3. Install return cover - economizer using (2) screws.
4. Lift up top panel and slide in economizer assembly so that economizer top flange is under top panel.
5. Connect actuator wire harness to plug.
6. Replace return cover.
7. Remove exhaust air damper assemblies, and save dampers and screws for reuse.

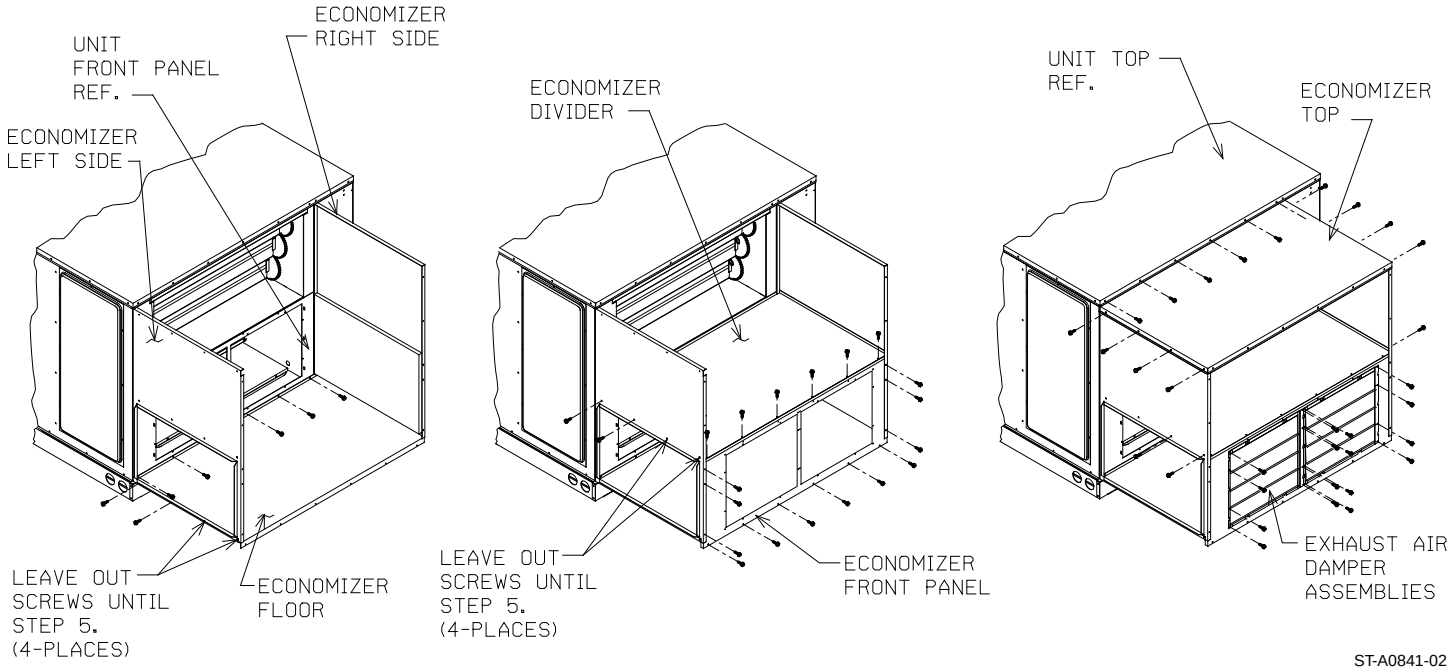

ST-A0841-02


HORIZONTAL ECONOMIZER INSTALLATION INSTRUCTIONS

1. Mount left and right economizer sides as shown using (14) screws.
2. Fasten economizer floor to unit front panel and to last (2) holes in left and right economizer sides.
3. Fasten economizer divider to unit front panel and to last (2) holes in left and right economizer sides.
4. Insert top of economizer front panel under divider and fasten to divider, left and right sides, and floor.
5. Insert (4) screws into left and right sides (8-total).
6. Mount economizer top under unit top and over left and right sides.
7. Fasten exhaust air damper assemblies into openings in economizer front panel using original screws.

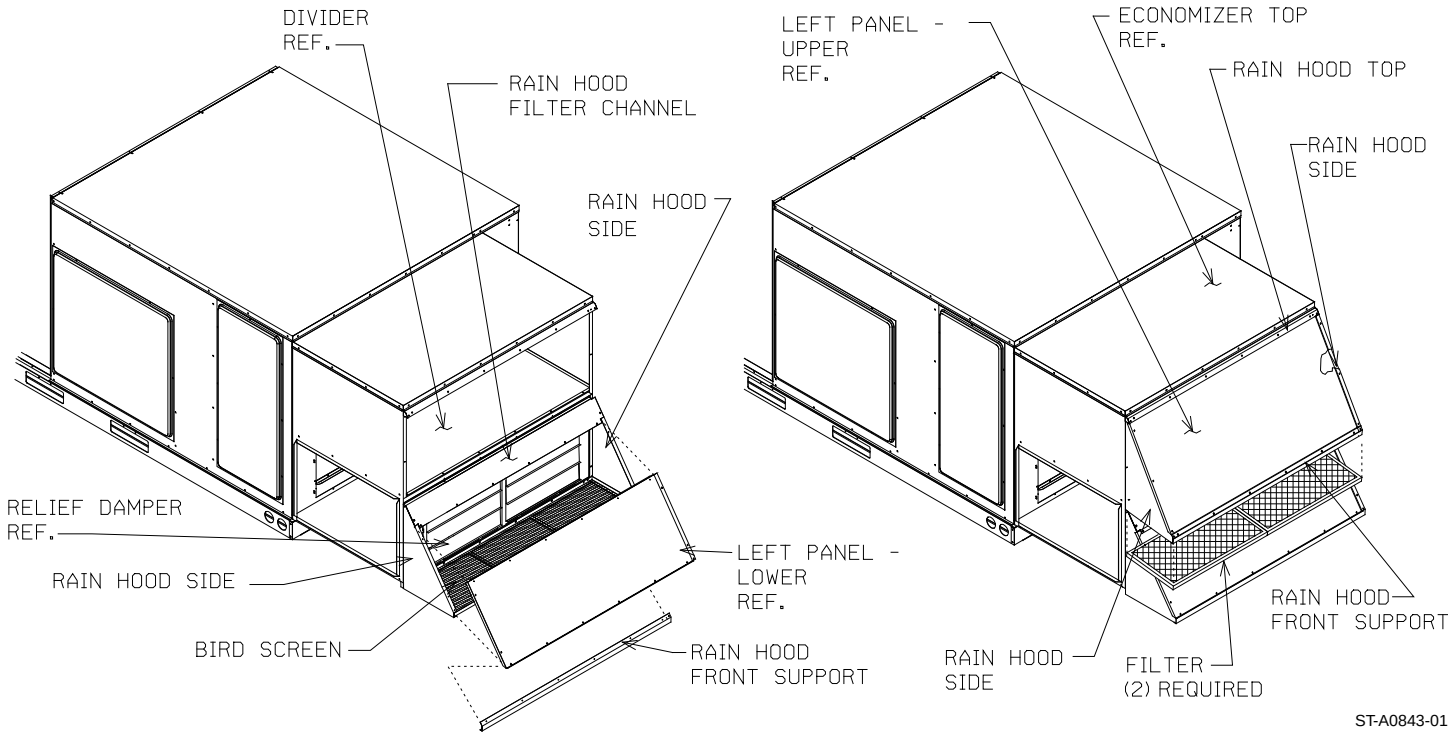

HORIZONTAL ECONOMIZER RAINHOOD INSTALLATION

1. Fasten rain hood filter channel to divider using (4) screws.
2. Position rain hood sides under ends of rain hood filter channel. Fasten with screws (2-required per side).
3. Slide bird screen between rain hood sides and fasten to economizer front panel with (6) screws.
4. Fasten rain hood front support under edge of left panel - lower using (6) screws. Position left panel - lower over rain hood sides and under rain hood filter channel. Fasten with (10) screws.
5. Fasten rain hood top under edge of economizer top using (6) screws.
6. Position rain hood sides under ends of rain hood top and secure with screws (2) required per side.
7. Position left panel - upper over rain hood sides and under rain hood top. Secure with (14) screws.
8. Install filters under left panel - upper. Secure filters by positioning rain hood front support under edge of left panel - upper using (6) screws.

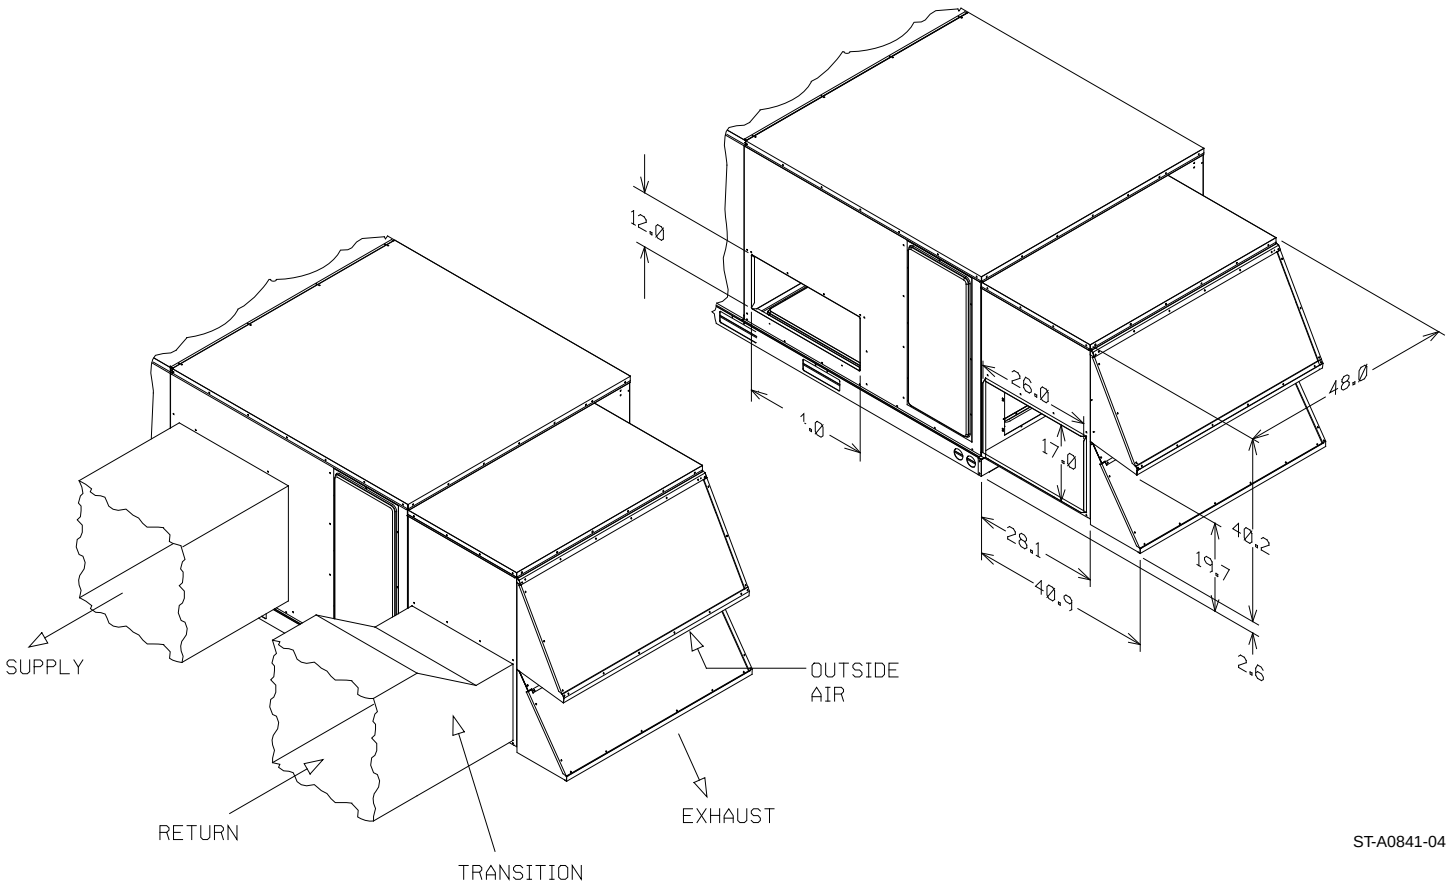

HORIZONTAL ECONOMIZER DUCT INSTALLATION

1. Install supply and return air ducts to unit.
2. Installer to size air ducts for required airflow and provide transition as shown.
3. Installer to check for adequate clearance below exhaust hood for exhaust air to escape.