
NOTE: ALL SWITCHES SHOWN IN COOLING POSITION.


WIRING DIAGRAM

MODEL	FACTORY BLOWER SPEED
3.0 TON	HIGH

NOTE:
BLOWER MOTOR WIRING CONNECTION SHOWN FOR LOW SPEED OPERATION. SEE TABLE AT RIGHT FOR FACTORY SPEED SETTING FOR THIS MODEL. REFER TO BLOWER AIR-FLOW PERFORMANCE CHART IN UNIT INSTALLATION INSTRUCTIONS BEFORE CHANGING FACTORY SPEED SETTING.

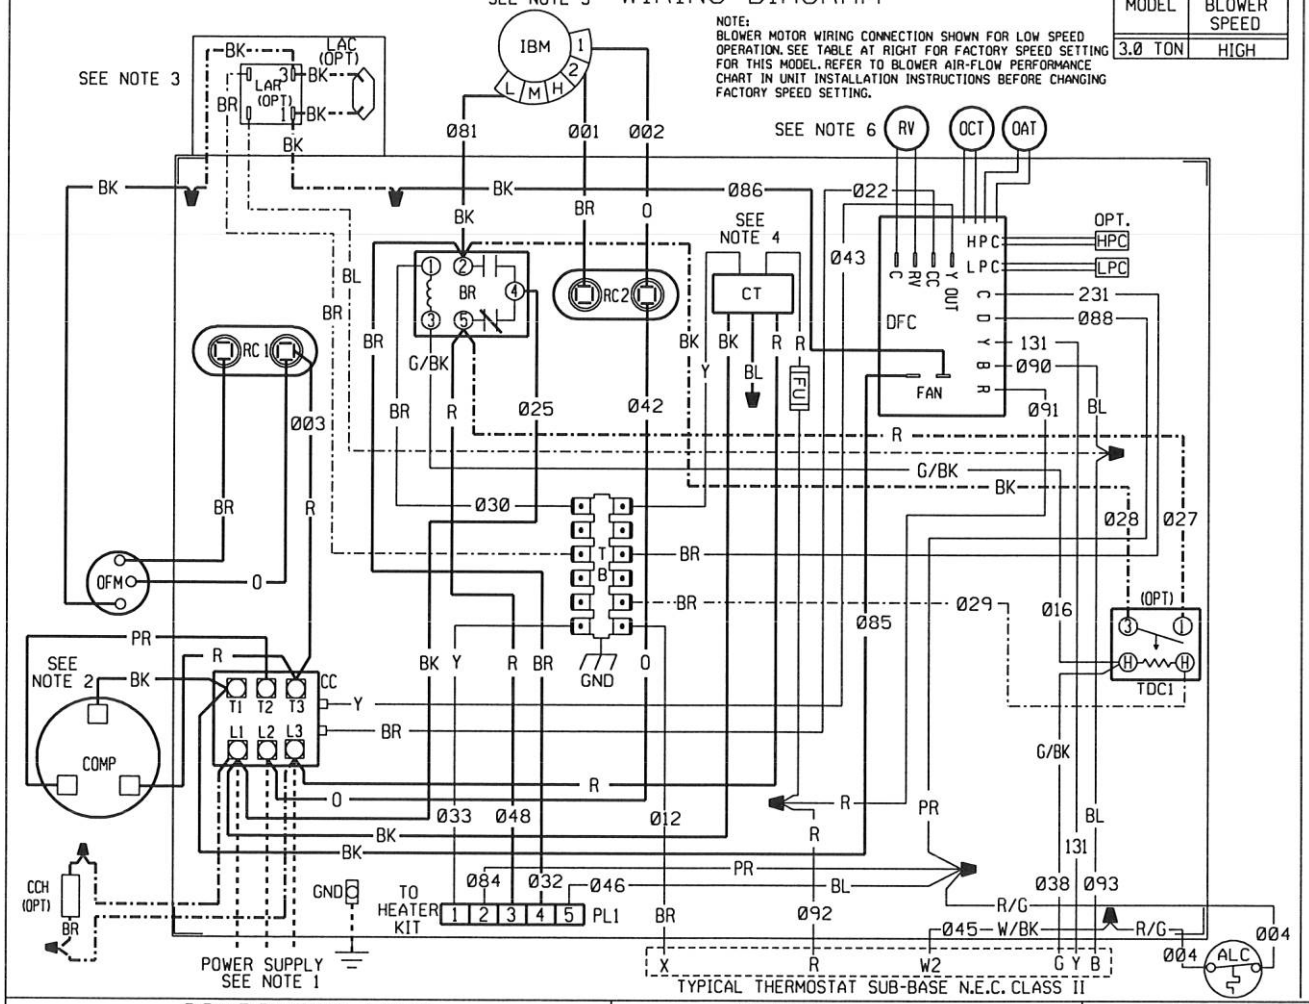

SCHEMATIC DIAGRAM

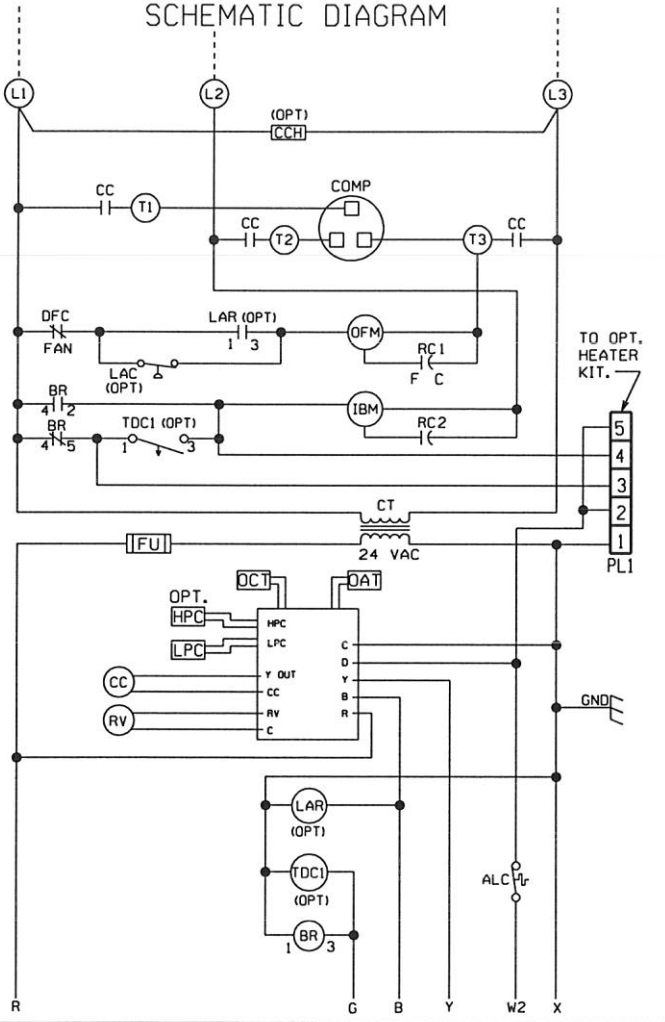

COMPONENT CODE

ALC	AUX. LIMIT CONTROL
BR	BLOWER RELAY
CC	COMPRESSOR CONTACTOR
CCH	CRANKCASE HEATER
COMP	COMPRESSOR
CT	CONTROL TRANSFORMER
DFC	DEFROST CONTROL
FU	FUSE
GND	GROUND
HPC	HIGH PRESSURE CONTROL
IBM	INDOOR BLOWER MOTOR
LAC	LOW AMBIENT COOLING CONTROL
LAR	LOW AMBIENT RELAY
LPC	LOW PRESSURE CONTROL
OAT	OUTDOOR AMBIENT TEMP
OCT	OUTDOOR COIL TEMP
OFM	OUTDOOR FAN MOTOR
OPT	OPTIONAL
PL	PLUG
RC	RUN CAPACITOR
RV	REVERSING VALVE
TB	TERMINAL BLOCK
TDC	TIME DELAY CONTROL
▲	WIRE NUT

NOTES:

1. CONNECTORS SUITABLE FOR USE WITH COPPER CONDUCTORS ONLY.
2. COMPRESSOR MOTOR THERMALLY PROTECTED.
3. IF LAC/LAR IS NOT USED, CONNECT BLACK WIRE FROM OFM TO WIRE NUT FROM DR
4. TRANSFORMER FACTORY WIRED FOR 230 VOLTS. USE RED AND BLUE LEADS FOR 208 VOLTS.
   MOTOR FACTORY WIRED FOR CORRECT SPEED.
5. THIS COMPONENT ENERGIZED IN HEATING.
6. SEE FUSE LABEL ON CONTROL BOX COVER FOR FUSE
7. SIZING AND CLASSIFICATION.

WIRING INFORMATION

LINE VOLTAGE
- -FACTORY STANDARD ——————
- -FACTORY OPTION —·—·—·—·—
- -FIELD INSTALLED - - - - - - -

LOW VOLTAGE
- -FACTORY STANDARD ——————
- -FACTORY OPTION —·—·—·—·—
- -FIELD INSTALLED - - - - - - -

REPLACEMENT WIRE
- -MUST BE THE SAME SIZE AND TYPE OF INSULATION AS ORIGINAL (105 C°MIN.)

WARNING
- -CABINET MUST BE PERMANENTLY GROUNDED AND CONFORM TO I.E.C., N.E.C., C.E.C. AND LOCAL CODES AS APPLICABLE.

WIRE COLOR CODE

BK__BLACK	GY__GRAY	R___RED
BR__BROWN	O___ORANGE	W___WHITE
BL__BLUE	PK__PINK	Y___YELLOW
G___GREEN	PR__PURPLE	

ELECTRICAL WIRING DIAGRAM

PACKAGE HEAT PUMP

3 PH, 208-230 VOLT
PSC INDOOR BLOWER MOTOR

DR. BY	APP. BY	DATE	DWG. NO.	REV
MGR		6-18-10	90-23621-33	01